


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



# PANASONIC MC-5121 Owner's Manual

[Shop genuine replacement parts for PANASONIC  
MC-5121](#)

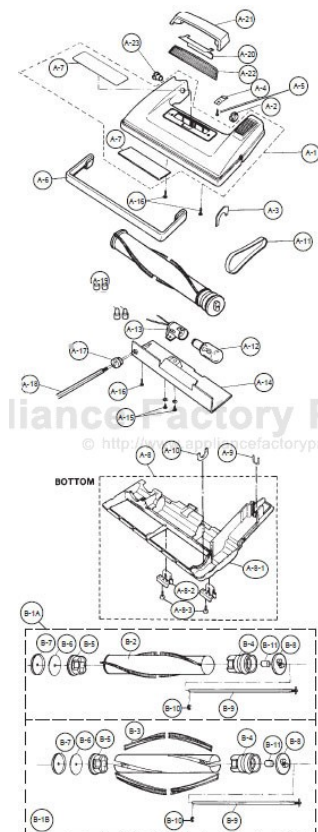

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 665 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for PANASONIC MC-5121

<a href="#">P-77020</a>	Screw.
<a href="#">PR-1015</a>	BELT, FLAT, UPRIGHTS, 1 PACK
<a href="#">PR-2215</a>	Brush Strip, Pair.

# PANASONIC Original & Replacement

Model 5110, 5111, 5115, 5116, 5120, 5121, 5130, 5131

## PARTS LISTING (NOZZLE HOUSING)

KEY	PART NO.	DESCRIPTION
A-1	NLA	Nozzle Housing, 5110/5111
A-1	NLA	Nozzle Housing, 5115/5116
A-1	NLA	Nozzle Housing, 5120/5121
A-1	P-73029	Nozzle Housing, 5130/5131
A-2	P-73905	Plastic Holder
A-3	P-76425	Tight Packing
A-4	P-77205	Pedal Spring
A-5	P-77020	Screw
A-6	NLA	Furniture Guard, 5110/5111/5115/5116/5120/5130
A-6	P-74011	Furniture Guard, 5121/5131
A-7	P-02T-2C00U	Top Mark, 5110/5111
A-7	P-02T-2D00U	Top Mark, 5115/5116
A-7	P-02T-2E00U	Top Mark, 5120/5121
A-7	P-02T-2F00U	Top Mark, 5130/5131
A-8	P-76015	Lower Plate Ass'y
A-8-1	P-76020	Lower Plate
A-8-1	<b>PR-7600</b>	<b>Bottom Plate, Plastic W/Latch</b>
A-8-2	P-76940	Latch
A-8-2	<b>PR-7601</b>	<b>Bottom Plate Clip, Plastic</b>
A-8-3	P-77020	Screw
A-9	P-76315	Belt Cover
A-10	P-76740	Body Packing
A-11	P-MC210B	Belt 2 Pk
A-11	<b>PR-1015</b>	<b>Belt, UB Style</b>
A-12	<b>FA-3500</b>	<b>Bulb, 25 Watt 5130/5131</b>
A-13	P-93H-F800U	Lamp Holder, 5130/5131
A-14	P-85H-V20	Bulb Supporter, 5130/5131
A-15	P-XYN3+C6S	Screw, 5130/5131
A-16	P-77020	Screw, 5130/5131
A-17	P-58E-F70	Wire Bushing, 5130/5131
A-18	P-38G-V200U	Wire Cord, 5130/5131
A-19	<b>SS-3270</b>	<b>Wire Connector, 5130/5131</b>
A-20	P-84H-V20	Reflection Plate, 5130/5131
A-21	P-86H-V20	Reflection Plate Supporter, 5130/5131
A-22	P-21H-V20	Window, 5130/5131
A-23	P-73900	Plastic Shaft

## PARTS LIST (AGITATOR ASSEMBLY)

KEY	PART NO.	DESCRIPTION
B-1A	NLA	Agitator Ass'y, 5110/5111
B-1B	NLA	Agitator Ass'y, 5115-5131, 5217, 5267
B-1B	<b>PR-2000</b>	<b>Brushroll, 12" Metal</b>
B-2	P-84R-V00	Agitator Unit, 5110/5111
B-3	P-22020	Brush (4 Pcs.), 5115-5131
B-3	<b>PR-2215</b>	<b>Brush Strip, Pair</b>
B-4	NLA	Agitator Pulley
B-5	P-20840	Agitator Holder
B-5	<b>PR-2058</b>	<b>Brushroll Holder, W/Bearing</b>
B-6	NLA	Filter
B-6	<b>PR-2066</b>	<b>Filter, Brushroll</b>
B-7	NLA	End Cap (Left)
B-7	<b>PR-2052</b>	<b>End Cap, Non Pulley End Metal</b>
B-8	P-20517	End Cap (Right)
B-9	NLA	Agitator Shaft
B-10	P-77110	E-Clip
B-11	P-74S-V00	Spacer

NLA = NO LONGER AVAILABLE

