


This Owner's Manual is provided and hosted by Appliance Factory Parts.



Shop Vac 970B Owner's Manual

[Shop genuine replacement parts for Shop Vac 970B](#)

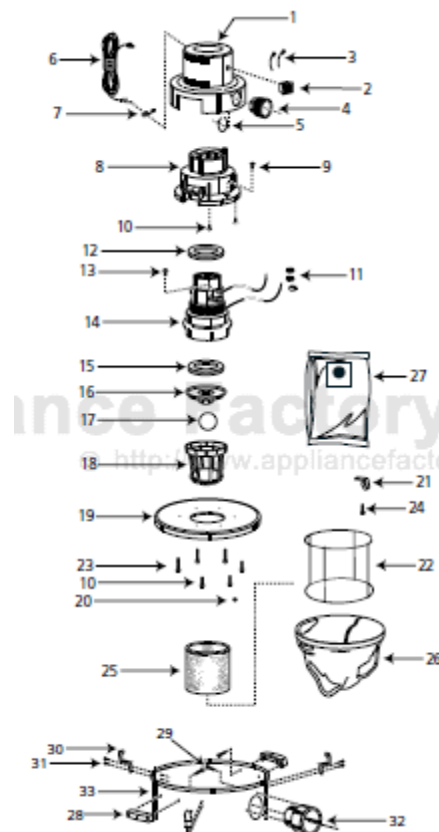


[Find Your Shop Vac Vacuum Cleaner Parts - Select From 487 Models](#)

----- Manual continues below -----

Model 970B



Catalog 970-01-10 (10 Gal.)
 970-02-10 (10 Gal. s/s)
 970-03-10 (20 Gal.)
 970-04-10 (20 Gal.s/s)

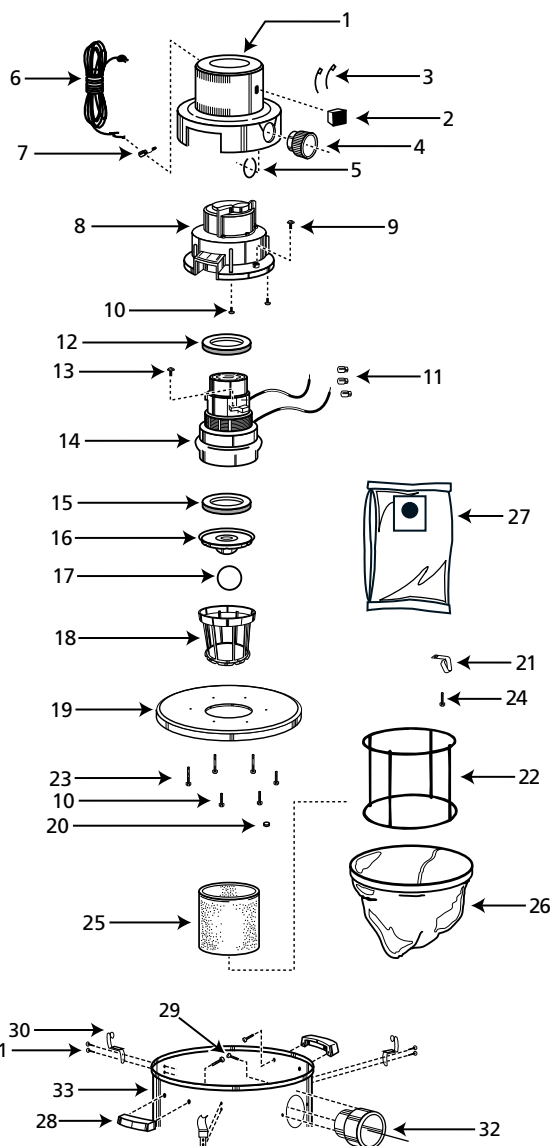

ITEM	DESCRIPTION	PART NO.
1	Motor cover	72000-00-3
2	Switch	82303-04-1
3	Lead wire	12745-96-4
4	Exhaust fitting	84600-00-6
5	Retaining ring	36002-99-6
6	Power cord	04291-96-9
7	Strain relief bushing	34004-99-4
8	Motor housing	72110-00-0
9	#10 - 24 x 5/8", Slotted hex head machine screw	09006-99-0
10	#10 x 1", Slotted hex head machine screw	15084-99-9
11	Wire nut	05001-99-5
12	Upper motor gasket	20700-00-1
13	10-24 x 1/2", Ground screw	17008-99-6
14	Motor	13495-97-3
15	Lower motor gasket	20716-00-7
16	Grid plate	88607-00-7
17	Ball float	00811-00-0
18	Filter cage	87901-00-5
19	Cover (10 gal.) (20 gal.)	89875-11-6 89877-11-2
20	Hex nut, 10-24	13009-99-8
21	Wire cage clip	99384-00-0
22	Full filter frame	30037-00-6
23	#10 x 3" Slotted hex head machine screw	15058-99-3
24	#10 x 1/2", Slotted hex head screw	15047-99-6
25	Foam sleeve	90585-62-1
26	Full super performance cloth filter (10 gal.) (20 gal.)	90638-00-8 90639-00-6
27	High efficiency collection bag (10 gal.) (20 gal.)	91906-10-7 91907-10-5
28	Handle	93551-00-0
29	#10 x 5/8", Slotted hex head machine screw	15054-99-2
30	Tank clamp	01403-00-5
31	Rivet	03002-99-5
32	Inlet fitting	21720-01-6
33	Tank assembly (10 gal.) (10 gal. SS) (20 gal.) (20 gal. SS)	10411-97-2 10412-97-1 10413-97-9 10414-97-7

Limited One-Year Warranty

Shop-Vac Corporation warrants all Industrial, Commercial, and Contractor vacuum cleaners for one year from date of purchase to correct by repair or parts replacement without charge any product defect due to faulty material or workmanship, provided that the vacuum cleaner is not used for rental service.


Standard Accessories:

- 12' (3.66 m) x 1 1/2" (3.81 cm) Hose
- (2) 1 1/2" (3.81 cm) Metal extension wands
- 14" (35.56 cm) Metal master nozzle
- 14" (35.56 cm) Squeegee shoe
- 14" (35.56 cm) Brush shoe
- 14" (35.56 cm) Rug shoe



ITEM	DESCRIPTION	PART NO.
1	Handle (14")-10 gal. (16")-20 gal.	20855-02-9 20855-03-7
2	Handle upright	20856-01-9
3	Handle brace	20857-01-7
4	1/4 - 20 x 1 1/4" Hex head machine screw (Black)	09074-99-8
5	1/4" External tooth lockwasher	23010-99-4
6	1/4 - 20 Hex nut (Black)	13035-99-3
7	Rear dolly frame (14")-10 gal. (16")-20 Gal.	20832-00-2 20837-00-1
8	Main dolly frame (14")-10 Gal. (16")-20 Gal.	20831-00-4 20836-00-3
9	5/16 - 18 x 2 1/2" Hex head bolt	09073-99-0
10	5/16" - Split lockwasher	02005-99-9
11	5/16 - 18 Hex nut	13003-99-1
12	Tank retainer bracket	20853-00-8
13	Threaded knob	23301-00-5
14	Axle (14")-10 Gal. (16")-20 Gal.	24406-00-1 24407-00-9
15	1/4 - 20 x 5/8" Hex head machine screw	09028-99-4
16	1/4 - 20 Hex nut	13001-99-5
17	Caster socket	75400-01-0
18	Caster	67729-00-4
19	Bumper (14")-10 Gal. (16")-20 Gal.	87810-01-6 87811-01-4
20	10" Wheel (25.4cm) Black Gray	24205-00-7 24207-00-3
21	Cap nut	43002-99-7
22	*Metal accessory basket (14")-10 Gal. (16")-20 Gal.	99358-01-2 99358-02-0

*Optional

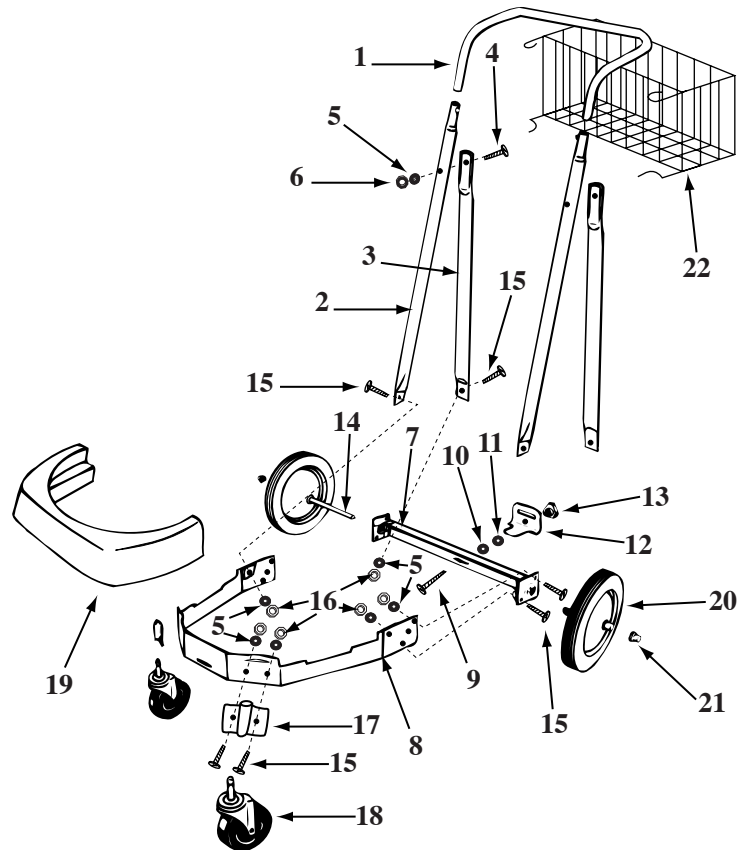

Dolly Assembly Instructions

Tools required:

(2) 1/2 inch open end wrenches, (2) 7/16 inch open end wrenches, or a socket set and a hammer.

1. Insert 2 1/2 inch long bolt through center hole in rear frame, attach split lockwasher nut and tighten securely.
2. Attach handle brace to back of rear frame with 5/8 inch long machine screws, lockwashers, and nuts. (Finger tighten only.)
3. Position main frame inside rear frame. Attach (2) 5/8 inch long machine screws, lockwashers and nuts in both sides. Tighten securely.
4. Attach handle uprights, inside main frame (make sure buttons at top face inward) using 5/8 inch long machine screws, lockwashers and nuts. (Finger tighten only.) Align holes at top of handle braces with holes in handle uprights. Attach with 1 1/4 inch long machine screws, lockwashers and nuts. (Tighten securely.)
5. Go back and tighten machine screws at bottom of uprights and braces.
6. Attach caster sockets (open end down) to front of main frame using 5/8 inch long machine screws, lockwashers and nuts. Insert casters into sockets.
7. Attach handle onto uprights by pushing down and holding buttons in on uprights.
8. Place tank retaining bracket through slot and bolt in rear frame and screw on knob.
9. Slide bumper down over main dolly frame until it bottoms out.
10. Place axle upright on a hard surface and hammer on (1) cap nut. Place (1) wheel on axle and slide down to cap nut. Slide axle through rear of frame and slide on other wheel. Before assembling cap nut on other end of axle, be certain dolly is assembled correctly. (You may place tank on dolly and tighten knob of retaining bracket to be sure of correct assembly.)
11. After ensuring dolly is assembled correctly remove tank and place dolly on side with installed cap nut on hard surface and hammer second cap nut on axle.