

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# Electrolux EL6986A Owner's Manual

 
[Shop genuine replacement parts for Electrolux  
EL6986A](#)



[Find Your Electrolux Vacuum Cleaner Parts - Select From 68 Models](#)




----- Manual continues below -----

PARTS - EL6986A

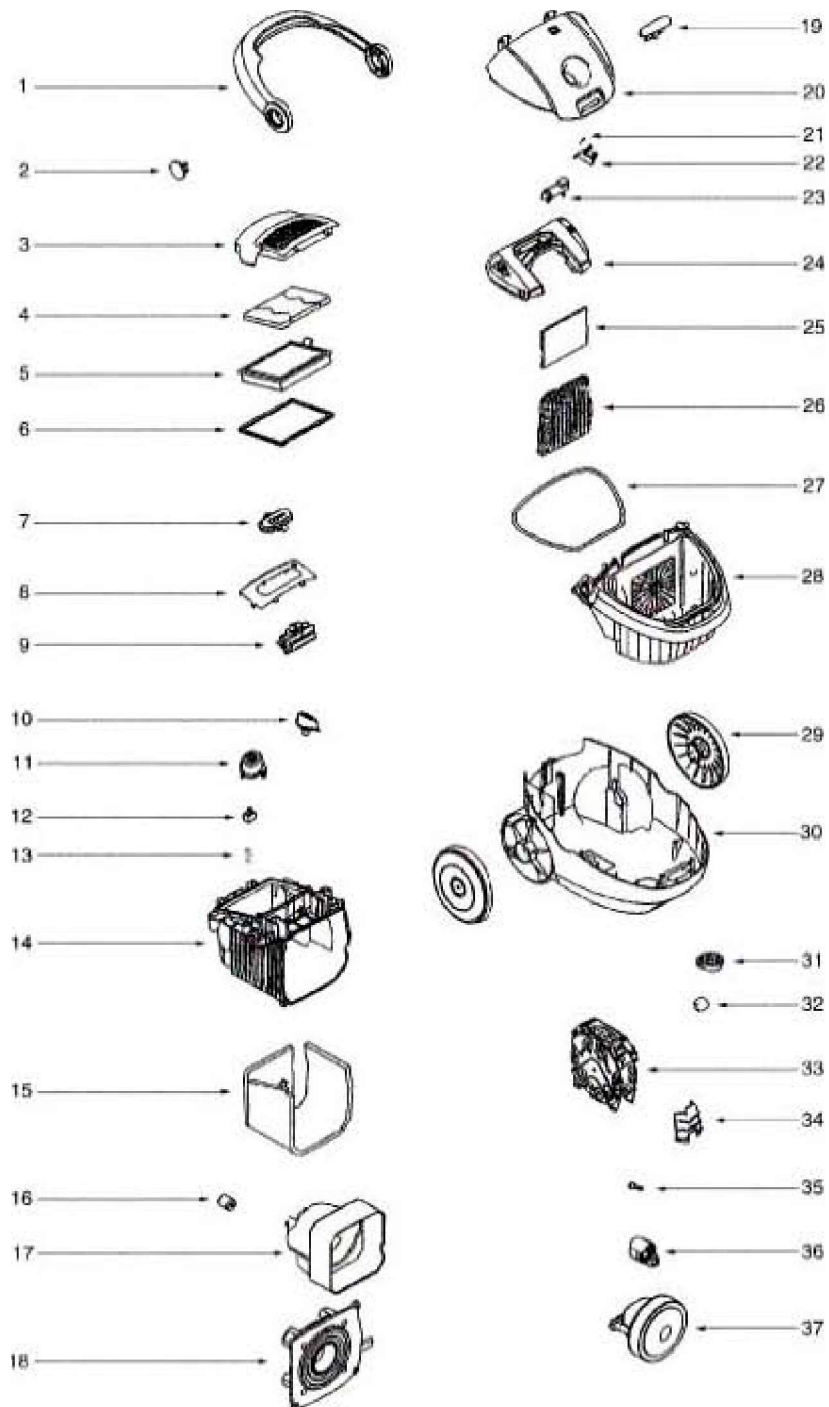

## PARTS - EL6986A

   Ref #	Part	Description	Comments	Qty
1	1130550-01	HANDLE CPL.		
2	1130511-09	PIN - HANDLE		
3	1130509-00	LID - FILTER		
4	1130529-01	ABSORBENT - FILTER LID		
5	1130939-01	FILTER - HEPA H12 NONWASH		
6	2192645-02	GASKET - FILTER		
7	1130512-02	SLIDER		
8	2192971-50	CONTROL PANEL		
9	1131175-51	PCB		
10	1130514-39	PEDAL - ON/OFF		
11	1130513-16	PEDAL - CORD WINDER		
12	1050326-03	SWITCH - POWER		
13	61403-1	SPRING - PKGD	Pkg of 5	
14	1130502-03	HOUSING - MOTOR		
15	1130521-01	ABSORBENT		
16	1050808-01	SUPPORT - MOTOR		
17	1130517-02	HOOD - MOTOR		
18	1130516-01	SEAL - MOTOR		
19	1130527-34	LID - CATCH		
20	2193186-02	LID - FRONT		
21	61415-1	FLAP SPRING - PKGD	Pkg of 5	
22	1130523-02	DEVICE - SAFETY		
23	117966-02	INDICATOR CPL.		
24	1130522-02	HOLDER - DUST BAG		
25	1130535-01	FILTER - MOTOR		
26	1130538-01	HOLDER - MOTOR FILTER		
27	115857-04	SEAL		
28	1130500-07	DUST BAG CONTAINER		
29	1130506-05	WHEEL - REAR		
30	2191360-76	BOTTOM PART CPL.		
31	1096042-03	WHEEL SUPPORT		
32	1129038-01	FRONT WHEEL CPL.		
33	2198341-03	CORDWINDER CPL.		
34	1130526-22	AREA - CABLE RECESS		
35	62109-2	ELECTROLUX SCREW PACKAGE		
36	1130909-01	SUSPENSION - REAR DOM		
37	63160	MOTOR ASSY - PACKAGED		

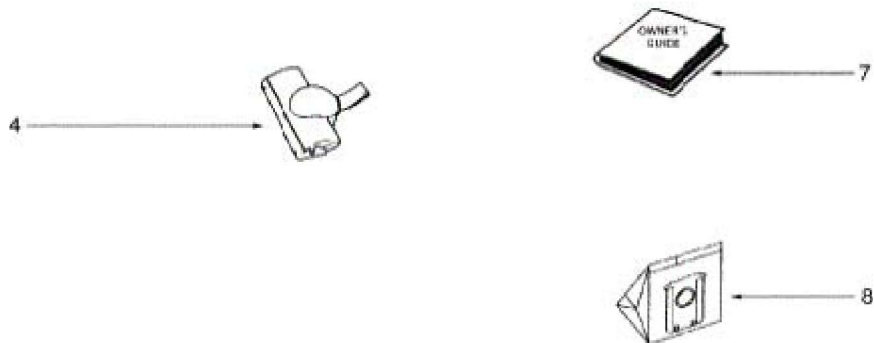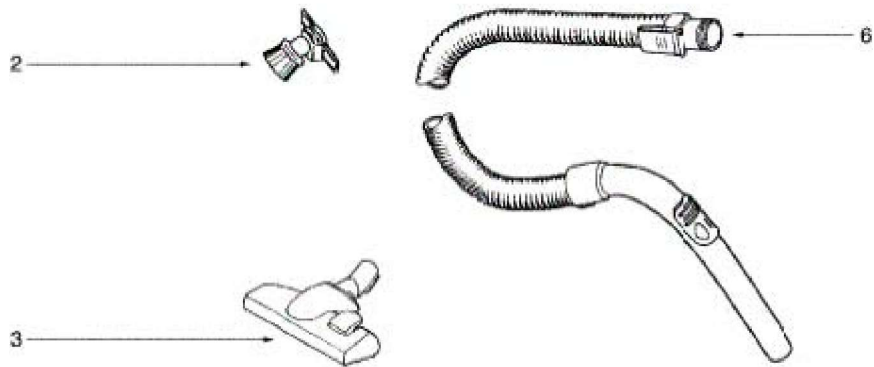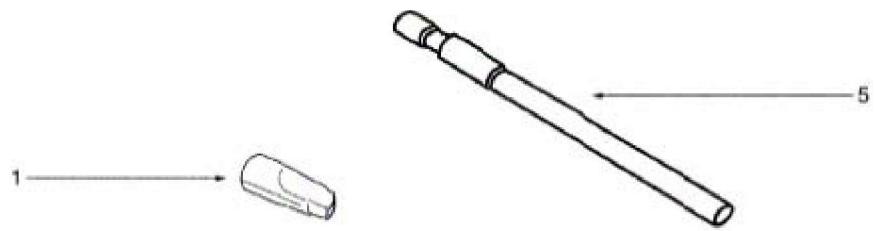

Ref #	Part	Description	Comments	Qty
1	1096534-01	TELESCOPIC CREVICE		
2	1099100-01	COMBO NOZZLE		
3	2190735-06	SIVO NOZZLE		
4	2192334-05	TURBO NOZZLE		
5	1099071-06	TELESCOPIC WAND		
6	39840	HOSE ASSEMBLY		
	2193705-01	HOSE ASSEMBLY		
7	73400	OWNERS GUIDE		
8	15821	Dust Bage		
	SF119262-74	Dust Bag		
	15812	Dust Bag		
	1099183-01	CADDY		