

**Owner's Manual**  
**Manual del Propietario**



**Canister Vacuum Cleaner**  
**Aspiradora**

Model, Modelo 721.21295



ENGLISH

ESPAÑOL

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A  
[www.sears.com](http://www.sears.com)

PART No. : 3828F13763K

Printed in KOREA

## TABLE OF CONTENTS

<b>Before Using Your New Vacuum</b> .....	2	Cleaning Motor Safety Filter .....	11
<b>Kenmore Vacuum Cleaner Warranty</b> .....	2	Cleaning Exterior and Attachments .....	12
<b>Important Safety Instructions</b> .....	3	Storing Your Vacuum .....	12
<b>Parts and Features</b> .....	4	Cleaning Sani-Punch Nozzle .....	13
<b>Assembly</b> .....	5~6	Power-Mate® Care .....	14
<b>Use and Care</b> .....	6	Belt Changing and Brush Cleaning .....	14~15
How Your Vacuum Works .....	6	Brush Servicing .....	16
How to Start Your Vacuum .....	7	Brush Assembly .....	16
Attachments .....	8~9	<b>Trouble Shooting</b> .....	17
Attachments Use Chart .....	9	<b>Parts List</b> .....	18~21
Vacuuming Tips.....	10	<b>Español</b> .....	22
Performance Features.....	10	<b>Service</b> .....	Back Cover
Changing The Dust Bag .....	11		

## BEFORE USING YOUR NEW VACUUM

Please read this guide. It will help you assemble and operate your new Kenmore vacuum in the safest and most effective way.

For more information about the care and operation, call your nearest Sears store.

Your will need the complete model and serial numbers when requesting information.

Your vacuum's model and serial numbers are located on the Model and Serial Number Plate.

Use the space below to record the model number and serial number of your new Kenmore vacuum.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Keep this book and your sales check (receipt) in a safe place for future reference.

## KENMORE VACUUM CLEANER WARRANTY

### FULL ONE-YEAR WARRANTY

When used for private household purposes, if this vacuum cleaner fails due to a defect in material or workmanship within one year from the date of purchase, Sears will repair it free of charge.

For warranty service, **return this vacuum cleaner to the nearest Sears Service Center in The United States.**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Sears, Roebuck and Co., D/817 WA, Hoffman Estates, IL 60179**

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

**Your safety is important to us. To reduce the risk of fire, electrical shock, injury to persons or damage when using your vacuum cleaner, follow basic safety precautions including the following:**

**Read** this manual before assembling or using your vacuum cleaner.

**Use** your cleaner only as described in this manual.

Use only with supplied attachments.

To reduce the risk of electrical shock - **Do not** use outdoors or on wet surfaces.

**Disconnect** electrical supply before servicing or cleaning out brush area. Failure to do so could result in electrical shock or brush suddenly starting.

**Always** turn cleaner off before connecting or disconnecting the hose.

**Always** turn cleaner off before unplugging.

**Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.

**Hold** plug when rewinding onto cord reel.

**Do not** allow plug to whip when rewinding.

**Do not** use with damaged cord or plug. If cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a Sears Service Center.

**Do not** pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run cleaner over cord. Keep cord away from heated surfaces.

**Do not** leave cleaner when plugged in. Unplug from outlet when not in use and before servicing.

**Do not** allow to be used as a toy. Close attention is necessary when used by or near children.

**Do not** handle plug or cleaner with wet hands.

**Do not** operate the cleaner with a punctured hose. Replace if cut or worn. Avoid vacuuming sharp objects.

**Do not** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.

**Keep** hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

**Do not** use cleaner without dust bag and/or filters in place.

**Always** change the dust bag after vacuuming carpet cleaners or freshener, powders and fine dust. These products clog the bag, reduce airflow and can cause the bag to burst. Failure to change bag could cause permanent damage to the cleaner.

**Do not** use the cleaner to pick up sharp hard objects, small toys, pins, paper, etc. They may damage the cleaner or dust bag.

**Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

**Do not** use vacuum cleaner to pick up flammable or combustible liquids (gasoline, cleaning fluids, perfumes, etc.), or use in areas where they may be present. The fumes from these substances can create a fire hazard or explosion.

**Use extra care** when cleaning on stairs. Do not put on chairs, tables, etc. Keep on floor.

**You** are responsible for making sure that your vacuum cleaner is not used by anyone unable to operate it properly.


ENGLISH

## SAVE THESE INSTRUCTIONS


Proper assembly and safe use of your vacuum cleaner are your responsibilities. Your cleaner is intended only for household use. Read this Owner's Manual carefully for important use and safety information. This guide contains safety statements under warning and caution symbols. Please pay special attention to these boxes and follow any instructions given. **WARNING** statements alert you to such dangers as fire, electrical shock, burns and personal injury. **CAUTION** statements alert you to such dangers as personal injury and/or property damage.

## PARTS AND FEATURES

It is important to know your vacuum cleaner's parts and features to assure its proper and safe use. Review these before using your cleaner.

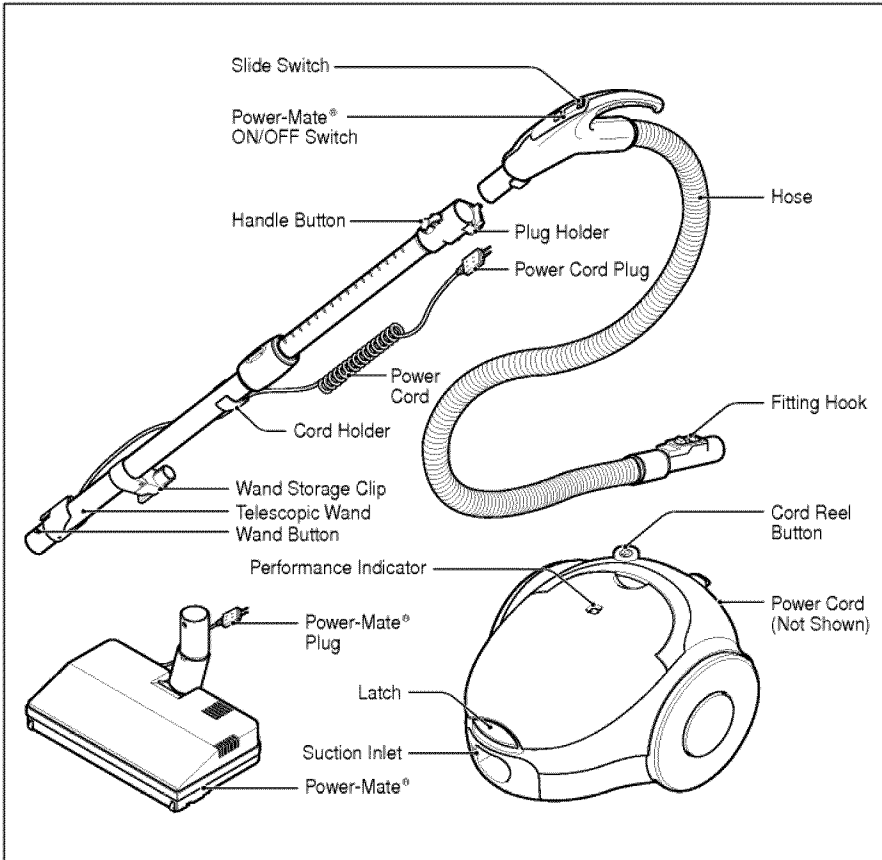

## ATTACHMENTS

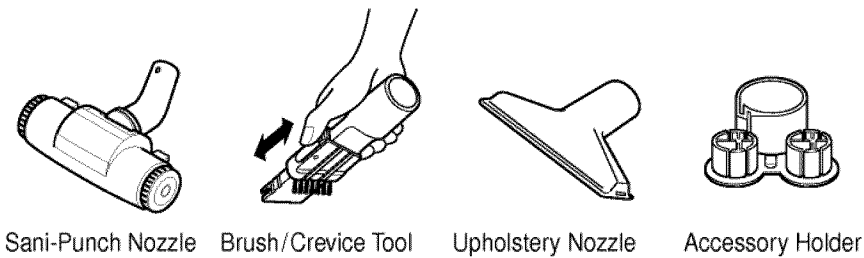


## ASSEMBLY

Before assembling your vacuum cleaner, be sure you have all the parts shown in PARTS AND FEATURES.


### TELESCOPIC WAND

Hold spring latch and pull out or push in wand to required length.

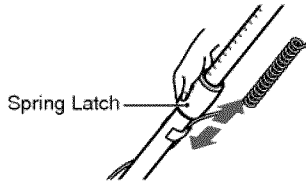


### Power-Mate®


1. Insert wand into Power-Mate® until the wand button snaps into place.

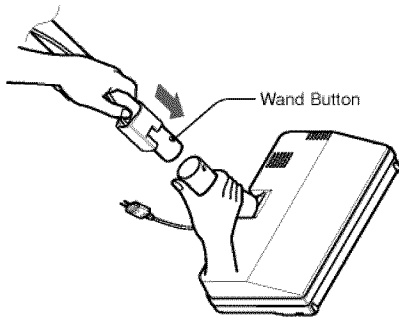

2. Connect Power-Mate® plug to Power Cord as shown. DO NOT force. Raised side of plug must face out.

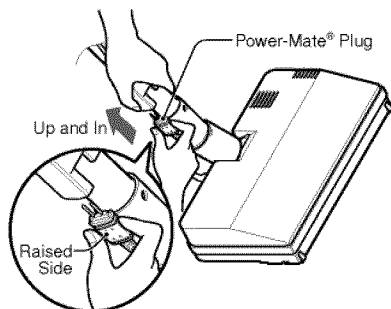


3. Connect Power Cord Plug to top of wand as shown. DO NOT force. Raised side of plug must face out.

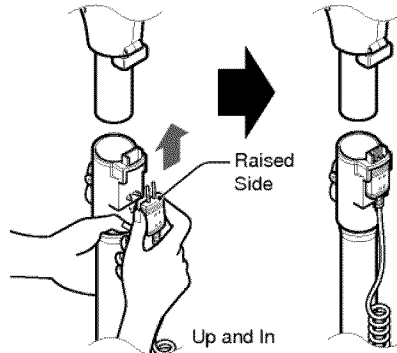

4. Insert handle into wand until handle button snaps into place.

**To remove handle:** Press handle button and pull up on handle.

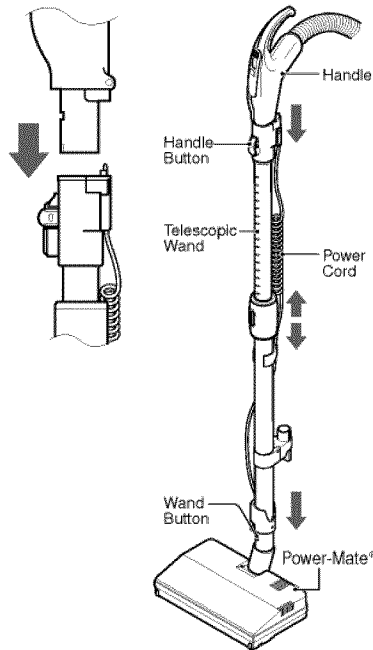


**To Remove Power-Mate®**

1. Steady Power-Mate® with foot.
2. Disconnect Power-Mate® Plug from Power Cord.
3. Press Wand Button and pull up on wand.

ENGLISH

## ATTACHMENTS

Clamp Accessory Holder around Telescopic Wand as shown.

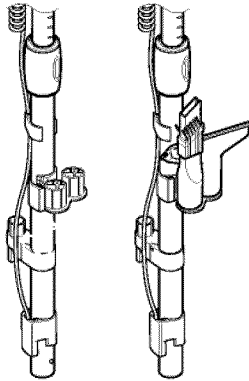


Accessories can be stored in the holder.

## CANISTER


1. Open the canister hood.
2. Check to see that the dust bag is properly installed. See CHANGING THE DUST BAG for instructions.

3. Check to see that the motor safety filter is properly installed. See CLEANING MOTOR SAFETY FILTER for instructions.

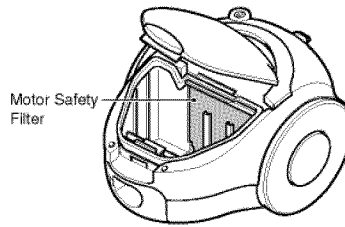

## HOSE


1. Insert hose into canister until it snaps into place. Be sure hose is not twisted.  
To remove hose: Push fitting hook down and pull out.

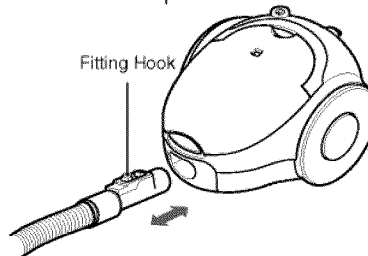

# USE AND CARE

## HOW YOUR VACUUM WORKS

The vacuum cleaner creates suction that picks up dirt. Rapidly moving air carries the dirt to the dust bag through the air flow passages. The dust bag lets the air pass through, while it traps the dirt. For best cleaning results, keep the airflow passage open. Check the starred areas occasionally for clogs. Unplug from outlet before checking.

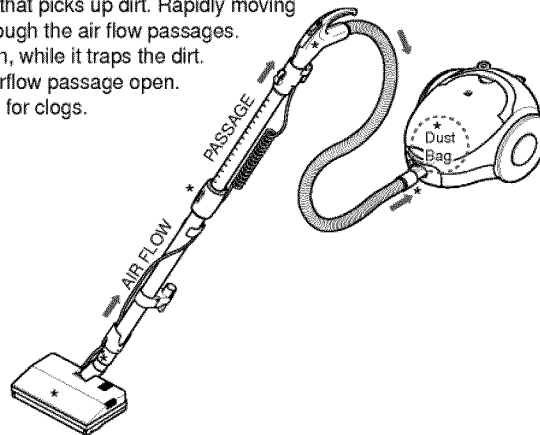

## HOW TO START YOUR VACUUM




### WARNING

Personal Injury and Product Damage Hazard!

- DO NOT plug in if switch is in ON position.
  - Personal injury or product damage could result.
  - The cord moves rapidly when rewinding.
- Keep children away and provide a clear path when rewinding the cord to prevent personal injury.
- DO NOT use outlets above counters. Damage to items in surrounding area could occur.

1. Pull out the power cord to the desired length.

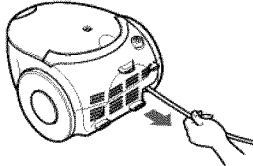


**NOTE:** To reduce the risk of electric shock, this vacuum cleaner has a polarized plug; one blade is wider than the other. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

2. Plug the polarized power cord into a 120 Volt outlet located near the floor.

**To rewind:** Unplug the cleaner. Hold the plug while rewinding to prevent damage or injury from the moving cord. Press on the cord reel button to rewind the cord.


3. To lower Telescopic wand, hold Power-Mate® down with foot and pull back on upper part of Telescopic wand.

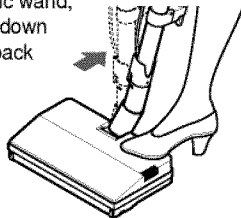


### CAUTION

DO NOT leave the Power-Mate® running in one spot in the upright position for any length of time. Damage to carpet may occur.

4. Push slide switch forward toward MAX for max suction, backward toward MIN for less suction.

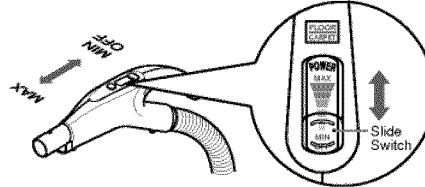

5. To turn on Power-Mate®, press the Power-Mate® ON/OFF switch downward.

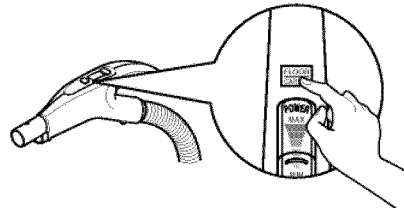

FLOOR  
CARPET

: Power-Mate® ON/OFF switch

**Attention:** Turn on Power-Mate® only when vacuuming. Refer to your carpet manufacturers cleaning recommendations. Some more delicate carpets may require that they be vacuumed with the Power-Mate® agitator turned off, to prevent carpet damage.

ENGLISH

## ATTACHMENTS




### CAUTION

DO NOT attach or remove handle or wands while cleaner is ON, This could cause sparking and damage the electrical contacts.


#### ATTACHMENTS ON HANDLE

**NOTE:** If the Power-Mate® is attached, turn cleaner off before removing handle from Telescopic wand.

1. Press handle button, then pull to remove handle from Telescopic wand.

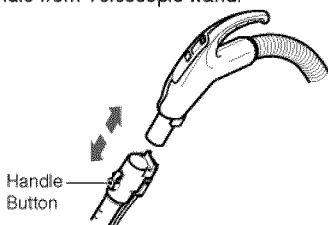


2. Push new attachment tool onto handle.

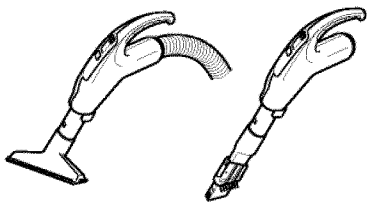

#### ATTACHMENTS ON TELESCOPIC WANDS

The Power-Mate® and Sani-Punch Nozzle have locking holes. The brush/crevice tool and upholstery nozzle do not have locking holes.


1. Steady Power-Mate® with foot.

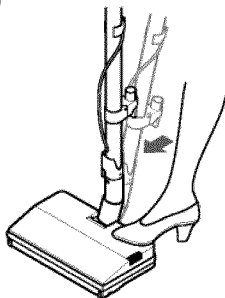


### CAUTION

To prevent tip-over, never leave Power-Mate® ON in the upright position.

2. Remove Power-Mate® plug from holder. Press Wand button, then pull to remove wand from Power-Mate®.

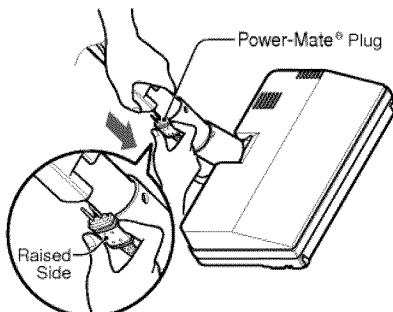

3. Put on attachments as needed. See chart on next page.

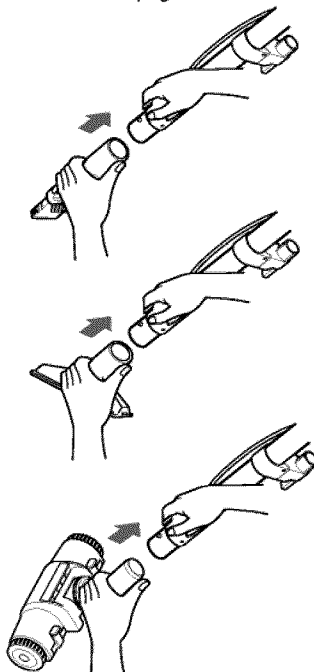



## SANI-PUNCH NOZZLE

This Sani-Punch nozzle is for effective cleaning of mattresses, light blankets, sheets and drapes to remove mites and dust.

### Features

The bottom part of the nozzle can be separated to be cleaned.

Since the bottom does not stick to the surface, vacuuming is easy.


### Use

Set the suction power slide switch to MAX POWER before vacuuming. According to the type of mattresses, handling may be awkward or it may cause a lot of noise. If this is the case, adjust the suction power slide switch to a lower setting.


### Effective Cleaning

Mattresses and Blankets


Apply Sani-Punch nozzle directly to mattress surface.

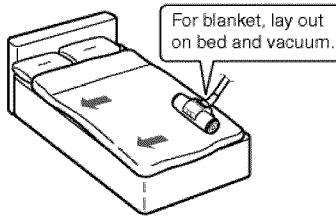

## Blankets and Sheets

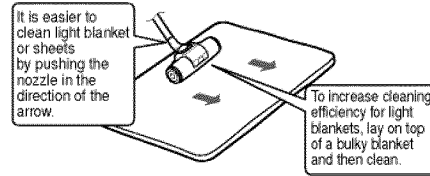

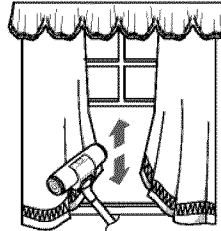



## Drapes



**NOTE:** If the vibration plate does not move, lift the nozzle slightly off the surface. If it does not move even after doing so, check if the suction power is too low or if the nozzle base is clogged with a foreign object.

 ENGLISH

## ATTACHMENT USE CHART

ATTACHMENT	CLEANING AREA						
	Furniture*	Between Cushions*	Drapes*	Mattresses* Blankets*	Bare Floors	Carpeted Floors/Rugs	Walls
BRUSH/ CREVICE TOOL 	X	X	X				X
UPHOLSTERY NOZZLE 	X		X				
Power-Mate® 					X**	X	
SANI-PUNCH NOZZLE 			X	X			

\* Always clean attachments before using on fabrics.

\*\* Power-Mate® ON/OFF switch should be in OFF position.

## VACUUMING TIPS

### Suggested sweeping pattern

For best cleaning action, the Power-Mate® should be pushed straight away from you and pulled straight back.

This pattern should be continued across the rug with slow, gliding motions.

**NOTE:** Fast, jerky strokes do not provide complete cleaning.

**Carpeted stairs** need to be vacuumed regularly. For best cleaning results, put the slide switch on MAX.

**For best cleaning results**, keep the airflow passage open. Check occasionally for clogs. See HOW YOUR VACUUM WORKS section.


**Unplug from outlet before checking.**

## PERFORMANCE FEATURES

### ONE-TOUCH CONTROL

The length of Telescopic wand can be changed by one touch quickly and easily.


Adjust the length of Telescopic wand as shown.

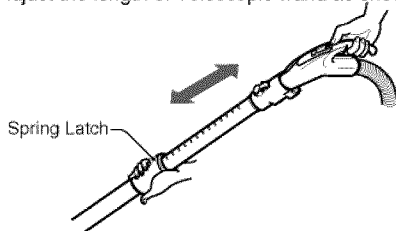

### SUCTION CONTROL

The handle slide switch allows you to change the vacuum suction for different fabric and carpet weights.

Adjust the suction power with slide switch in the handle.

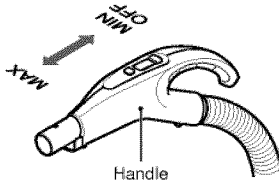

### OVERLOAD PROTECTOR

The Power-Mate® has built-in protection against motor and belt damage should the brush jam.

If the brush slows down or stops, the overload protector shuts off the Power-Mate®.

The canister motor will continue to run.

**To correct problem:** See TROUBLE SHOOTING

**To reset:** Unplug cord from wall outlet and wait 5~10 minutes for motor to cool. Plug cord into wall outlet.




## WARNING

**Personal Injury Hazard**  
**Always unplug the vacuum cleaner before cleaning the brush area as brush may suddenly restart. Failure to do so can result in personal injury.**

### PERFORMANCE INDICATOR

When the unit is running, the indicator windows will be green if there are no clogs.

When the indicator window turns completely red, check if the dust bag is full or if other areas are clogged. See HOW YOUR VACUUM WORKS.

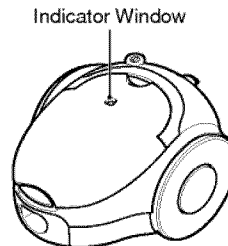


**Note:** Indicator window may turn red when using attachments or when cleaning new carpet. This is due to reduced airflow caused by the vacuum seal between attachment and surface, or new carpet fuzz filling the bag quickly. Restore airflow by raising attachment slightly from surface you are cleaning, or replace bag if it is full.

## CHANGING THE DUST BAG

For best cleaning results, the dust bag should be changed often.


1. Unplug cord from wall outlet.
2. Pull lid release out and up, then lift canister hood.
3. Press back the bag mount latch.

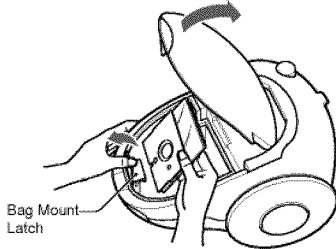

4. Remove the bag and throw it away.

5. To insert new dust bag:

- Press back the bag mount latch.
- Fit bottom edge of bag mount tab onto bag mount ledge.
- Pull bag mount tab flush with suction inlet hole.
- Release bag mount latch over top edge of bag mount tab to secure bag in canister. (Dust Bag No. 20-51195)

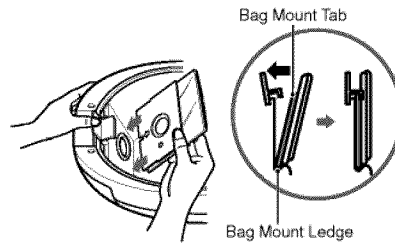

6. Close and latch canister hood.

**NOTE:** The vacuum is fitted with a safety device which prevents you from closing the canister hood if the bag is not fitted correctly.

7. Plug cord into wall outlet.



### CAUTION

**NEVER REUSE A DUST BAG.** Very fine materials, such as carpet freshener, face powder, fine dust plaster, soot, new carpet lint, etc., can clog the bag and cause it to burst before it is full. Change bag more often when vacuuming these materials.

ENGLISH

## CLEANING MOTOR SAFETY FILTER




### WARNING

**Electrical Shock Hazard**  
Do not operate the cleaner without the motor safety filter. Be sure the filter is dry and properly installed to prevent motor failure and/or electrical shock.

Check motor safety filter occasionally and clean when dirty.

1. Unplug cord from wall outlet and remove bag.

2. Pull out motor safety filter as shown.

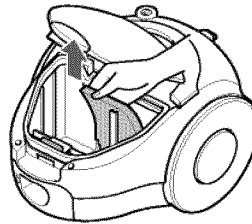

3. Wash filter in warm soapy water, rinse, then dry. **Do not clean in dishwasher or install while damp.**

4. Insert filter back into canister.

5. Insert bag.

## CLEANING EXTERIOR AND ATTACHMENTS

1. Unplug cord from wall outlet. **DO NOT drip water on cleaner.**
2. Clean vacuum exterior using a clean, soft cloth that has been dipped in clean water, then wrung out. Wipe dry after cleaning.

**NOTE:** Regular cleaning helps to reduce static electricity and dust buildup on outer surfaces of cleaner and attachments.




### CAUTION

**DO NOT use attachments if they are wet. Damage to dust bag and motor may occur.**

**Attachments used in dirty areas, such as under a refrigerator, should not be used on other surfaces until they are washed since they could leave marks.**



## STORING YOUR VACUUM

When not in use, attach Telescopic wand assembly to canister by inserting wand storage clip into hole in canister body as shown. Store in upright position only.

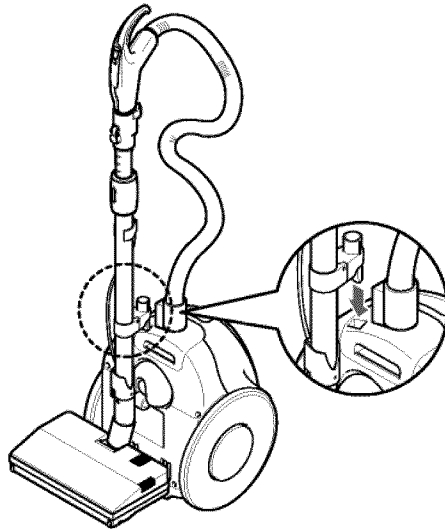


## CLEANING SANI-PUNCH NOZZLE

Use the brush/crevice tool attachment to vacuum clean the Sani-Punch nozzle.

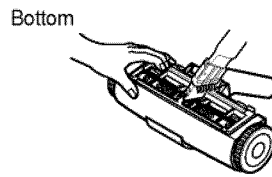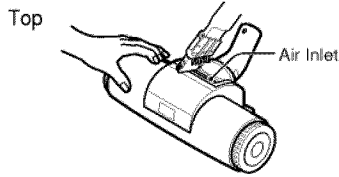


Follow the instructions below for washing the Sani-Punch bottom plate.  
(Do not soak the entire body of the vacuum nozzle in water; it may cause the vibrator to malfunction.)


1. Press the button on the rear side of the vacuum nozzle to separate the bottom plate.

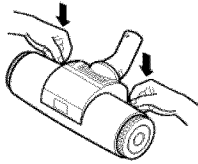

 
2. Wipe all the soiled parts of the vacuum nozzle body with a cloth.




3. Wash the removed bottom plate with water and dry it.

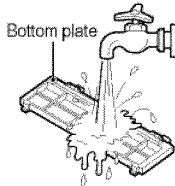


4. Straighten the vibration plate on the lower section.

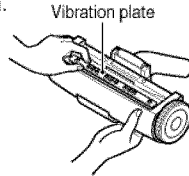

5. Insert the attachment projections on bottom plate into the vacuum nozzle grooves.

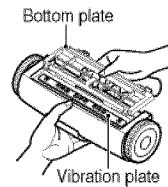

6. Push down the tabs to secure.

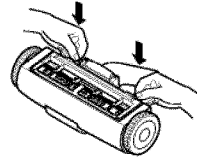

ENGLISH



### CAUTION

Since the vibrator inside the Sani-Punch is composed of precision parts, never disassemble the Sani-Punch body.

Be careful not to let foreign objects clog the air inlet on top of the Sani-Punch nozzle.


Since removal of the vibration plate may cause performance problems, do not warp or remove it.

Attach the bottom plate properly before using. Without this bottom plate, it may not function.

Since this vacuum nozzle has been made exclusively for cleaning mattresses, light blankets, sheets and drapes, use it only for these cleaning purposes. (Using it to clean the floor may result in soiling it or a drop in performance, so do not use it for such purposes.)

## Power-Mate® CARE

Always follow all safety precautions when cleaning and servicing the Power-Mate®.

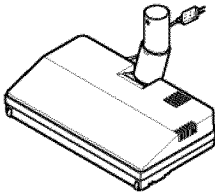

### WARNING


**Electrical Shock or Personal injury Hazard**  
Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.

## BELT CHANGING AND BRUSH CLEANING


Disconnect cleaner from electrical outlet. Check and remove hair, string and lint build-up frequently in the Power-Mate® brush and brush support areas. If build-up becomes excessive, disconnect Power-Mate® from Telescopic wand.

### TO REMOVE BELT:


1. Turn Power-Mate® upside down.
2. Unscrew the four Power-Mate® cover screws.

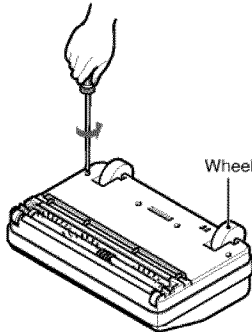


3. Turn Power-Mate® rear side up and tilt cover forward from back until front snaps free.

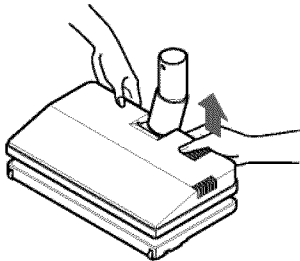


4. Carefully insert and lift screwdriver at each brush support to free brush from base.

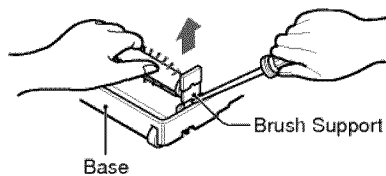

5. Remove worn belt.

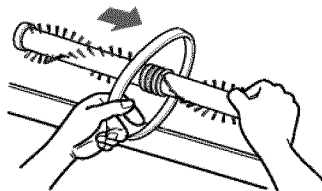


6. Slide brush supports off to check and clean brush support areas. See BRUSH ASSEMBLY for picture of complete brush assembly.

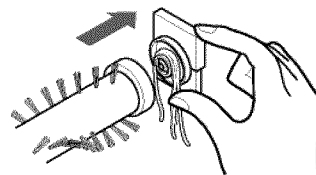


## TO REPLACE BELT:


1. Install brush supports onto brush assembly.

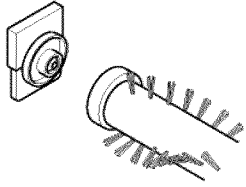


2. Install new belt in belt groove on the brush assembly, then over the motor shaft. Be sure belt is between the belt guards.  
(Belt No.20-81195)

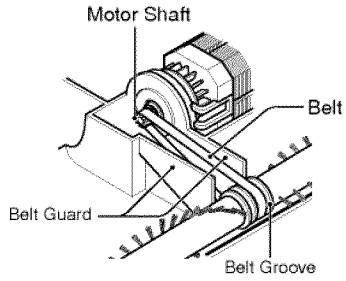


3. Insert each support into its base slots.

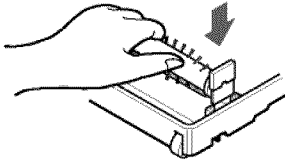

4. Line up tabs on cover with slots inside the base.

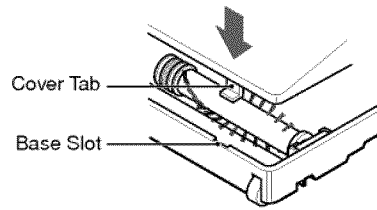

5. Push cover and base together.

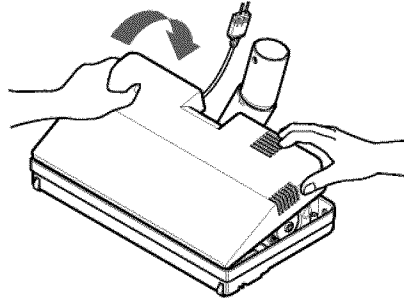

ENGLISH

## BRUSH SERVICING




### WARNING

**Electrical Shock or Personal Injury Hazard**  
Disconnect electrical supply before servicing or cleaning the unit. Failure to do so could result in electrical shock or personal injury from cleaner suddenly starting.

### TO CHECK BRUSH:


When brushes are worn to the level of the base support bar, replace the brush assembly.

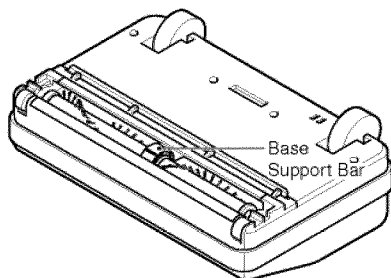

### TO REPLACE BRUSHES:

1. Remove Power-Mate® cover, belt and brush assembly. See "To remove belt" in BELT CHANGING AND BRUSH CLEANING.
2. Remove brush supports from ends of brush assembly.
3. Replace belt, new brush assembly and Power-Mate® cover screws. See "To replace belt" in BELT CHANGING AND BRUSH CLEANING.

## BRUSH ASSEMBLY

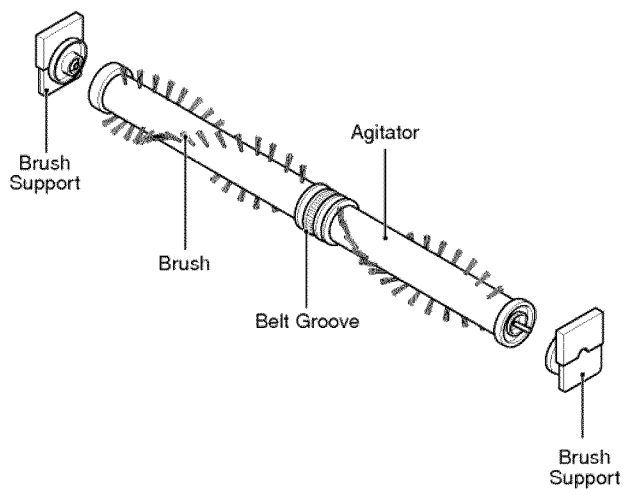



## TROUBLE SHOOTING

Review this chart to find do-it-yourself solutions for minor performance problems. Any other service needed should be performed by a Sears or other qualified service representative.



### **WARNING** Electrical Shock Hazard

**Disconnect electrical supply before servicing or cleaning the unit.  
Failure to do so could result in electrical shock or personal injury.**


PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't start.	<ol style="list-style-type: none"> <li>1. Unplugged at wall outlet.</li> <li>2. Tripped circuit breaker/blown fuse at household service panel.</li> <li>3. Loose hose electrical connections.</li> <li>4. Tripped overload protector in Power-Mate®.</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in firmly, push the handle slide switch (page 7).</li> <li>2. Reset circuit breaker or replace fuse.</li> <li>3. Reconnect hose ends (page 6).</li> <li>4. Clean brush and brush supports (pages 14, 15), then follow instructions on page 10 about overload protector.</li> </ol>
Poor job of dirt pick-up.	<ol style="list-style-type: none"> <li>1. Full or clogged dust bag.</li> <li>2. Clogged airflow passages.</li> <li>3. Dirty filter.</li> <li>4. Slide switch is on MIN.</li> <li>5. Hole in hose.</li> <li>6. Worn Power-Mate® brushes.</li> <li>7. Worn or broken belt.</li> <li>8. Dirty brush or brush supports.</li> <li>9. Canister hood open.</li> </ol>	<ol style="list-style-type: none"> <li>1. Change bag (page 11).</li> <li>2. Clear airflow passages (page 6).</li> <li>3. Change filter (page 11).</li> <li>4. Adjust control (page 7, 10).</li> <li>5. Replace hose.</li> <li>6. Change brushes (page 16).</li> <li>7 &amp; 8. See BELT CHANGING AND BRUSH CLEANING (pages 14, 15).</li> <li>9. Close and latch hood.</li> </ol>
Cleaner starts but cuts off.	<ol style="list-style-type: none"> <li>1. Hose or hood electrical connections.</li> <li>2. Tripped overload protector in Power-Mate®.</li> <li>3. Tripped overload protector in canister.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check connections, reconnect hose ends (page 6).</li> <li>2. Remove any items that may be caught or jammed, then reset. If cleaner starts and stops again, clean brush and brush supports (pages 14, 15), then follow instructions on page 10 about overload protector.</li> <li>3. Change dust bag, clear airflow blockage (page 6). Unplug cord from Wall outlet and wait 20~25 minutes for motor to cool and automatically reset.</li> </ol>
Power-Mate® will not run when attached.	<ol style="list-style-type: none"> <li>1. Power-Mate® connections unplugged.</li> <li>2. Worn or broken belt.</li> <li>3. Dirty brush or brush supports.</li> <li>4. Tripped overload protector in Power-Mate®.</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in firmly (page 5).</li> <li>2 &amp; 3. See BELT CHANGING AND BRUSH CLEANING (pages 14, 15).</li> <li>4. Check brush area for excessive lint build-up or jamming. Clean brush and brush supports (pages 14, 15), then follow instructions on page 10 about overload protector.</li> </ol>
Performance indicator, some models, is red.	<ol style="list-style-type: none"> <li>1. Full or clogged dust bag.</li> <li>2. Dirty filter.</li> <li>3. Clogged airflow passage.</li> </ol>	<ol style="list-style-type: none"> <li>1. Change bag (page 11).</li> <li>2. Change filter (page 11).</li> <li>3. Clear blockage from airflow passage (page 6).</li> </ol>
Cleaner picks up movable rugs, or Power-Mate® pushes too hard.	<ol style="list-style-type: none"> <li>1. Suction too strong.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust control (pages 7, 10).</li> </ol>
Power cord won't rewind.	<ol style="list-style-type: none"> <li>1. Dirty power cord.</li> <li>2. Power cord jammed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the power cord.</li> <li>2. Pull out Power cord and rewind.</li> </ol>

ENGLISH

# PARTS LIST

## VACUUM CLEANER PARTS


For Model: 721.21295000

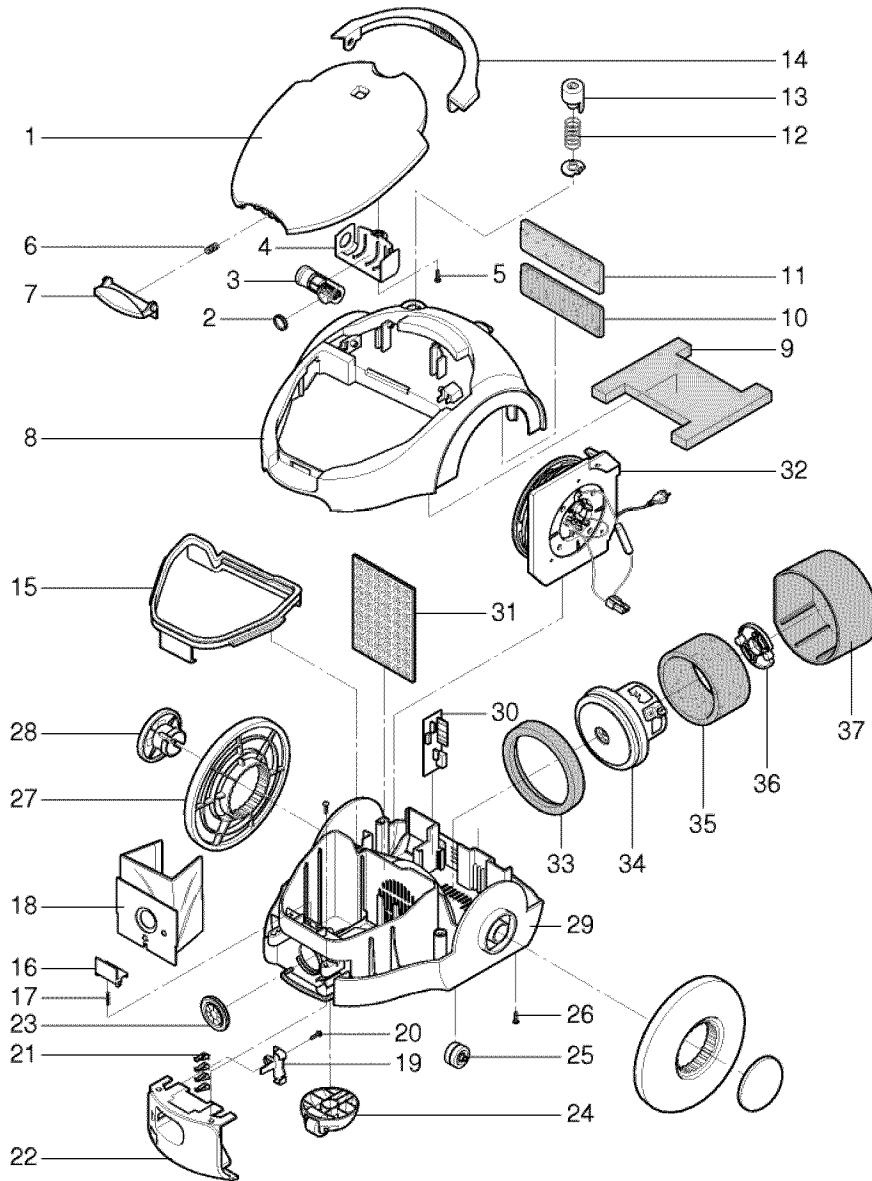

# PARTS LIST

## Power-Mate® PARTS

For Model: 721.21295000

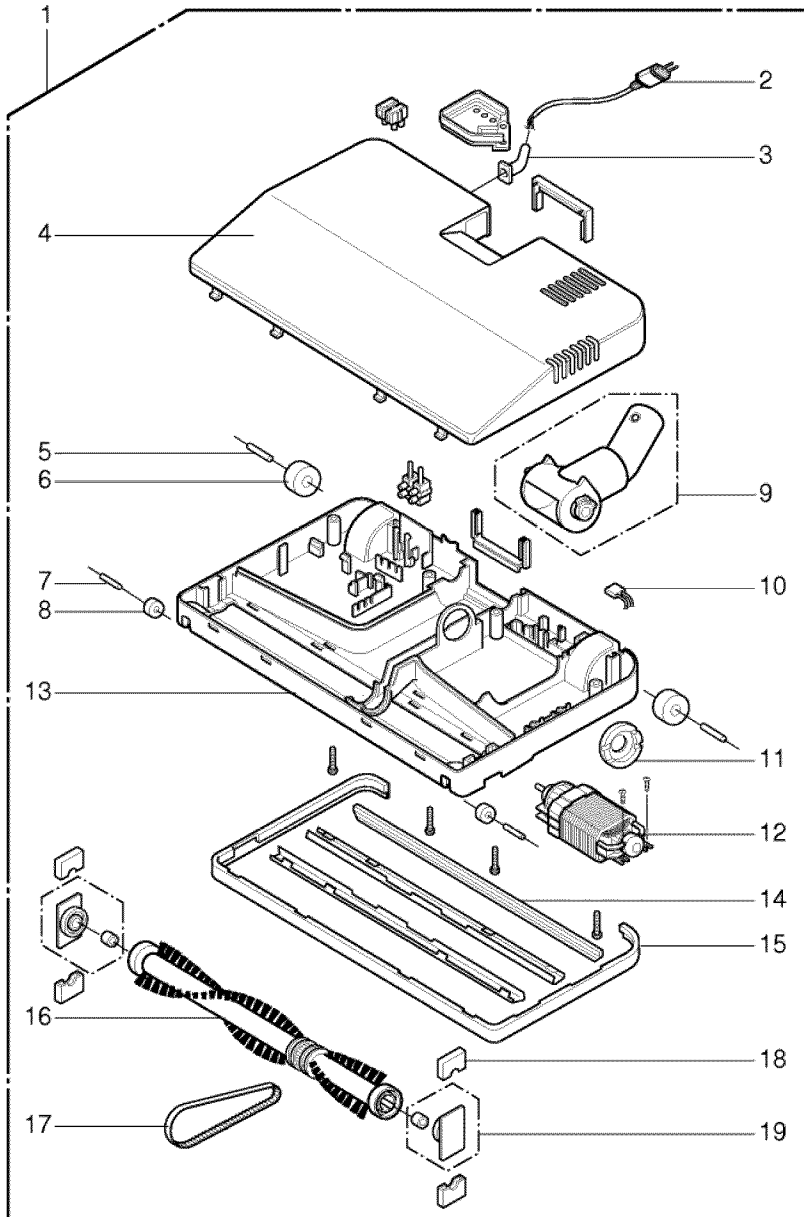

ENGLISH

## PARTS LIST

### VACUUM CLEANER PARTS

For Model: 721.21295000

Illust. No.	Part No.	DESCRIPTION	Illust. No.	Part No.	DESCRIPTION
1	3550FI1551K	Filter Cover	23	4036FI3036A	Terminal Packing
2	4036FI4074A	Indicator Seal	24	4441FI3605J	Caster Ass'y
3	3I23019L	Indicator	25	4I22017F	Roller
4	3550FI3307G	Indicator Cover	26	1TPL0403318	Screw 4*20
5	1TPL0302818	Screw 3*12	27	4660FI1114D	Wheel Body
6	4970FI4260A	Latch Spring	28	4660FI3238N	Wheel Cover
7	4026FI3234A	Latch	29	3040FI1111D	Body Base
8	3070FI1110N	Body Cover	30	6871FX2125A	PWB Ass'y
9	4766FI3251A	Felt	31	5230FI3248A	Motor Safety Filter
10	3940FI3252A	Exhaust Sponge	32	6411FI1071W	Cord Reel
11	5230FI3558A	Exhaust Filter	33	3920FI3600B	Motor Mount Packing
12	4I70024A	Button Spring	34	4687FI2373G	Motor
13	5020FI3233N	Cord Reel Button	35	3940FI3646A	Absorbing Sponge
14	3650FI2132N	Handle	36	4980FI3702A	Motor Supporter
15	3920FI1115A	Dust Seal Packing	37	5040FI2449A	Sound Rubber
16	3I23004B	Filter Setting Hook	<b>Following Parts Not Illustrated</b>		
17	4I23017A	Filter Setting Hook Spring	3828FI3763K	Manual, Owner's	
18	20-51195	Dust Bag	* 20-51195	Dust Bag	
19	3I23009R	Terminal Supporter	* Available At Any Sears Retail or Catalog Store.		
20	1TPL0402818	Screw 4*12			
21	6801FI3256C	Terminal Plate Ass'y			
22	3550FI1113F	Front Cover			

### Power-Mate® PARTS


For Model: 721.21295000

Illust. No.	Part No.	DESCRIPTION	Illust. No.	Part No.	DESCRIPTION
1	5249FI1400A	Power-Mate®	13	3040FI5001A	Base, Nozzle
2	6411FI3298A	Cord Ass'y, Power	14	5882FI5001A	Sweeper, Agitator
3	3740FI4259A	Protector, Cord	15	4820FI5001A	Bumper, Nozzle
4	3550FI5001A	Cover, Nozzle	16	5973FI5001A	Agitator
5	4580FI5001B	Pin, Rear Roller	17	20-81195	Belt
6	4580FI5003A	Rear Roller, Nozzle	18	4874FI5001A	Supporter, Fixture
7	4580FI5001A	Pin, Front Roller	19	4280FI5001A	Bearing, Head
8	4580FI5002A	Front Roller, Nozzle	<b>Following Parts Not Illustrated</b>		
9	5201FI5001A	Pipe Ass'y, Suction	* 20-81195	Belt	
10	3740FI5001A	Protector, Agitator	* Available At Any Sears Retail or Catalog Store.		
11	3920FI5001A	Packing, Motor			
12	4680FI5001A	Power-Mate® Motor			

# PARTS LIST

## HOSE AND ATTACHMENTS PARTS

For Model: 721.21295000

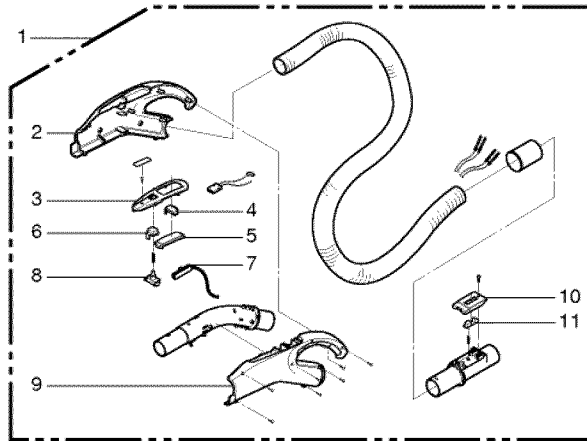

ENGLISH

Illust. No.	Part No.	DESCRIPTION	Illust. No.	Part No.	DESCRIPTION
1	5215F11316A	Hose Ass'y	11	3123013P	Fitting Hook
2	3650F11484A	Grip Handle-R	12	5201F11002A	Telescopic Wand
3	3550F12469A	Grip Handle Cover	13	5248F12259C	Upholstery Nozzle
4	4940F13727A	Control Knob	14	3122005N	Brush/Crevice Tool
5	3500F13619A	Switch Board	15	4930F12378B	Accessory Holder
6	5020F13765A	Button	16	5249F11395J	Sani-Punch Nozzle
7	6601F13486M	Slide Switch Ass'y			
8	6601F13472A	Switch Ass'y			
9	3650F11483A	Grip Handle-L			
10	3550F12501A	Fitting Pipe Cover			