



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC NN-S542BF. You'll find the answers to all your questions on the PANASONIC NN-S542BF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
User manual PANASONIC NN-S542BF  
User guide PANASONIC NN-S542BF  
Operating instructions PANASONIC NN-S542BF  
Instructions for use PANASONIC NN-S542BF  
Instruction manual PANASONIC NN-S542BF

**INVERTER**

**Panasonic**

## Operating Instructions Microwave Oven

Models: NN-SD696/SD667/  
SD767/T995/SD967



### Safety Information

Precautions.....	Inside cover
Important Safety Instructions .....	1-3
Installation and Grounding .....	
Instructions .....	3-4
Safety Precautions .....	5-6

### Operation

Control Panel.....	9
Starting to Use Your Oven.....	10
Setting the Clock .....	10
Child Safety Lock .....	10
Function Features.....	11
Selecting Power & Cook Time.....	12
Quick Min Feature .....	12
Keep Warm Feature .....	12
Popcorn Feature.....	13
More/Less Feature .....	13
Inverter Turbo Defrost Feature.....	14
Defrosting Tips & Techniques.....	14-15
Sensor Reheat Feature .....	16
Sensor Cook Feature.....	16
Sensor Cook Chart.....	17-18

### Operation

Microwave Recipes .....	19
Timer Feature (Kitchen Timer/Stand Time/Delay Start).....	20
Microwave Shortcuts.....	21-22
Food Characteristics.....	23
Cooking Techniques .....	23-24
Quick Guide to Operation.....	28

### Maintenance

Care and Cleaning of Your Microwave Oven.....	25
Accessory Purchases.....	25
Before Requesting Service.....	26
Limited Warranty & Customer Service Directory .....	27

### General Information

Cookware Guide.....	7
Oven Components Diagram.....	8
Specifications .....	29-30
User's Record .....	31
Notes .....	32

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.**  
Para instrucciones en español, voltee el libro.

For assistance, please call: 1-800-211-PANA(7262)  
or send e-mail to: consumerproducts@panasonic.com  
or visit us at www.panasonic.com

(U.S.A)

For assistance, please call: 787-750-4300  
or visit us at www.panasonicpr.com

(Puerto Rico)

F00038M30AP  
1Press0307-0  
Printed in China



[You're reading an excerpt. Click here to read official PANASONIC NN-S542BF user guide](http://www.panasonic.com)  
<http://mypdfmanuals.com/dref/205753>

**Manual abstract:**

**SAVE THESE INSTRUCTIONS** For proper use of your oven, read remaining safety cautions and operating instructions. **2 IMPORTANT SAFETY INSTRUCTIONS (continued)** Glass Tray 1. **DO NOT** operate the oven without the Roller Ring and the Glass Tray in place. 2. **DO NOT** operate the oven without the Glass Tray fully engaged on the drive hub. Improper cooking or damage to the oven could result. Verify that the Glass Tray is properly engaged and rotating by observing its rotation when you press Start. Note: The Glass Tray can turn in either direction. 3. Use only the Glass Tray specifically designed for this oven.

**DO NOT** substitute any other glass tray. 4. If the Glass Tray is hot, allow to cool before cleaning or placing in water. 5. **DO NOT** cook directly on the Glass Tray.

Always place food in a microwave safe dish, or on a rack set in a microwave safe dish. 6. If food or a utensil on the Glass Tray touches oven walls causing the tray to stop moving, the tray will automatically rotate in the opposite direction. Roller Ring 1. The Roller Ring and oven floor should be cleaned frequently to prevent excessive noise.

2. Always replace the Roller Ring and the Glass Tray in their proper positions. 3. The Roller Ring must always be used for cooking along with the Glass Tray. **INSTALLATION AND GROUNDING INSTRUCTIONS** Examine Your Oven Unpack oven, remove all packing material and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if oven is damaged. **DO NOT** install if oven is damaged. Placement of Oven 1. The oven must be placed on a flat, stable surface. Place the front surface of the door three inches or more from the counter top edge to avoid accidental tipping of the microwave oven during normal use.

For proper operation, the oven must have sufficient air flow. Allow 3-inches (7.6 cm) of space on both sides of the oven and 1-inch (2.5 cm) of space on top of the oven. (a) **DO NOT** block air vents. If they are blocked during operation, the oven may be overheated and damaged. (b) **DO NOT** place oven near a hot, damp surface such as a gas or electric range, or dishwasher. (c) **DO NOT** operate oven when room humidity is excessive. 2. This oven is manufactured for household use only.

It is not approved or tested for mobile vehicle, marine, or commercial use. Installation 1. **DO NOT** block air vents. If they are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off.

The oven will remain inoperable until it has cooled. 2. If the oven is designed for installation into a wall cabinet by using the proper trim kit available from a local Panasonic dealer, follow all instructions packed with the kit. 3 **INSTALLATION AND GROUNDING INSTRUCTIONS (continued) --IMPROPER USE OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK.** Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a three wire extension cord that has a three prong polarized grounding plug, and a three slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

**WARNING** Grounding Instructions **THIS APPLIANCE MUST BE GROUNDED.** In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. · Plug into properly installed and grounded 3 prong outlet. · **DO NOT** remove ground prong. · **DO NOT** use an adapter. Power Supply 1.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. 2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.



**[You're reading an excerpt. Click here to read official PANASONIC NN-S542BF user guide](http://mypdfmanuals.com/dref/205753)**  
**<http://mypdfmanuals.com/dref/205753>**