

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC NNS542BF Owner's Manual

[Shop genuine replacement parts for PANASONIC
NNS542BF](#)

Panasonic

[Find Your PANASONIC Microwave Parts - Select From 982 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for PANASONIC NNS542BF

14QBP20CFB	Fuse Ceramic 20A
40QBP1012	10 X 12 Cut To Fit
F06014T00AP	TRAY 13.5"
2M261-M32KLP	Magnetron.
F30216P40AG	spring
F290D9330AP	ROLLER
J61415G10XN	DOOR MICROSWITCH



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC NN-S542BF. You'll find the answers to all your questions on the PANASONIC NN-S542BF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC NN-S542BF
User guide PANASONIC NN-S542BF
Operating instructions PANASONIC NN-S542BF
Instructions for use PANASONIC NN-S542BF
Instruction manual PANASONIC NN-S542BF






Operating Instructions
Microwave Oven

Models: NN-SD696/SD667/
SD767/T995/SD967



<p>Safety Information</p> <p>Precautions.....Inside cover</p> <p>Important Safety Instructions1-3</p> <p>Installation and Grounding3-4</p> <p>Instructions3-4</p> <p>Safety Precautions5-6</p> <p>Operation</p> <p>Control Panel.....9</p> <p>Starting to Use Your Oven.....10</p> <p>Setting the Clock10</p> <p>Child Safety Lock10</p> <p>Function Features11</p> <p>Selecting Power & Cook Time12</p> <p>Quick Min Feature12</p> <p>Keep Warm Feature12</p> <p>Popcorn Feature13</p> <p>More/Less Feature13</p> <p>Inverter Turbo Defrost Feature14</p> <p>Defrosting Tips & Techniques14-15</p> <p>Sensor Reheat Feature16</p> <p>Sensor Cook Feature16</p> <p>Sensor Cook Chart17-18</p>	<p>Operation</p> <p>Microwave Recipes19</p> <p>Timer Feature (Kitchen Timer/Stand Time/Delay Start)20</p> <p>Microwave Shortcuts21-22</p> <p>Food Characteristics23</p> <p>Cooking Techniques23-24</p> <p>Quick Guide to Operation28</p> <p>Maintenance</p> <p>Care and Cleaning of Your Microwave Oven25</p> <p>Accessory Purchases25</p> <p>Before Requesting Service26</p> <p>Limited Warranty & Customer Service Directory27</p> <p>General Information</p> <p>Cookware Guide7</p> <p>Oven Components Diagram8</p> <p>Specifications29-30</p> <p>User's Record31</p> <p>Notes32</p>
---	--

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.
Para instrucciones en español, voltee el libro.

For assistance, please call: 1-800-211-PANA(7262) or send e-mail to: consumerproducts@panasonic.com or visit us at www.panasonic.com	(U.S.A)
For assistance, please call: 787-750-4300 or visit us at www.panasonicpr.com	(Puerto Rico)

F00038M30AP
1Press0307-0
Printed in China



[You're reading an excerpt. Click here to read official PANASONIC NN-S542BF user guide](http://mypdfmanuals.com/dref/205753)
<http://mypdfmanuals.com/dref/205753>

Manual abstract:

SAVE THESE INSTRUCTIONS For proper use of your oven, read remaining safety cautions and operating instructions. **2 IMPORTANT SAFETY INSTRUCTIONS (continued) Glass Tray** 1. **DO NOT** operate the oven without the Roller Ring and the Glass Tray in place. 2. **DO NOT** operate the oven without the Glass Tray fully engaged on the drive hub. Improper cooking or damage to the oven could result. Verify that the Glass Tray is properly engaged and rotating by observing its rotation when you press Start. Note: The Glass Tray can turn in either direction. 3. Use only the Glass Tray specifically designed for this oven.

DO NOT substitute any other glass tray. 4. If the Glass Tray is hot, allow to cool before cleaning or placing in water. 5. **DO NOT** cook directly on the Glass Tray.

Always place food in a microwave safe dish, or on a rack set in a microwave safe dish. 6. If food or a utensil on the Glass Tray touches oven walls causing the tray to stop moving, the tray will automatically rotate in the opposite direction. Roller Ring 1. The Roller Ring and oven floor should be cleaned frequently to prevent excessive noise.

2. Always replace the Roller Ring and the Glass Tray in their proper positions. 3. The Roller Ring must always be used for cooking along with the Glass Tray.

INSTALLATION AND GROUNDING INSTRUCTIONS Examine Your Oven Unpack oven, remove all packing material and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if oven is damaged. **DO NOT** install if oven is damaged. Placement of

Oven 1. The oven must be placed on a flat, stable surface. Place the front surface of the door three inches or more from the counter top edge to avoid accidental tipping of the microwave oven during normal use.

For proper operation, the oven must have sufficient air flow. Allow 3-inches (7.6 cm) of space on both sides of the oven and 1-inch (2.5 cm) of space on top of the oven. (a) **DO NOT** block air vents. If they are blocked during operation, the oven may be overheated and damaged. (b) **DO NOT** place oven near a hot, damp surface such as a gas or electric range, or dishwasher. (c) **DO NOT** operate oven when room humidity is excessive. 2. This oven is manufactured for household use only.

It is not approved or tested for mobile vehicle, marine, or commercial use. Installation 1. **DO NOT** block air vents. If they are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off.

The oven will remain inoperable until it has cooled. 2. If the oven is designed for installation into a wall cabinet by using the proper trim kit available from a local Panasonic dealer, follow all instructions packed with the kit. 3 **INSTALLATION AND GROUNDING INSTRUCTIONS (continued) --IMPROPER USE**

OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a three wire extension cord that has a three prong polarized grounding plug, and a three slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

WARNING Grounding Instructions **THIS APPLIANCE MUST BE GROUNDED.** In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. · Plug into properly installed and grounded 3 prong outlet. · **DO NOT** remove ground prong. · **DO NOT** use an adapter. Power Supply 1.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. 2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.



[You're reading an excerpt. Click here to read official PANASONIC](#)

[NN-S542BF user guide](#)

<http://mypdfmanuals.com/dref/205753>