

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Haier AP095R Owner's Manual

[Shop genuine replacement parts for Haier AP095R](#)



[Find Your Haier Air Conditioner Parts - Select From 735 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for Haier AP095R

WJ65X23664	Plate1 Hole and 1 without hole
A3000-820	CONDENSER FAN MOTOR
AC-3940-81K	Kit-window Exhaust
WJ65X23751	LONG PLATE (NO HOLES)
P67904053	HEAT EXT HOSE, 5" diameter
WJ20X24139	CAPACITOR
P67904055	HEAT EXHAUST FIXTURE
AC-4550-176	Motor - Fan
AC-5210-70	P.c.b. -
AC-4550-29	Motor-fan
WJ01X22325	CASTERS
WJ01X23760	USE NLA ITEM SCREW COMPLETE BAG
WJ01X24007	CAP
WJ26X23988	USE NLA ITEM REMOTE CONTROL
WJ01X24015	PLUG - DRAIN

Amana[®]

ROOM AIR CONDITIONING AND DEHUMIDIFIER PRODUCTS

PORTABLE AIR CONDITIONER CLIMATISEUR PORTATIF ACONDICIONADOR DE AIRE PORTATIL



Model#
Modèle#
Modelo#

AP095R

A Word From Amana

Thank You for buying a dependable, energy saving and easy to operate AMANA air conditioner. This manual contains useful information for you to maintain, operate, install and safely use your air conditioner. Your air conditioner cleans, cools and dehumidifies the air in your room to provide you with the ultimate level of comfort.




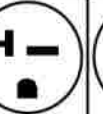

Please read instructions carefully before using the product. Also, do not forget to fill out and mail the Product Registration Card.

Product Registration

Record Your Model and Serial Number.

Attach the sales receipt to this guide and keep for future reference. Model and serial number can be obtained from the serial label, which is on your air conditioner. For all your service calls during the warranty period the following information will be needed:

Model Number:
 Serial Number:
 Date of Purchase:
 Dealer's Name:
 Dealer's Address:
 Dealer's Phone Number:

TABLE					
RECEPTACLE AND FUSE TYPES					
RATED VOLTS	125/60		250/60		
AMPS	15	20	15	20	30
WALL OUTLET					
FUSE SIZE	15	20*	15	20*	30
TIME DELAY FUSE (or circuit breaker)	Plug	Plug	Plug		

SAFETY PRECAUTIONS

WARNING: *Following these basic precautions will reduce the risk of fire, electrical shock, injury or death when using your air conditioner.*






-  1)  Air conditioner must be connected to proper electrical outlet with the correct electrical supply. (see table previous page)
-  2) Proper grounding must be ensured to reduce the risk of shock and fire. **DO NOT CUT OR REMOVE THE GROUNDING PRONG.** If you do not have a three-prong electric receptacle outlet in the wall, have a certified electrician install the proper receptacle. The wall receptacle **MUST** be properly grounded.
-  3) Do not operate air conditioner if power cord is frayed or otherwise damaged. Also avoid using it if there are cracks or abrasion damage along the length, plug connector or if the unit malfunctions or is damaged in any manner. Contact an authorized service for examination, repairs or adjustments.
-  4) **DO NOT USE AN ADAPTER OR AN EXTENSION CORD.**
- 5) Do not block airflow around the air conditioner. Also the exhaust hose should be free of any obstructions.
- 6) Always unplug the air conditioner before servicing it or moving it.
- 7) Do not install or use the air conditioner in any area where the atmosphere contains combustible gases or where the atmosphere is oily or sulphurous. Avoid any chemicals coming in contact with your air conditioner.
- 8) Do not place any object on the top of the unit.
- 9) Never operate the air conditioner without the filters in place.
- 10) Do not use the air conditioners near a bathtub, shower or wash basin.

Table Of Contents




PAGE

A Word From Amana	1
Product Registration.....	1
Safety Precautions	2
Advantages	4
Parts and Features	5
Assembly and Installation.....	6
Operation	7
Product Specification	8
Care and Cleaning	8
Storage	8
Trouble Shooting	9
Warranty Information	10

Advantages of this Model

1. This model is easy to operate. The electronic control panel has a timer, thermostat, three speed cooling speeds, three fan speeds and one speed dehumidification function (dry).
2. This portable air conditioner does not require water to be added.
3. The unit has a unique design which evaporates the water. Therefore no condensation tank is necessary, thus avoiding you to have to wake up in the middle of the night to empty the bucket and turn on the unit.
4. Easy to install window kit is included, which consists of the exhaust hose, 2 hose adaptors, the window panel kit and window panel adaptor.
5. Full directional casters are included to help remove the unit to be conveniently used in almost any area.
6. The filter screen is designed for easy accessibility of the filter.
7. Portable air conditioners are easy to store when not in use.


Parts and Features

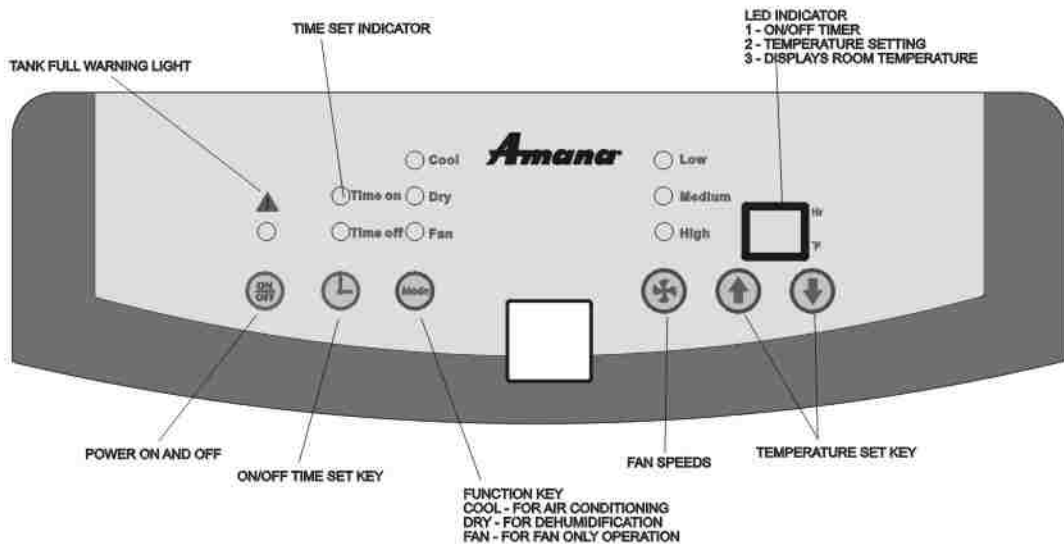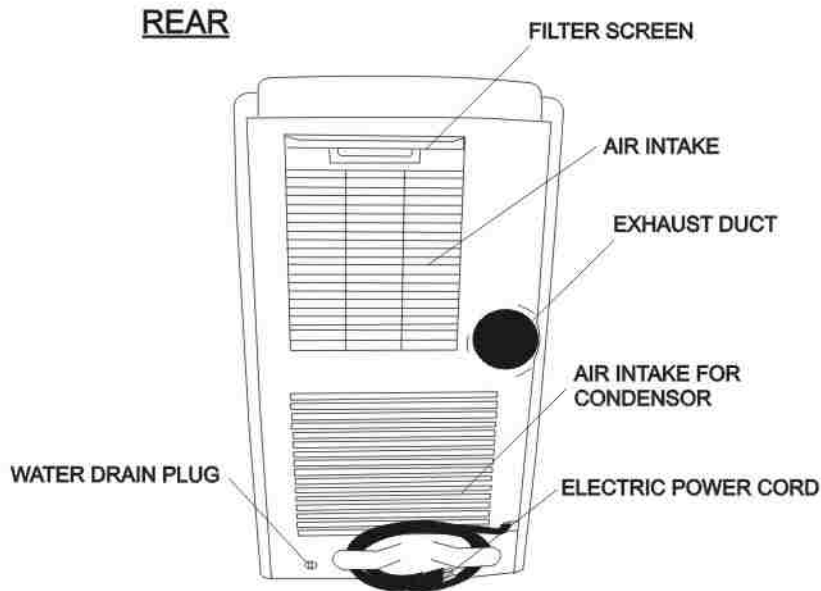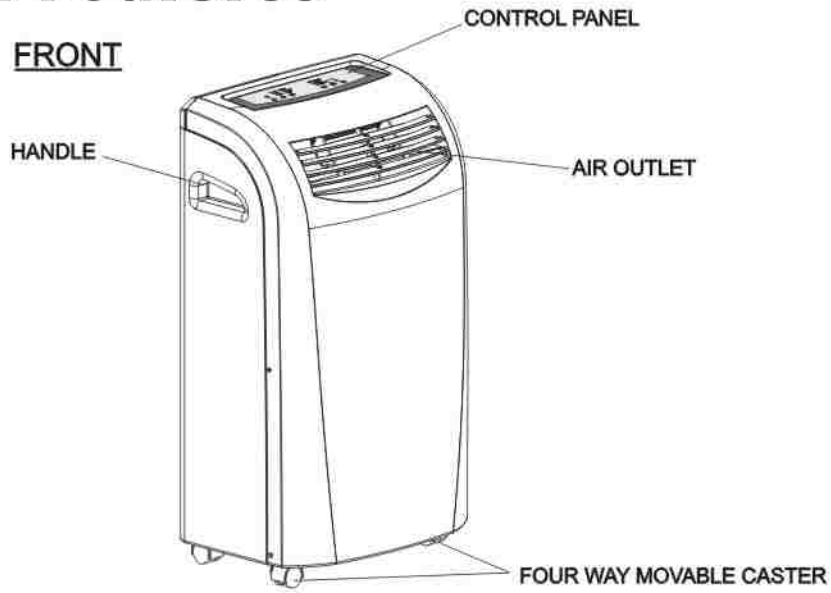




Assembly and Installation

USING WINDOW PANEL KIT




1. Plastic panel - 2 pieces
2. Window Panel Adaptor - 1 piece
3. Screws - 4 pieces
4. Cover - 1 pieces

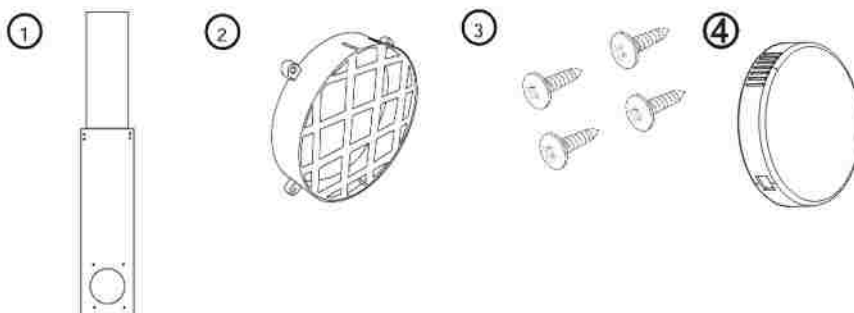

1. Adjust the Plastic Panel to the width or height of your window and tighten the 2 screws that are attached to the panel.
2. Push the round Window Panel Adapter through the rear of the Plastic Panel. Line up the holes and tighten the Adapter with 4 screws that are included in the kit. (Tighten screws from the front).
3. Install the Window Plastic Panel into the window. If necessary use duct tape to better secure the panel.
4. Connect exhaust hose to the unit by inserting the narrower side of the Unit Adapter that is attached to the hose into the exhaust. Turn Adapter clockwise until it locks. (See Illustration A)
5. Move the unit to the window, extend the hose and attach the other end of the hose to the window. Align the tabs on the hose and window panel adapters and fasten them together.
6. The cover could be installed on the window panel adaptor when the air conditioner is not used. (See Fig. C).

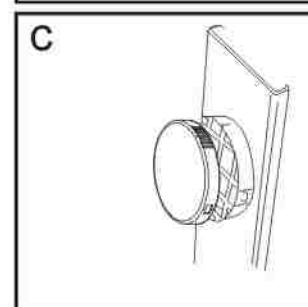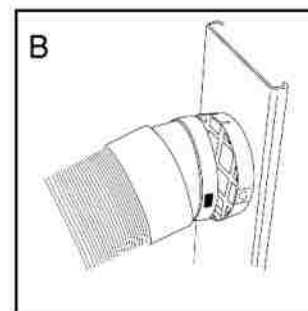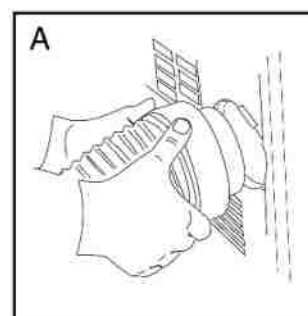

Window Adapter Exhaust Hose Unit Adapter

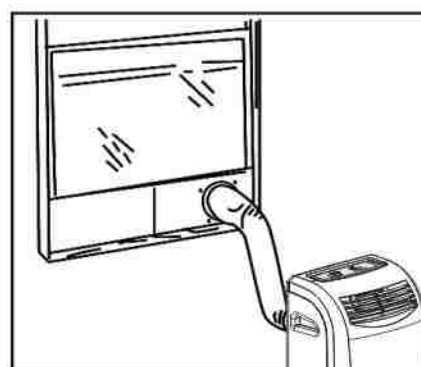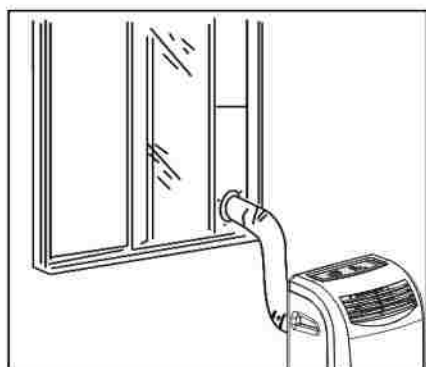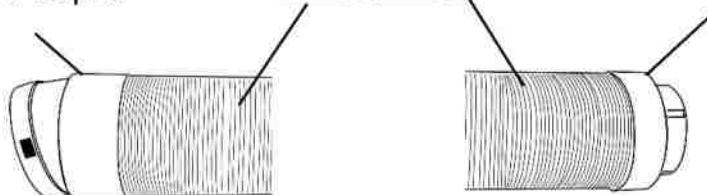

(6)

Operation

NOTE: Wait for 24 hours to turn on air conditioner if the unit has been tilted for any reason. This is for the oils and the coolants to settle and level off.

1. After a normal shut down wait for 3 minutes before restarting the unit so as to complete the compressor cycle.
2. Use an 115v /15 amp outlet for the air conditioner. Do not use any other electrical appliances on this line or you may trip the fuse. Use a dedicated line for this air conditioner.
3. Do not place the air conditioner in direct sunlight or close to any heating appliances (eg. baseboard heaters, stoves, etc).
4. Operate on a flat surface only.
5. Keep the unit free of any obstructions such as drapes, curtains, blinds, etc.
6. Keep unit at least 1 foot away from the wall.
7. Check and clean the filter once every week for highest efficiency.

NOTE: Do not use unit without filter.

8. If the unit is not being used for a long period of time, remove the plug from the water drain pipe and drain out any condensed water.

When turning on the unit for the first time after plugging it into an electrical outlet, the unit will start in a low fan cool mode. The temperature reading out on the LED will be the current room temperature. When turning on the unit during regular usage, it will remember the last shut off setting. If you want to operate the air conditioner as a dehumidifier, then adjust to dry mode.

Setting The Temperature

To set the temperature, press the + or the - key to raise or lower the temperature. The temperature can be raised or lowered in the cool or dry mode. The temperature cannot be adjusted in the fan mode.

Fan Speeds

There are 3 adjustable speeds in the cool and fan mode: Low, Medium & High. In the dry or dehumidification mode the fan will only operate at low speed.

On/Off Time Set

The air conditioner has a 1-12 hour on/off built-in timer. To delay the start time for 1-12 hours at 1 hour intervals, simply press the time/set key and then press the + or - key to adjust the start time.

Note that the unit has to be plugged in to an electrical outlet for the timer to operate.

To automatically shut-off the unit, press the time/set key while the unit is running and then press the + or - key to adjust the shut-off time. The auto shut-off switch operates in all 3 modes: Cool, Dry & Fan.

NOTE: The temperature can be set between 61°F to 89°F.

Product Specification

Voltage and Frequency	115V ~ 60Hz
Input Power	950 W
Cooling Capacity	9000 BTU
Moisture Removal (pints/day)	80
Coolant	R22 / 1.0 lbs
Timer	12 Hours
Operating Temperature Range	61°F - 100°F
Unit Dimensions (WxDxH) (inches)	18 15/16 x 13 7/16 x 34 11/16"
Net Weight lbs. approximate	77 lbs.
Power Cord	75 inches
Exhaust Hose	5 Feet

Care and Cleaning Guide

- Always unplug your air conditioner before cleaning.
- Air filter needs to be cleaned at least once a week for your unit to operate at optimum efficiency. Slide out the filter from the back by pulling on the tab. The filter may be washed or vacuumed. Remove the excess water from the filter by gently shaking the filter. This will remove dust and particles trapped in the filter. After cleaning, reinstall the filter. DO NOT use your air conditioner without the air filter in place.
- To clean the cabinet, DO NOT use harsh chemicals, abrasives, ammonia, chlorine, bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your air conditioner.
- Always use a soft cloth dampened with water or a mild soap and water solution to wipe the front of the cabinet. Wipe dry with a soft cloth.

Storage

- To store your air conditioner when not being used for a long period of time, drain condensed water using the drain pipe. Remove exhaust hose, clean the filters, cover with plastic bag and store away.

Trouble-Shooting

If air conditioner does not operate:

- Check if unit is plugged in. The plug may have come loose.
- Check if the electrical wall receptacle is of proper voltage.
- Check if the circuit breaker needs to be reset or if the fuse needs to be replaced.
- Check if the unit is in "Off" mode.
- If the tank full warning light is on, call for service.

Air conditioner working but room not cooling:

- Room may have appliances that produce heat. Use an exhaust fan to remove excess heat.
- Check exhaust hose for proper installation.
- Redirect the airflow. Remove any obstacles.
- All doors and windows need to be closed so that cool air does not escape the room.
- Air filter may be blocked or may need cleaning.
- Unit BTU may be too low for the required cooling area.
- On extremely hot & humid days, air conditioners may take a little longer to cool.
- Drain the water drain pipe by removing the plug.
- Unit may be in fan or dry mode. Put air conditioner in cool mode.

Amana®

ROOM AIR CONDITIONING AND DEHUMIDIFIER PRODUCTS

Limited Warranty

This warranty covers all defects in workmanship or material for:

1. The mechanical and electrical parts (including labor costs) contained in this Amana product, for a period of 12 months from the date of purchase. (For commercial or rental application the warranty is 90 days.)
2. The sealed system and compressor contained in this Amana product is for a period of 5 years, from the date of purchase (excluding labor costs after the initial 12 month period). In commercial or rental use, the additional limited compressor warranty is for 1 year and 9 months, (excluding labor costs after the initial 90 days period).

You must keep and be able to provide your original sales receipt as proof of the date of purchase.

Who is covered?

The original retail purchaser of this Amana product.

What will be done?

Amana will repair or replace any mechanical, electrical part or the compressor, which proves defective in normal household use for a period of 12 months. Amana will repair or replace (excluding labor costs) the sealed system and compressor (parts only) for an additional 4 year period.

How can you get service?

1. Contact your nearest manufacturer authorized Service Depot. For the name of the Service Depot nearest you, contact Amana Room Air Conditioners at 1-888-842-2440
2. All service must be performed by a manufacturer authorized Amana Service Depot.

THIS WARRANTY COVERS UNITS WITHIN THE CONTINENTAL UNITED STATES, CANADA AND PUERTO RICO.

THIS WARRANTY DOES NOT COVER:

Damages from improper installation.

Damages in shipping.

Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance.

Damages from service by other than an authorized dealer or service center.

Labor, service, transportation and shipping charges for the removal of defective parts and installation of replacement parts beyond the initial 12-month period.

THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages. Some states do not allow the exclusion of incidental or consequential damages, so this limitation may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

For more information on this and other Amana products, call Customer Affairs Department at:
1-888-842-2440



CONSUMER INFORMATION LINE

Amana Toll-Free

1-888-842-2440

Un mot de Amana

Merci d'avoir acheté un climatiseur "Amana" qui est dependable, facile à opérer et économise de l'énergie. Ce manuel contient l'information nécessaire pour maintenir, opérer, installer et utiliser proprement votre climatiseur. Votre climatiseur nettoie, refroidit et déshumidifie l'air dans votre salle pour vous fournir avec le niveau ultime de confort.

S'il vous plaît lisez soigneusement les instructions avant d'installer ce produit. N'oubliez pas de remplir et poster la carte d'enregistrement du produit.

Registration du Produit

Registrez le model et numero de serie.

Pour tous vos appels de service pendant la periode de votre garantie, les informations suivantes vous seront necessaires. Attachez le reçu de ventes a ce guide et garder pour la reference d'avenir. Cette information peut etre obtenue de la plaque en serie, qui est sur votre climatiseur.

Numero du model:






Numero de serie:

Date d'achats:

Nom du negociant:

Addressed u negociant:

Numeros de telephone du negociant:

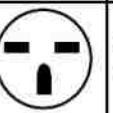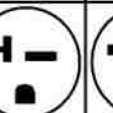TABLEAU					
TYPES DE PRISES ET FUSIBLES					
TENSION	125/60		250/60		
AMPÈRES	15	20	15	20	30
PRISE DE COURANT MURALE					
TAILLE DU FUSIBLE	15	20	15	20	30
FUSIBLE À FUSION TEMPORISÉE (disjoncteur)	Fiche	Fiche	Fiche		

CONSIGNES DE SÉCURITÉ

AVERTISSEMENT: *Veillez suivre ces précautions de base lorsque vous utilisez l'appareil afin de réduire tout risque d'incendie, d'électrocution, de blessure, voire de mort.*



- ▲ 1) Le climatiseur doit être branché au niveau d'une prise électrique d'une tension adéquate. (voir tableau)
- ▲ 2) L'appareil doit être mis à la terre (masse) afin de réduire tout risque d'électrocution et d'incendie. **NE PAS COUPER NI RETIRER LA BROCHE DE MASSE.** Si votre prise murale ne peut accueillir une fiche à trois broches, veuillez faire en sorte qu'un électricien qualifié en installe une. La prise murale **DOIT** être mise à la masse.
- ▲ 3) Ne pas utiliser l'appareil si le cordon d'alimentation est effiloché ou fissuré, si la fiche et le connecteur sont endommagés, ou si l'appareil présente une panne ou est endommagé d'une façon quelconque.
- ▲ 4) **NE PAS UTILISER UN ADAPTATEUR OU UNE RALLONGE.**
- 5) Ne pas gêner ni bloquer le flux d'air autour de l'appareil et que rien ne bouche le tuyau de sortie.
- 6) Débrancher toujours le climatiseur avant de le déplacer ou d'effectuer opération de maintenance.
- 7) Ne pas installer le climatiseur dans un endroit où l'atmosphère est huileuse ou présente des gaz combustibles ou du soufre. Éviter que les produits chimiques entrent en contact avec le climatiseur.
- 8) Ne placer aucun objet sur le climatiseur.
- 9) Ne jamais utiliser le climatiseur sans les filtres.
- 10) Ne pas utiliser le climatiseur à proximité d'une baignoire, d'une douche ou d'un lavabo ou évier.

Table de matieres




PAGE

Un mot de Amana	1
Registration du Produit.....	1
Precautions de Surete	2
Avantages	4
Parties et caracteristiques	5
Assemblee et Installations	6
Operation	7
Specification du Produit	8
Soins et nettoyage	9
Emmagasinage.....	9
Detections d'un probleme	9
Informations de la garantie	10

Avantages de ce Model

1. Ce model est facile a operer. L'electronique a un minuteur, thermostat, trois vitesses pour refroidir, trois ventilateurs et une vitesse de dehumidification (seche).
2. Ce climatiseur portative n'exige pas que l'eau soit ajoutee.
3. Ce produit a une conception unique qui evapore l'eau. Donc une tank de condensation n'est pas necessaire . Ceci vous evitera de vous lever au milieu de la nuit pour vider le seau et virez le produit.
4. Une trousse de fenetre facile a installer est incluse et est constituee d'un tuyau d'echappement, de 2 jets de tuyau, d'une trousse de panneaux de fenetre, d'un connecteur du tuyau d'echappement.
5. Roulettes directionnelles sont inclus pour aider a deplacer le produit d'une maniere commode pour etre utiliser dans presque n'importe quel domaine.
6. L'ecran du filtre est concu pour l'acces facilement.
7. Les climatiseurs portatifs sont faciles a emmagasiner quand pas utilises.


Parties et Caracteristiques

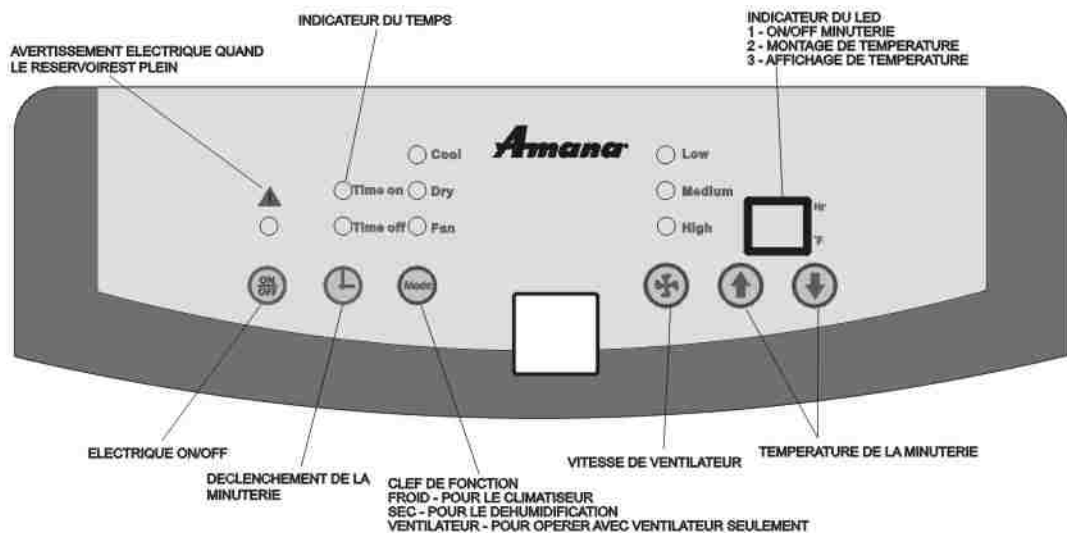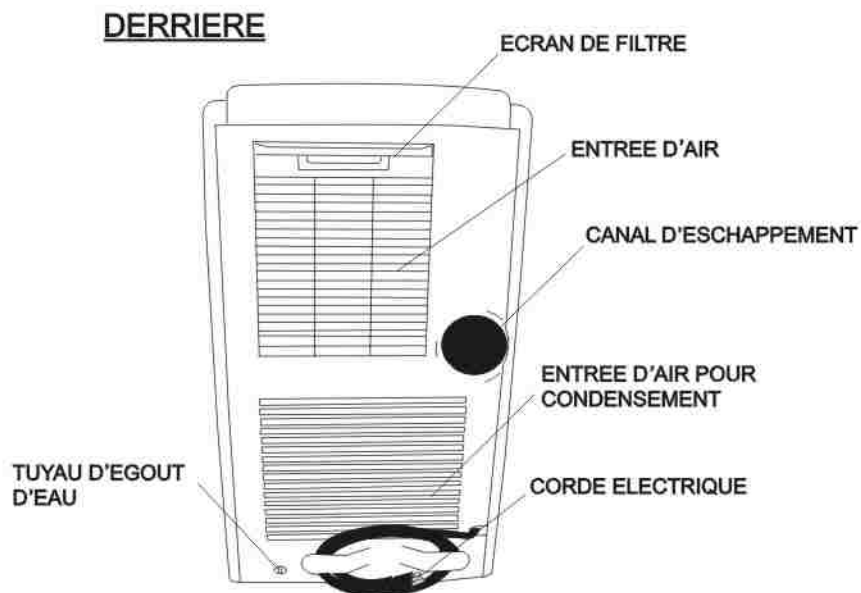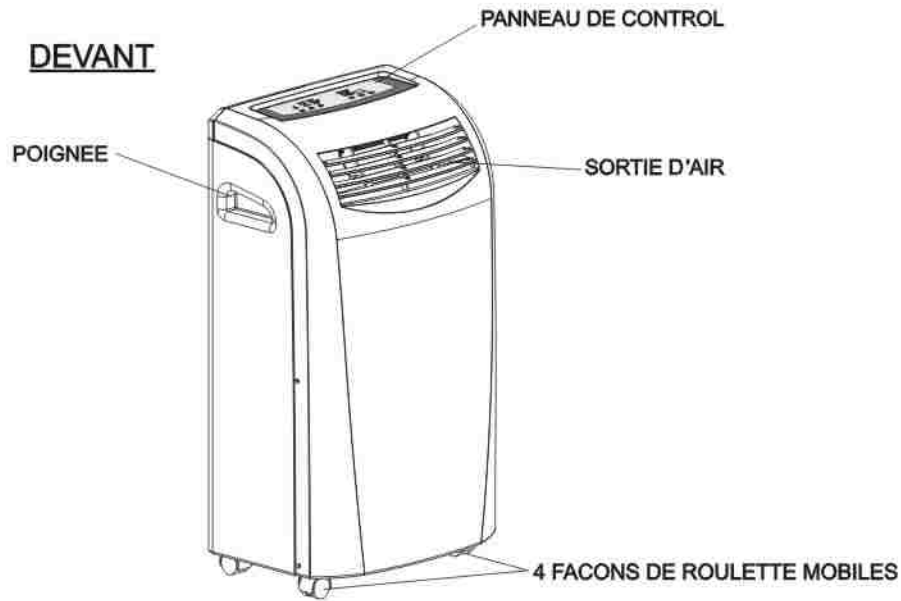




Montage et Installation

UTILISANT LA TROUSSE DES PANNEAUX POUR LA FENETRE




1. Panneau en matière plastique -- 2 pièces
2. L'adaptateur du panneau de la fenêtre -- 1 pièce
3. Vis -- 4 pièces
4. Cover -- 1 pièce

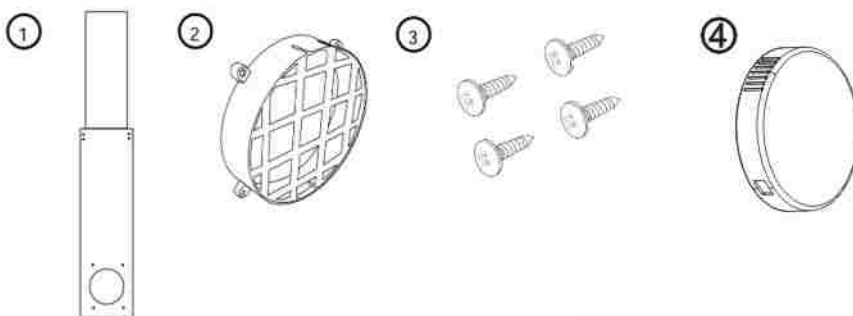

1. Ajustez le panneau en plastique à la largeur et hauteur de votre fenêtre et resserrez les 2 vis qui sont attachés au panneau.
2. Poussez l'adaptateur du panneau de la fenêtre circulaire à travers le panneau en plastique. Alignez les trous et resserrez l'adaptateur avec les 4 vis qui sont inclus dans la trousse. (Resserrez les vis du devant)
3. Installez le panneau en plastique sur la fenêtre. Si nécessaire, utilisez la bande adhésive pour assurer le panneau en place.
4. Connectez le tuyau d'échappement à l'unité en insérant le côté plus étroit de l'adaptateur de l'unité qui est attaché au tuyau dans l'échappement. Tournez l'adaptateur dans le sens des aiguilles d'une montre jusqu'à ce que ce dernier se verrouille. (Voir l'illustration A)
5. Transférez l'unité à la fenêtre, étendez le tuyau et attachez l'autre fin du tuyau à la fenêtre. Alignez les étiquettes du tuyau et de l'adaptateur du panneau de la fenêtre et attachez les ensemble.
6. The cover could be installed on the window panel adaptor when the air conditioner is not used. (See Fig. C).

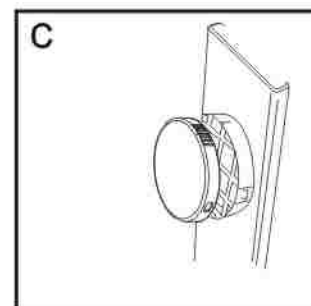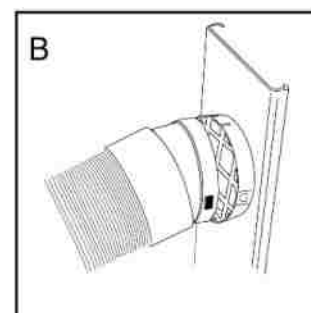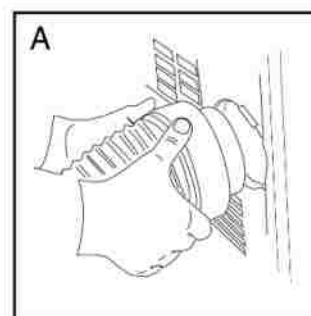

Adaptateur de la fenêtre Tuyau d'échappement Adaptateur de l'unité

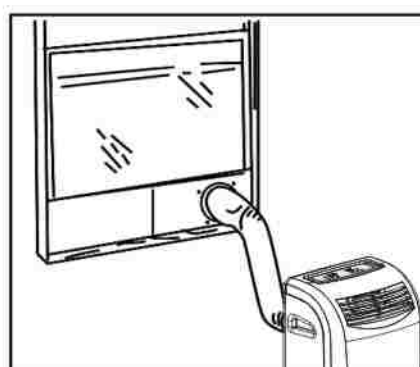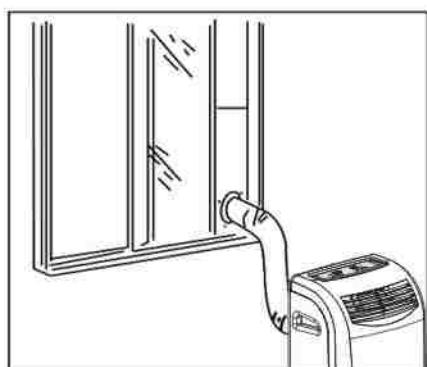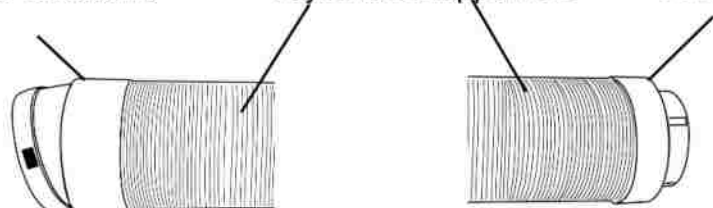

Operation

NOTE: Attendez 24 heures pour tourner le climatiseur si le produit a été penché pour n'importe quelle raison. Ceci est pour régler et niveler les pétroles

1. Attendez 3 minutes avant de remettre en marche le produit après une panne normale pour compléter le cycle de compresseur.
2. Utilisez un 115v 15sortie de amp pour le climatiseur. Ne pas utiliser autre appareils électriques sur cette ligne ou vous pouvez trébucher le fusible. Utilisez une ligne dédiée pour ce climatiseur.
3. Ne pas placer le climatiseur dans la lumière du soleil directe ou près des chauffages. Exemples.. les appareils de chauffage, de plinth, des fours etc...
4. Opérez sur une surface plate seulement
5. Gardez le produit libre d'obstructions tels que les rideaux, tentures, persiennes etc.
6. Gardez le produit au moins 1 foot éloigné du mur.
7. Vérifiez et nettoyez le filtre une fois chaque semaine pour recevoir la plus haute efficacité.

NOTE: Ne pas utiliser le produit sans le filtre.

8. Si le produit n'est pas utilisé pendant une longue période de temps, enlevez le bouchon du tuyau d'égout d'eau et drainez l'eau condensée

Quand vous mettez en marche le climatiseur pour la première fois, après l'avoir branché, le ventilateur commencera à froid bas. La température lue sur le LED sera la température de la salle. En tournant le produit régulièrement, il se souviendra du réglage du dernier éteint. Si vous voulez opérer le climatiseur comme un déshumidificateur, ajustez alors pour la mode sèche.

Montage de la Temperature

Pour régler la température appuyez sur le + ou - bouton pour élever ou abaisser la température. La température peut être élevée ou abaissée dans le frais ou sec mode. La température ne peut pas être ajustée dans le mode de ventilateur.

Vitesse du Ventilateur

Il ya 3 vitesses ajustables pour le ventilateur. Bas, Moyen ou haut.. Dans la mode sèche ou déshumidificateur, le ventilateur fonctionne à une vitesse basse.

Declenchement de la minuterie

Le climatiseur a 1-12 heures ON/OFF minuteur incorporé. Pour retarder le commencement du produit de 1-12 heures à un intervalle d'une heure, simplement appuyez sur le déclenchement puis pressez sur la clef + ou - pour ajuster le temps du commencement. Notez que le produit doit être branché dans une sortie électrique pour que le minuteur fonctionne.

Pour fermer le produit automatiquement simplement appuyez sur le déclenchement puis pressez sur la clef + ou - pour ajuster le temps d'éteint. L'auto éteint commutateur opérera dans tous les 3 modes. Refroidit, sec et ventilateur.

NOTE: La température peut être réglée entre 61°F à 89°F.