

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



DE'LONGHI ECP3220 Owner's Manual

[Shop genuine replacement parts for DE'LONGHI
ECP3220](#)



[Find Your DE'LONGHI Coffee Maker Parts - Select From 292 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for DELONGHI ECP3220

5313217701	O ring
6132101300	Spring
621986	Valve ring
5332289700	Water valve button
7313285899	Tube 9"
5232101300	Thermostat 125
5232100600	Thermostat (105 deg)
5113211291	Pump
535693	Steam nozzle o ring
9811040850	Screw
5313223751	Joint
5313231221	Tube lower
5313236431	Gasket
5313246241	Drip tray
5313246361	Tank cover
5313246391	Connector
5313274079	Gasket
5513270699	Tube distributing
6013211191	Diffuser
5513280991	Small one-cup
6013214411	Cup plate
6013214461	Cup plate
6113211931	Valva spring
7313286119	Measuring spoon
7313260161	Valve
7313286829	Tap
7313286839	Water tank
AS00002550	Filter holder assembly
5513281001	Two Cup Filter
5513296671	2 Espresso, Cappuccino Milk: Fancy Coll

ECP 3630 - 3420 - 3220

COFFEE MAKER

Instructions for use. Keep these instructions

Visit www.delonghiregistration.com to register
your product

Visit www.delonghi.com for a list of service centers
near you.

ELECTRIC CHARACTERISTICS

120V ~ 60 Hz 1100 W



MACHINE À CAFÉ

Mode d'emploi . Conservez cette notice

Visitez www.delonghiregistration.com pour
enregistrer votre produit en ligne.

Visitez www.delonghi.com pour y voir une liste des
centres de réparation proches de chez vous.

CARACTÉRISTIQUES ÉLECTRIQUES

120V ~ 60 Hz 1100 W

CAFETERA

Repase y guarde estas instrucciones.

Lea cuidadosamente este instructivo antes de usar
su aparato.

Visite www.delonghiregistration.com para registrar
su producto en línea.

Visite www.delonghi.com para ver la lista de
centros de servicios cercanos a usted.

CARACTERISTICAS ELECTRICAS:

120V ~ 60 Hz 1100 W

DeLonghi

EN


page 6

FR


pag.20

ES

 
pág. 41

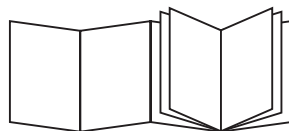

B

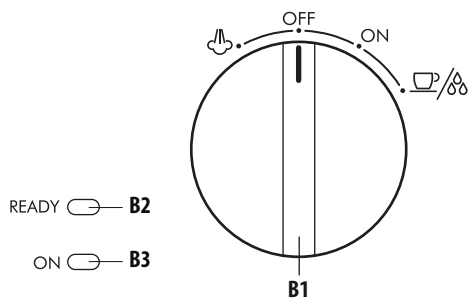 

C

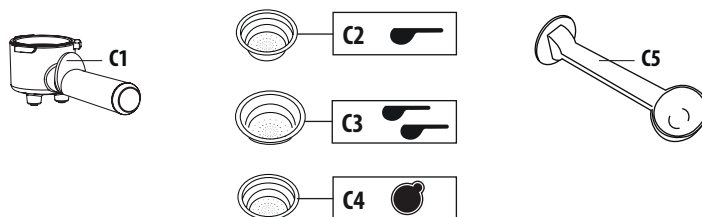 

A

