



 
**5430-700 PROPANE STOVE**  
 (Manufactured: 1987-1989)  
 1YEAR WARRANTY

<u>ID#</u>	<u>PART#</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
1	5430-5271	BURNER ASSEMBLY, LEFT	
2	1201B7301	PAL NUT	N/A
3	5430-3411	WIND BAFFLE, LEFT	N/A
4	5430A1501	COOK TOP	
5	5430-3401	WIND BAFFLE, RIGHT	N/A
6	5430-5401	GRATE ASSEMBLY	N/A
7	R413-149T	VALVE KNOB	
8	5410-1341	O-RING	
9	5430-5541	REGULATOR ASSY	
	5445B556C	REGULATOR ASSY (sub if needed)	
10	5430-5301	VALVE ASSY	N/A
11	5430-3461	BURNER RING SET	
12	1022B1022	SCREWS (2)	N/A
	1022B1024	SUB FOR ABOVE	
13	5430-5261	BURNER ASSEMBLY, RIGHT	
	5469-777C	Carry Case	


\*VALVES FOR THIS STOVE ARE NO LONGER AVAILABLE.

**5430-700**  
 Two-burner (11 in. centers)  
 Color: Dark Green  
 Height: 3 in.  
 Length: 21 in.  
 Width: 12 3/4 in.

Updated 10/18/10

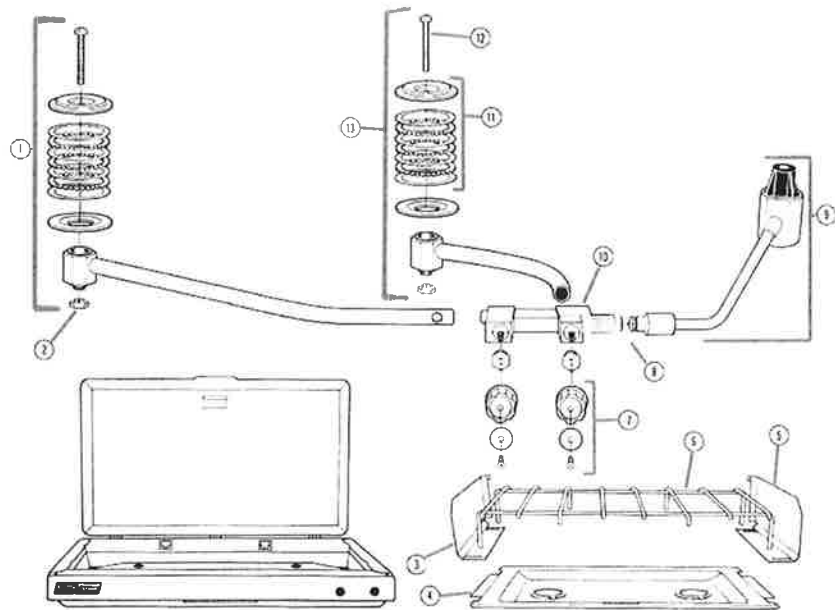

 Parts not listed are no longer available. Prices are subject to change without notice.

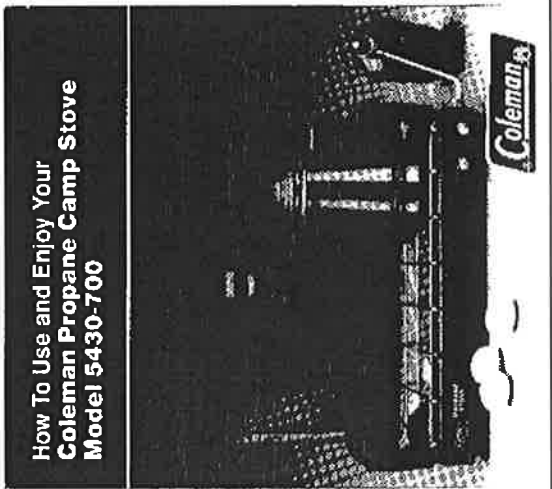

**Coleman's Limited 1 Year Warranty**

This product is warranted to the retail consumer for one year, beginning at retail purchase date. It is covered by the limited warranty provided in this Coleman propane stove. What is covered: Replacement parts, labor, transportation charges to Consumer for repairs. Product WARRANTY IS NOT COVERED: Transportation charges to Consumer for defective Product. Damage caused by abuse or failure to perform routine maintenance — see owner's manual for details. Accidents or misuse — including but not limited to: use of propane for anything other than the intended use, use of the stove for anything other than cooking, use of the stove for anything other than the intended use, use of the stove for anything other than the intended use, use of the stove for anything other than the intended use. For more information on the limited warranty, please contact the Coleman Service Center, 3600 N. Hydraulic, Wichita, Kansas 67218.

 
THE COLEMAN COMPANY, INC.  
General Office and Factory, Wichita, Kansas U.S.A. 67201  
Canadian Office and Factory: Toronto, Canada

1800-554 (11-86) P.1.

LITHO IN U.S.A.

**Parts List for Coleman Propane Camp Stove Model 5430-700**

Item	Part No.	Description	Item	Part No.	Description
1	5430-5271	Burner Assy, LEFT	8	5410-1341	O-Ring
2	1201-7281	Nut	9	5430-5541	Regulator Assy
3	5430-3411	Wind Baffle LEFT	10	5430-5301	Valve Assy, Complete
4	5430-1501	COOK TOP	11	5430-3461	Burner Flng Seal
5	5430-3401	Wind Baffle RIGHT	12	114781020	Screw x 2
6	5430-5401	Grate Assy	13	5430-5281	Burner Assy, RIGHT
7	5410-5281	Valve Knob Assy			

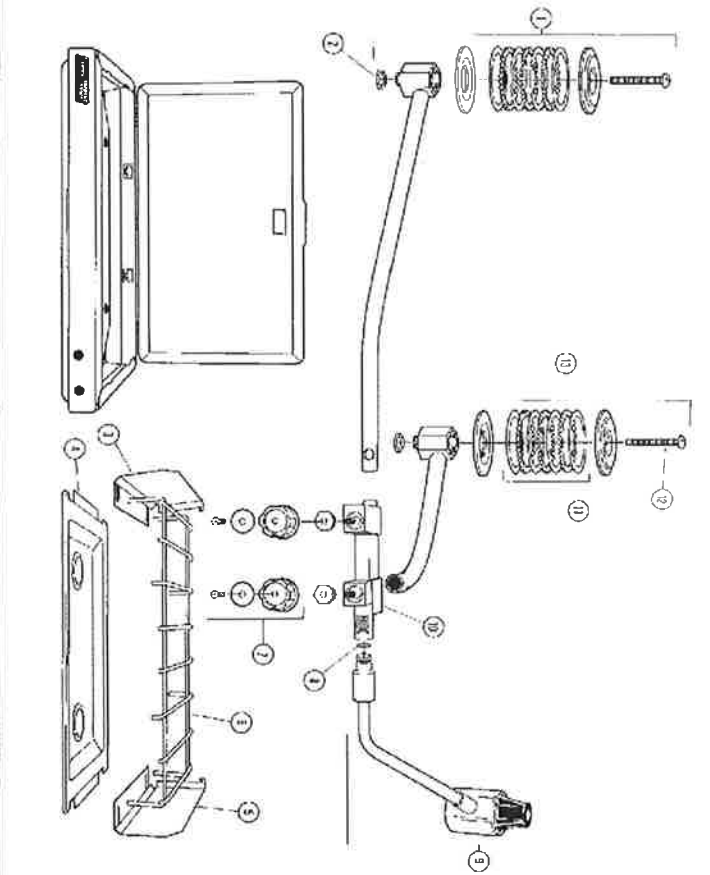

**Things You Should Know**

- 1. It is unsafe and illegal in some areas to use propane in enclosed spaces of greater than 2 1/2" in water caps in occupied enclosures.
- 2. The usual storage areas for propane are the basement, attic, or garage. It is not recommended to store propane in cobwebs, etc. that is common in plastic bags and seal it with a rubber band.
- 3. For repair service, call 1-800-883-2222 or visit our website at www.coleman.com. For your nearest Coleman service center, attach your name and address to product and mail to us to write the service center or the specific model number: 5430-700.


**Propane Fuel**

Two disposable propane bottles manufactured by Coleman. A standard 4.1 liter bottle will serve all the needs now with sizes A, 16.4 oz. disposable bottle available for better fuel economy longer burning time.

**PROPANE ACCESSORIES**

- DISTRIBUTION TREE**  
5114A770 (SHORT)  
5114A775 (TALL)  
Allows operation of appliances of one, two and three burner sizes: 18" and 30" - The 30" size positions the burner at table top height.

**BULK ADAPTOR**  
5410-3901  
Allows Coleman propane adaptors to operate from 20 lb propane bottles.

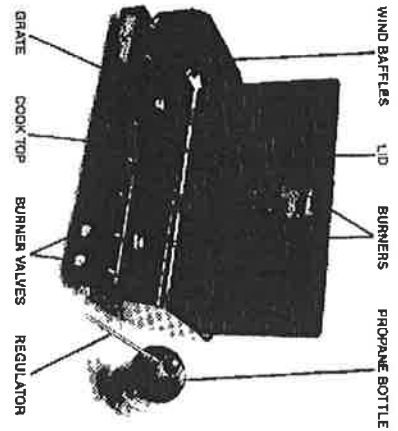

# 1 Follow Instructions And Warnings To Avoid Injury Or Fires.

## WARNING:

1. This stove consumes air (oxygen). Do not use in unventilated areas. Ample ventilation must be provided to avoid endangering your life.
2. Use as a cooking appliance only. Never alter in any way or use with any device or part not expressly approved by Coleman. Never use as a space heater. Never leave stove unattended while burning.
3. Never install or remove propane bottle while stove is ignited, near flame pilot lights, other ignition sources or while stove is hot to touch.
4. Never store propane near flame, pilot lights, other ignition sources or where temperatures exceed 120° F.
5. Never allow tents, sleeping bags, clothing or any flammable material to come within 3 feet of the top and 1 foot of all sides of the stove.
6. Never refill disposable propane bottles.
7. Keep all connectors and fittings clean. Inspect the "O" ring on the regulator for damage before use.
8. Propane is heavier than air and will accumulate in low places. If you smell gas, leave the enclosure immediately and ventilate thoroughly.
9. If using reliable propane bottle, use only Coleman parts and accessories. During stove set-up, check all hoses and fittings for leaks using soapy water. Never use a flame. Always keep reliable bottle outdoors; never inside house, camper or tent.
10. Clean stove frequently to avoid grease accumulations and possible grease fires.
11. Keep out of reach of children.

# 2 To Set Up

**NOTE:** The regulator is stored beneath the stove cooktop. See Section 5 below on how to disconnect the stove and remove the regulator.

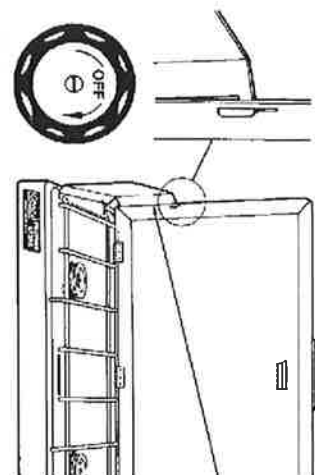


FIG. 1

1. Open lid and position wind baffles as shown.
2. Close both bunk doors.
3. Remove plastic cap and screw propane light.
4. Screw regulator

# 3 To Light

1. Hold lit/match near burner and open burner valve.
2. Adjust flame with burner valves.



BURNER VALVE

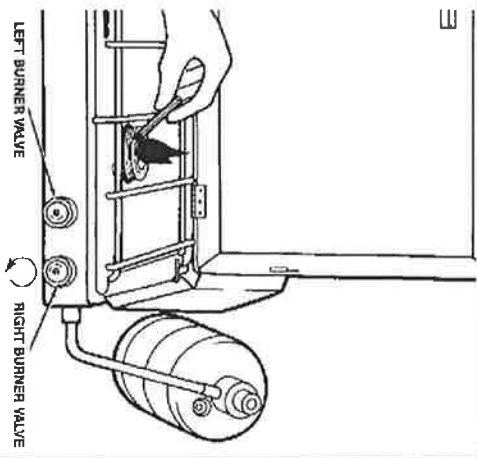


FIG. 2

# 4 To Turn Off

1. Close burner valves.



BURNER VALVE

# 5 To Store

1. Remove propane bottle from regulator.
2. Remove regulator from stove. Regulator can be stored under cooktop if desired.

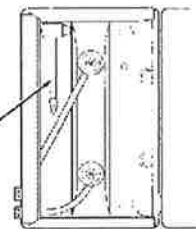


FIG. 3

# 6 To Clean

1. Lift off grate.
2. Remove wind baffles and lift o
3. Wipe clean with soft cloth and use abrasives.

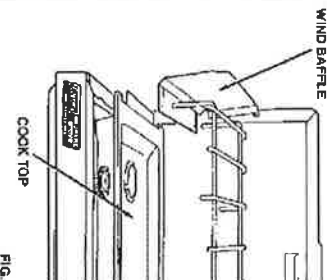


FIG. 4

### Cleaning instructions for 5430 campstove burners.

1. Open the lid and remove the stove grate.
2. Now, looking down into the stove, remove the screws (ID #9) from the center of each burner assembly (ID #1 & #10).
3. Next, lift up the cap, the complete fire ring assembly (ID #8), and the burner bowl from each burner assembly.
4. You can now remove the cook top (ID #3) from the stove case. Wearing a pair of heavy-duty work lift up the cook top and remove it from the stove case. **Please note\*\*the cook tops have very sharp edges; this is why you need to wear heavy-duty work gloves.**
5. To remove the burner body for cleaning, stand the stove up, lengthwise, on its side with the lid open (should look like the letter V). Looking at the back of the stove case, you will see two holes towards the center, and inside these two holes are two pal nuts. These nuts hold the burner bodies to the case. Using a 3/8" nut driver remove each of the pal nuts (ID #2). Once this is done, lay the stove down with the lid open on a flat surface. Lift up on the burner bodies and remove them from inside of the stove case.
6. You can now clean out the metal tubes on the burner bodies. Using a straightened coat hanger or a piece of flexible wire, twist a small piece of rag on the end. Push the wire from the open end of the tube up into the rounded end and pull it back out. Make sure the wire is pushed completely thru each of the metal tubes. Twist and turn the wire while pushing. This will clean out any spider nest and bug pouches that are adhered to the inside walls of the metal tubing. Blow the tubes out with compressed air after the tube has been cleaned internally with the wire. You can now reassemble the stove. Start with step 5, and work your way back to step 1.

