

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




VIKING DCH3042 Owner's Manual

[Shop genuine replacement parts for VIKING DCH3042](#)



[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

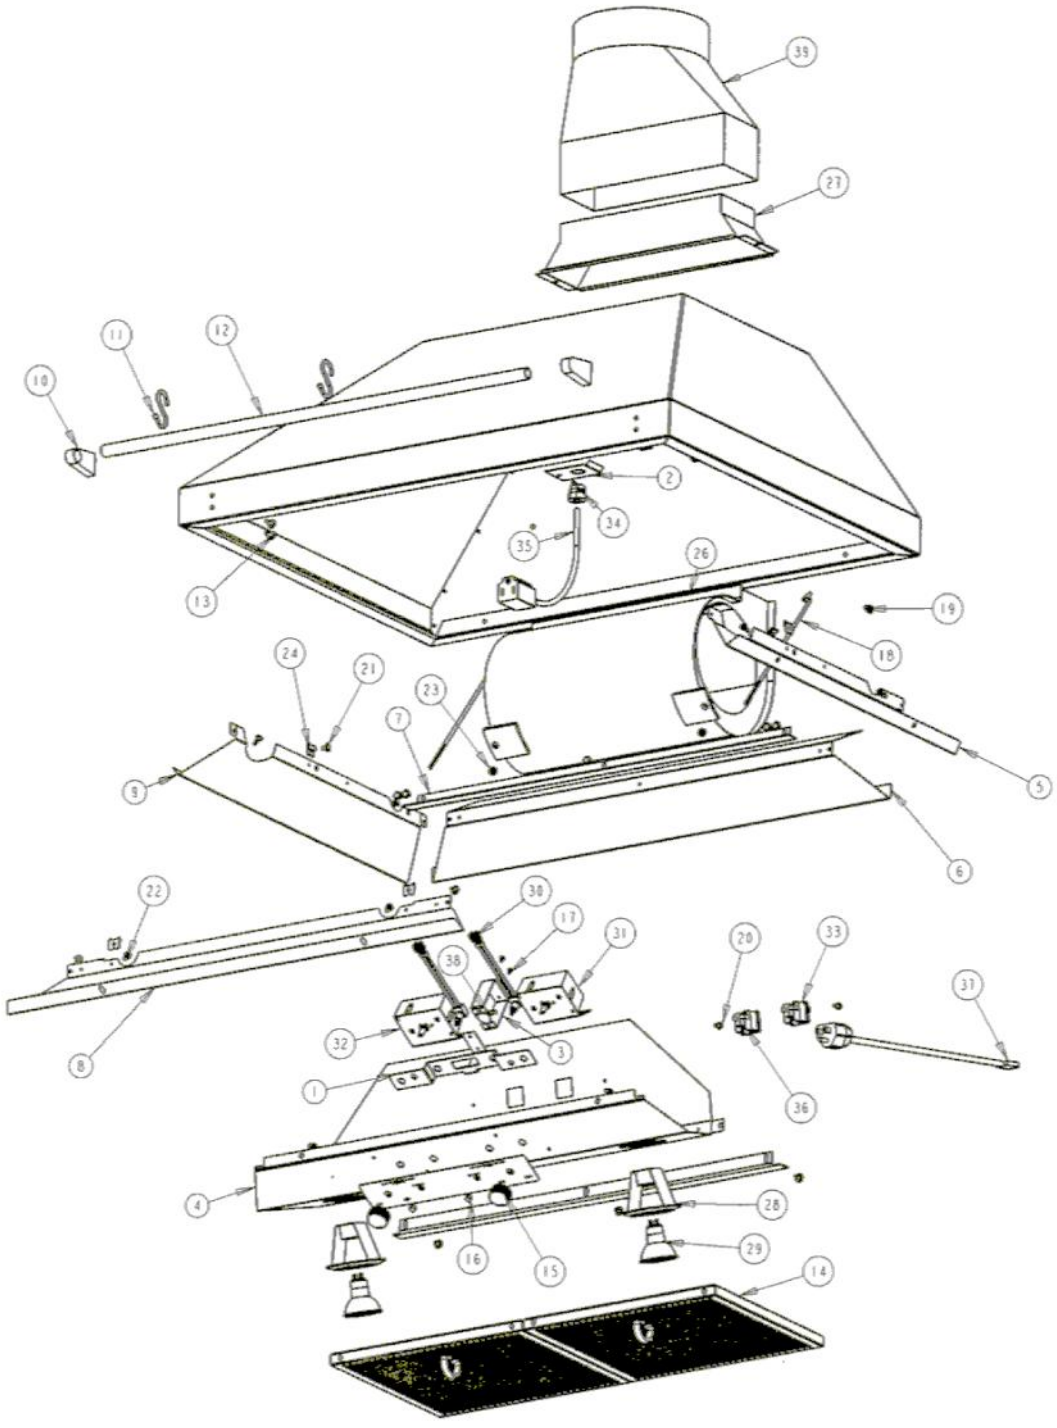

Ref #	Part Number	Qty.	Description
1	A20010270		LT/FAN SWITCH BRKT (DCH30/36)
2	A2003826		ROUGH IN BOX COVER (VWH30/3610)
3	A2103810		THERMODISC BRACKET
4	B20010259		CONTROL PANEL (DCH3042)
5	B2004667		I/S SIDE PANEL RH (DTWS/L/N DSWB)
6	B2004691		30 I/S REAR PANEL
7	B2004693		30 FILTER SUPT. FRONT/REAR
8	B2004695		30 FRONT I/S PANEL
9	B2005027		I/S SIDE PANEL LH (DTWS/L/N DSWB)
10	PE030054		END CAP - SS
	PE030055		END CAP - BR
11	PE030076		CHROME S HOOKS REPL PV100012SS
	PE030077		BR `S` HOOKS REPL PV100012BR
12	F0003873		ACCESSORY RAIL - SS
	F0003869		ACCESSORY RAIL - BR
13	PD010003		10-24 X 1/2 PH.TR.HD.SERD.M.S.
14	G31010266		30/42 FILTER ASSEMBLY 11.75 X 10.375
15	PA010089		KNOB (DESIGNER SERIES HOOD)
16	PA010093		DESIGNER OVEN LT SWITCH KNOB
17	PC040010		POP RIVET
18	PD010035		BLOWER MTG ROD NO.10-24 99420464
19	PD020004		10X3/8PH.HD.TYPE 25 REPL PD040125
20	PD020010		10 X 3/8 GREEN GROUNDING SCREW
21	PD020032		SRW-8(A)X3/8PH.WFR HD 7/16DIA XNCL
22	PD020087		10 X 1/2 PAN PH. TEK ZINC
23	PD030010		NO.10-24 KEPS NUT
24	PD030059		TINNERMAN CLIP
25	PE040232		CONTROL PANEL W/ GRAPHICS (DCH30/36)
26	PE050042		BLOWER INT 460 CFM 97007542
27	PE050043		DAMPER/TRANSITION 460 CFM 97006078
28	PE050064		LIGHT ASSEMBLY
29	PE050081		50 WATT HALOGEN BULB
30	PE050168		DCH FAN/LIGHT SWITCH (DCH30/36)
31	PE050169		BLOWER CONTROL (DCH30/36)
32	PE050170		LIGHT CONTROL (VIH54/66 DCH30/36 VCIH54/66)
33	PE070197		MALE SOCKET (3 PRONG)
34	PE070204		HEYCO STRAIN RELIEF - 7-P2
35	PE070205		3 PRONG FEMALE SUPPLY CORD
36	PE070541		3-PRONG FEMALE SOCKET
37	PE070542		3-PRONG MALE CORD W/AMP CON
38	PJ030014		HEAT SENSOR (N.O.) 160 DEG.
39	PM010045		3 1/4 X 10 RECT. TO 7 DIA(TRANS)