

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




VIKING VBCV30381 Owner's Manual

[Shop genuine replacement parts for VIKING
VBCV30381](#)



[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

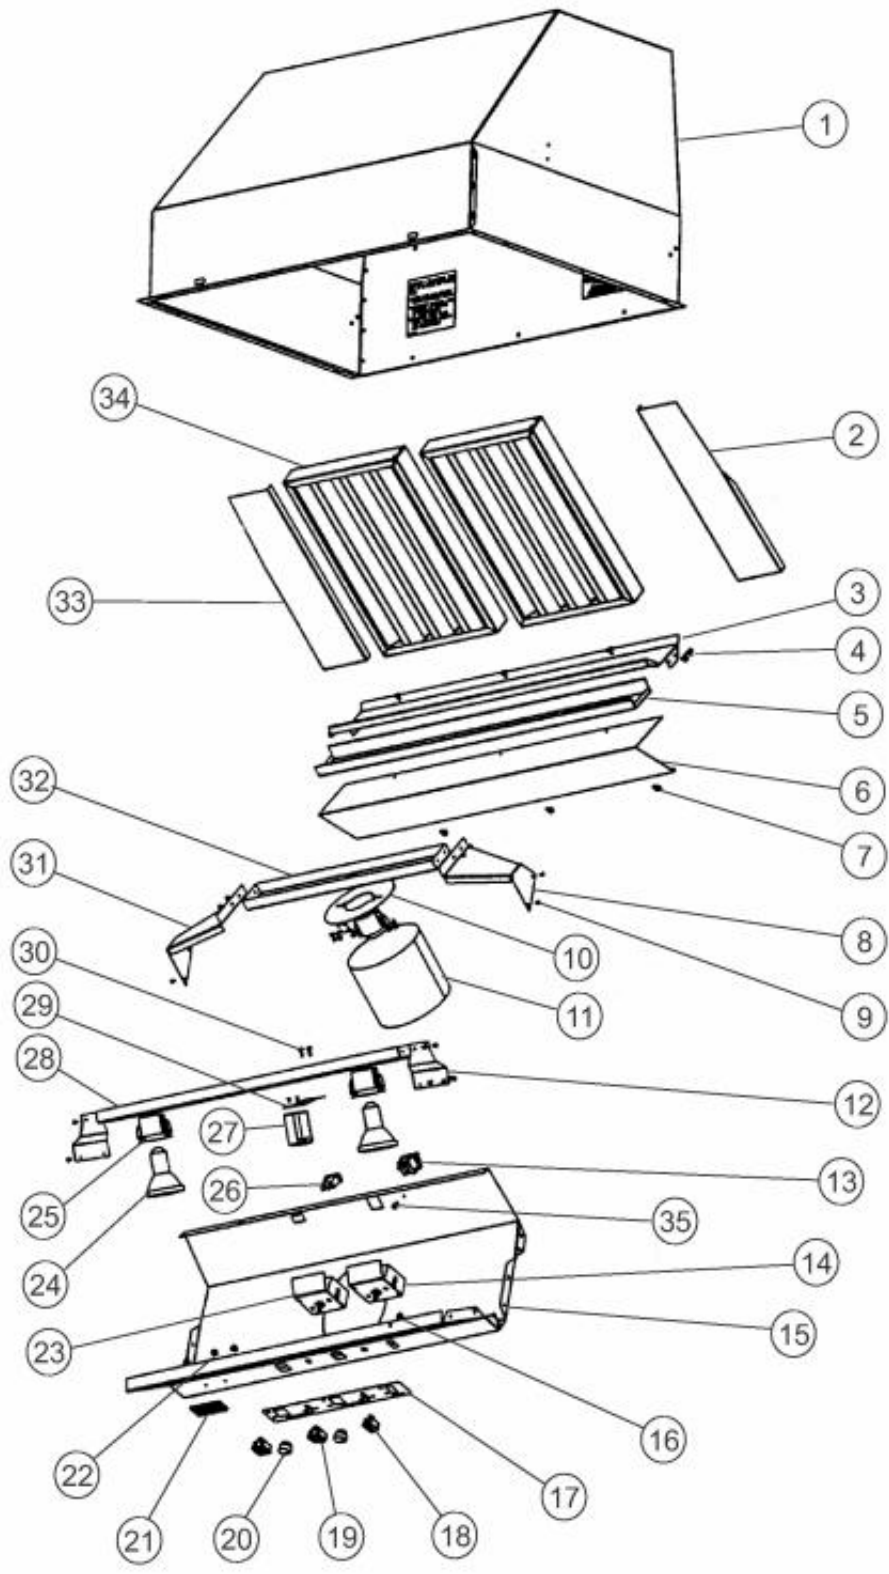

Ref #	Part Number	Qty.	Description
1	UNSERVICEABLE	1	OVEN CAVITY, ASM 36
2	B20012413	1	RH SIDE SPACER (VBCV3038)
3	B20011043	1	REAR FILTER SUPT TOP (VBCV30)
4	PD020032	10	SRW-8(A)X3/8PH.WFR HD 7/16DIAXNICL
5	B2003849	1	GREASE TROUGH (VWH3048/78)
6	B20011041	1	REAR FILTER SUPT BOTTOM (VBCV30)
7	PD020004	3	10X3/8PH.HD.TYPE 25 REPL PD040125
8	A2009301	1	RH LIGHT SUPPORT TOP (VCWH)
9	PC040010	66	POP RIVET
10	A2003889	1	COWLING BRKT
11	B2003888	1	HEAT LAMP COWLING (18 HIGH HOODS)
12	A20011005	1	BOTTOM LIGHT SUPT BRKT (VWH/VBCV/VCWH)
13	PE070197	1	MALE SOCKET (3 PRONG)
14	PE050156	1	PRO BLOWER CONTROL
15	B20010286	1	CONTROL PANEL (VBCV30)
16	PD030010	2	NO.10-24 KEPS NUT
17	PE040133	1	CONTROL PANEL PLATE
18	PE050050	1	HEAT LAMP SWITCH (A111B1100000)
19	PE050048	2	FAN/LIGHT SWITCH (HOODS) EP0M11J
20	PA010071	2	LIGHT/MOTOR CONTROLLER KNOB
21	PE010165	1	VIKING CHROME PLATE LOGO
22	PD030006	1	CAPPED WASHER PAL NUT
23	PE050141	1	PRO LIGHT CONTROL
24	PE050034	3	HALOGEN BULB 50W
25	013549-000	3	LIGHT SOCKET (125C LEADS)
26	PE070196	1	FEMALE SOCKET (2 PRONG)
27	A2103810	1	THERMODISC BRACKET
28	A20011079	1	BOTTOM LIGHT SUPT (VWH/VBCV/VCWH30)
29	B2003837	1	HEAT SENSOR BRKT
30	PD020087	10	10 X 1/2 PAN PH. TEK ZINC
31	A2009300	1	LH LIGHT SUPPORT TOP (VCWH)
32	A2009302	1	LIGHT SUPPORT TOP (VCWH3048)
33	B20012414	1	LH SIDE SPACER (VBCV3038)
34	G3108724	2	BAFFLE FILTER ASSY (VWH2448) 9.625 X 14
35	PD020010	1	10 X 3/8 GREEN GROUNDING SCREW
NI	PE070366	1	WIRE HARNESS
NI	PE070204	1	HEYCO STRAIN RELIEF - 7-P2
NI	PE070205	1	3 PRONG FEMALE SUPPLY CORD
NI	019561-000	1	ENCLOSED JUNCTION BOX