 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VIPR100 Owner's Manual

[Shop genuine replacement parts for VIKING VIPR100](#)

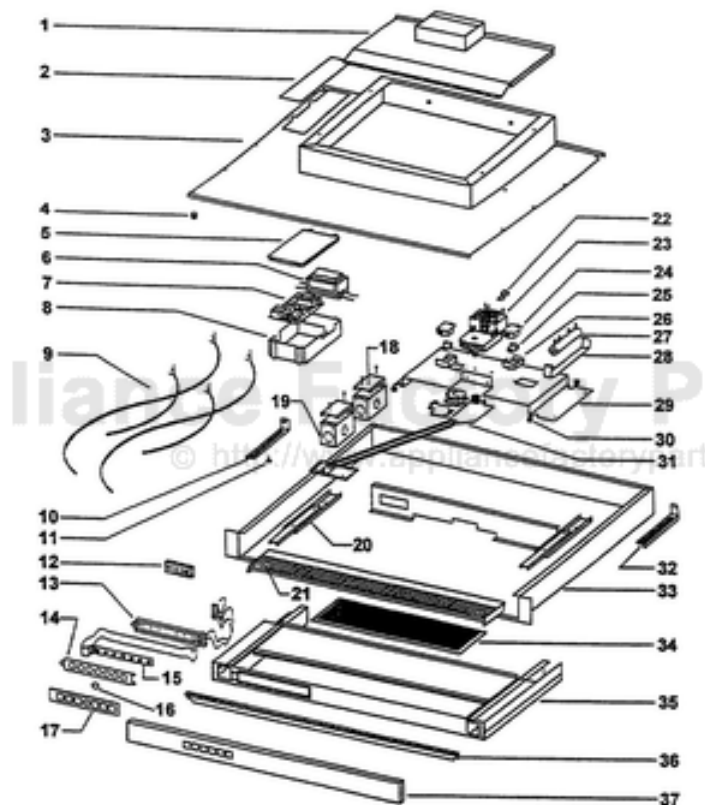

[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

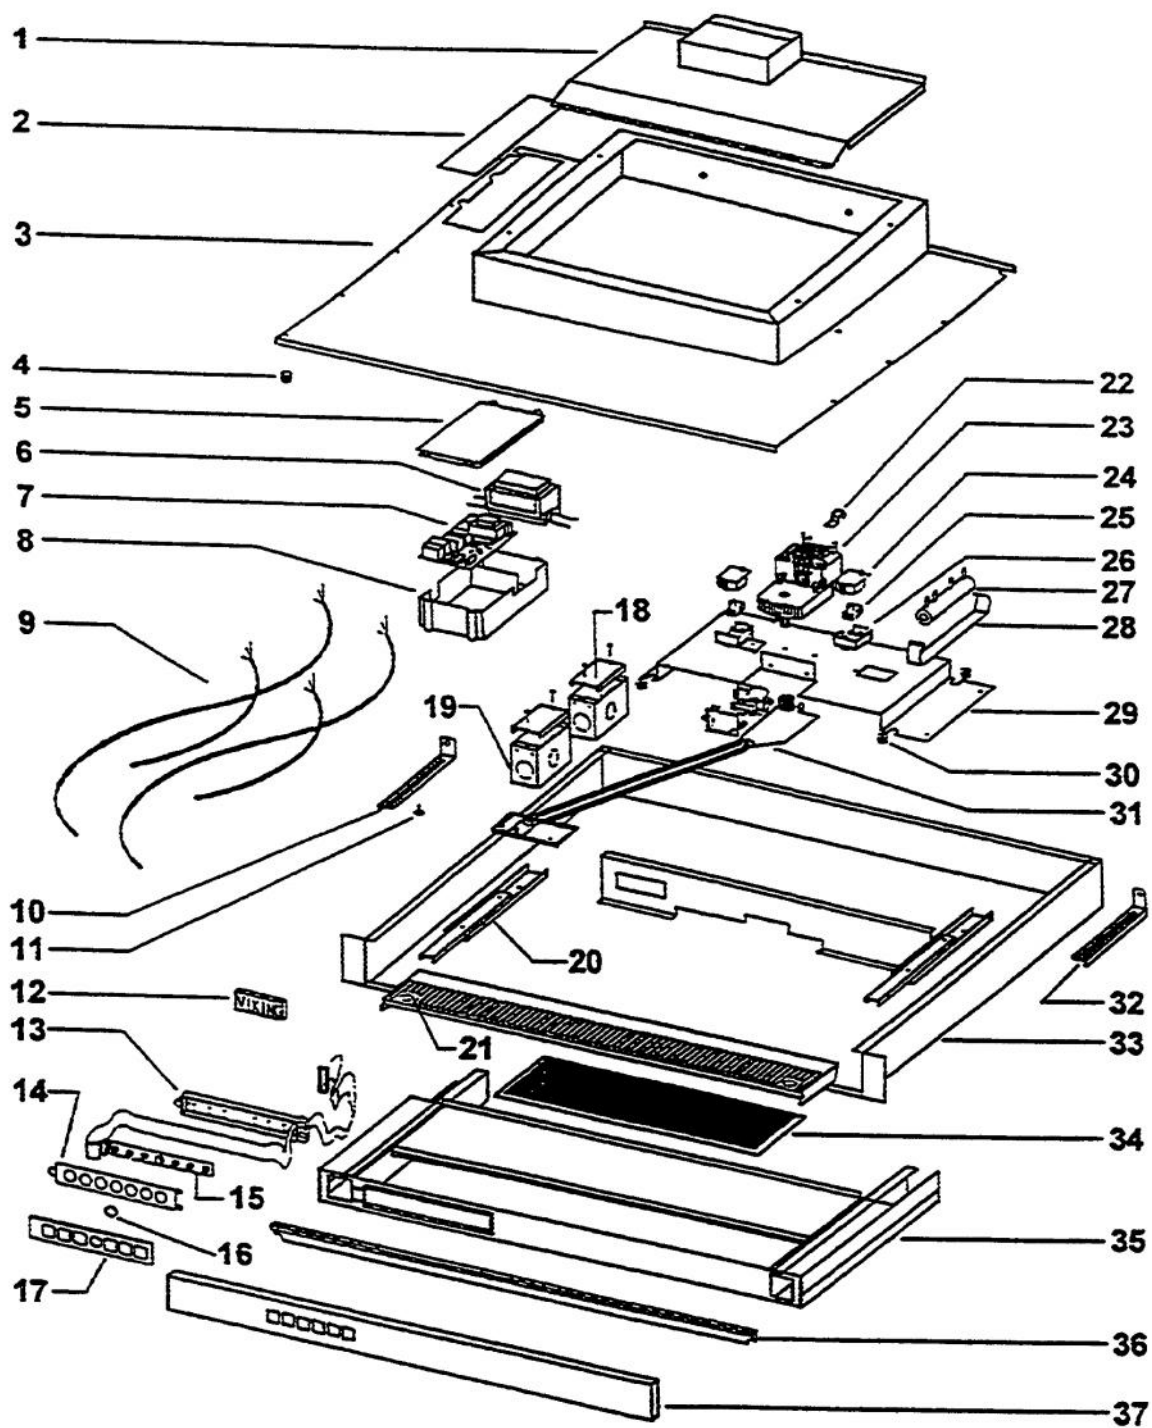

Ref #	Part Number	Qty.	Description
1	PD230001		UPPER CLOSURE PANEL (E3400340)
2	PD230002		POWER CABLE COVER (E3235434)
3	PD230003		CLOSURE PANEL 30 (008088641)
4	PD200001		SPACER 032921910
5	PD230006		ELECTR. P.C. BOARD BOX C. 03294033
6	PD210001		TRANSFORMER (02300672)
7	PD210002		ELECTRICAL P.C. BOARD (08086121)
8	PD230007		ELECTRICAL P.C. BOARD BOX 03292353
9	PD210003		WIRES (04296019)
10	PD230008		BRACKET E3335435
11	PD220001		GASKET VIBRATION DAMPER (03202192)
12	PE010020		LOGO - PROFESSIONAL - VRTR, XBKX ASSY
13	PD230009		SWITCH BOARD BOX COVER (03292352)
14	PD210004		SWITCH BOARD (03292351)
15	PD210005		CONTROLS P.C. BOARD (SB08080108)
16	PD210006		WARNING LIGHT (03292282)
17	PD220002		SWITCH BUTTON (03292281)
18	PD230010		POWER CABLE BOX COVER (E3335140)
19	PD230011		POWER CABLE JUNCTION BOX (E3334250)
20	PD200002		RUNNER BALL (020003530)
21	PD240001		GRILL 30 (E3331924)
22	PD210007		RUNNER WIRES 03290499
23	PD220003		MOTOR
NI	PD200007		TENSION (ROLL) PIN
24	PD230012		MICRO SWITCH BOX COVER (03292350)
25	PD210008		MICRO SWITCH (02300620)
26	PD230013		MICRO SWITCH BOX (03292349)
27	PD210009		RESISTER (02300673)
28	PD210010		RESISTER BLOCK (02000183)
29	PD210011		MOVEMENT BLOCK (E3335401)
30	PD200003		RUBBER WASHER (03202007)
31	PD230014		DISPLAY VISOR PIVOT (08088698)
32	PD230015		LEFT BRACKET (E3335436)
33	PD230016		DISPLAY SUPPORT 30 (008088621)
34	PD220004		GREASE FILTER 30 (08087426)
35	PD240004		DISPLAY VISOR 30 (08088340)
36	PD240007		TRIMMING 30 (E3331922)
37	PD230019BK		FRONT PANEL 30 (BLACK) (003180933)
	PD230019SS		FRONT PANEL 30 XSSX (003180933)
	PD230019WH		FRONT PANEL 30 (WHITE) (003180933)