 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VIPR160 Owner's Manual

[Shop genuine replacement parts for VIKING VIPR160](#)

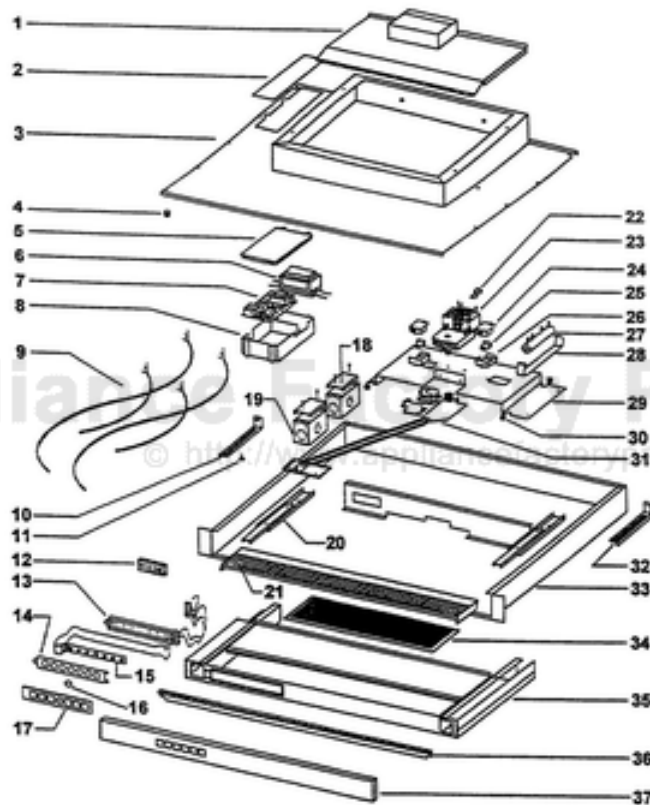

[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

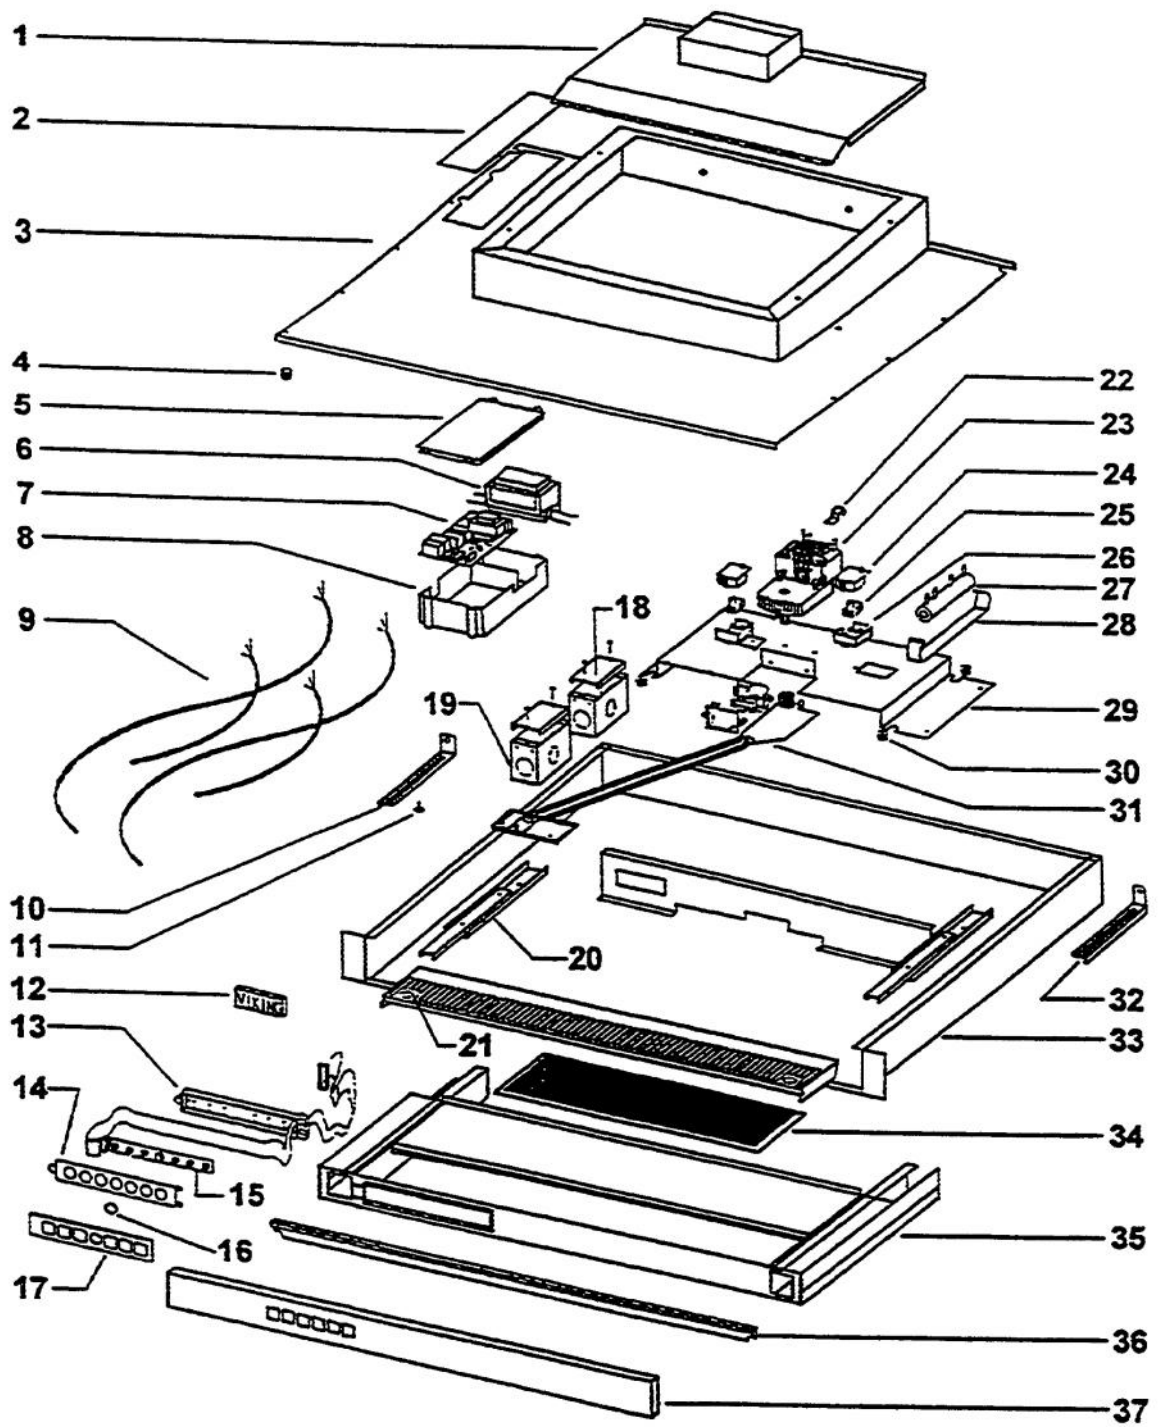

Ref #	Part Number	Qty.	Description
1	PD230001		UPPER CLOSURE PANEL (E3400340)
2	PD230002		POWER CABLE COVER (E3235434)
3	PD230004		CLOSURE PANEL (160)
4	PD200001		SPACER 032921910
5	PD230006		ELECTR. P.C. BOARD BOX C. 03294033
6	PD210001		TRANSFORMER (02300672)
7	PD210002		ELECTRICAL P.C. BOARD (08086121)
8	PD230007		ELECTRICAL P.C. BOARD BOX 03292353
9	PD210003		WIRES (04296019)
10	PD230008		BRACKET E3335435
11	PD220001		GASKET VIBRATION DAMPER (03202192)
12	PE010020		LOGO - PROFESSIONAL - VRTR, XBKX ASSY
13	PD230009		SWITCH BOARD BOX COVER (03292352)
14	PD210004		SWITCH BOARD (03292351)
15	PD210005		CONTROLS P.C. BOARD (SB08080108)
16	PD210006		WARNING LIGHT (03292282)
17	PD220002		SWITCH BUTTON (03292281)
18	PD230010		POWER CABLE BOX COVER (E3335140)
19	PD230011		POWER CABLE JUNCTION BOX (E3334250)
20	PD200002		RUNNER BALL (020003530)
21	PD240002		GRILL (160)
22	PD210007		RUNNER WIRES 03290499
23	PD220003		MOTOR
NI	PD200007		TENSION (ROLL) PIN
24	PD230012		MICRO SWITCH BOX COVER (03292350)
25	PD210008		MICRO SWITCH (02300620)
26	PD230013		MICRO SWITCH BOX (03292349)
27	PD210009		RESISTER (02300673)
28	PD210010		RESISTER BLOCK (02000183)
29	PD210011		MOVEMENT BLOCK (E3335401)
30	PD200003		RUBBER WASHER (03202007)
31	PD230014		DISPLAY VISOR PIVOT (08088698)
32	PD230015		LEFT BRACKET (E3335436)
33	PD230017		DISPLAY SUPPORT (160)
34	PD220005		GREASE FILTER 36 (08087427)
35	PD240005		DISPLAY VISOR 36 (08088342)
36	PD240008		TRIMMING 36 (E3331926)
37	PD230020BK		FRONT PANEL 36 (BLACK) (003180934)
	PD230020SS		FRONT / TOP TRIM (160) (NO LONGER AVAILABLE)
	PD230020WH		FRONT PANEL 36 (WHITE) (003180934)