 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VIPR180 Owner's Manual

[Shop genuine replacement parts for VIKING VIPR180](#)

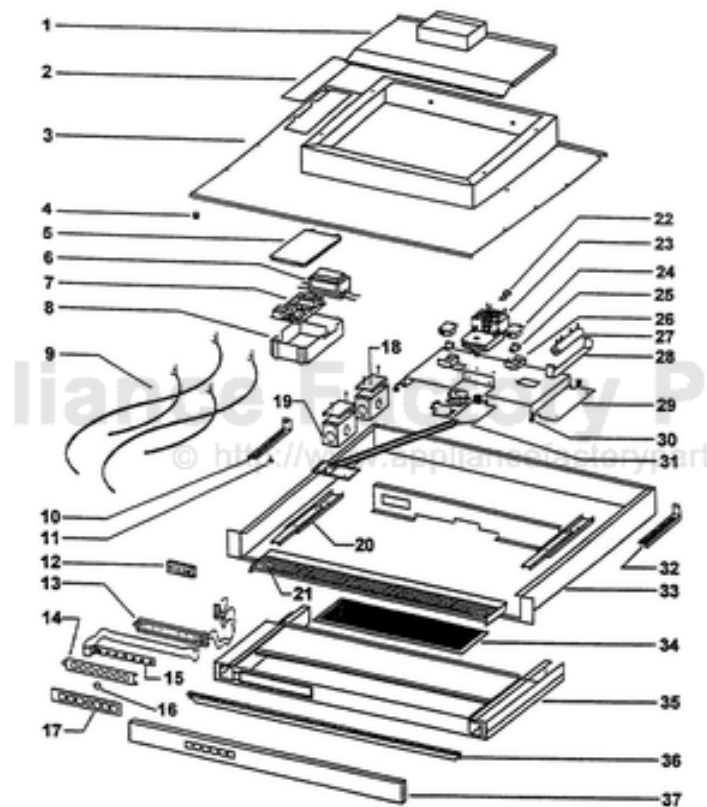

[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

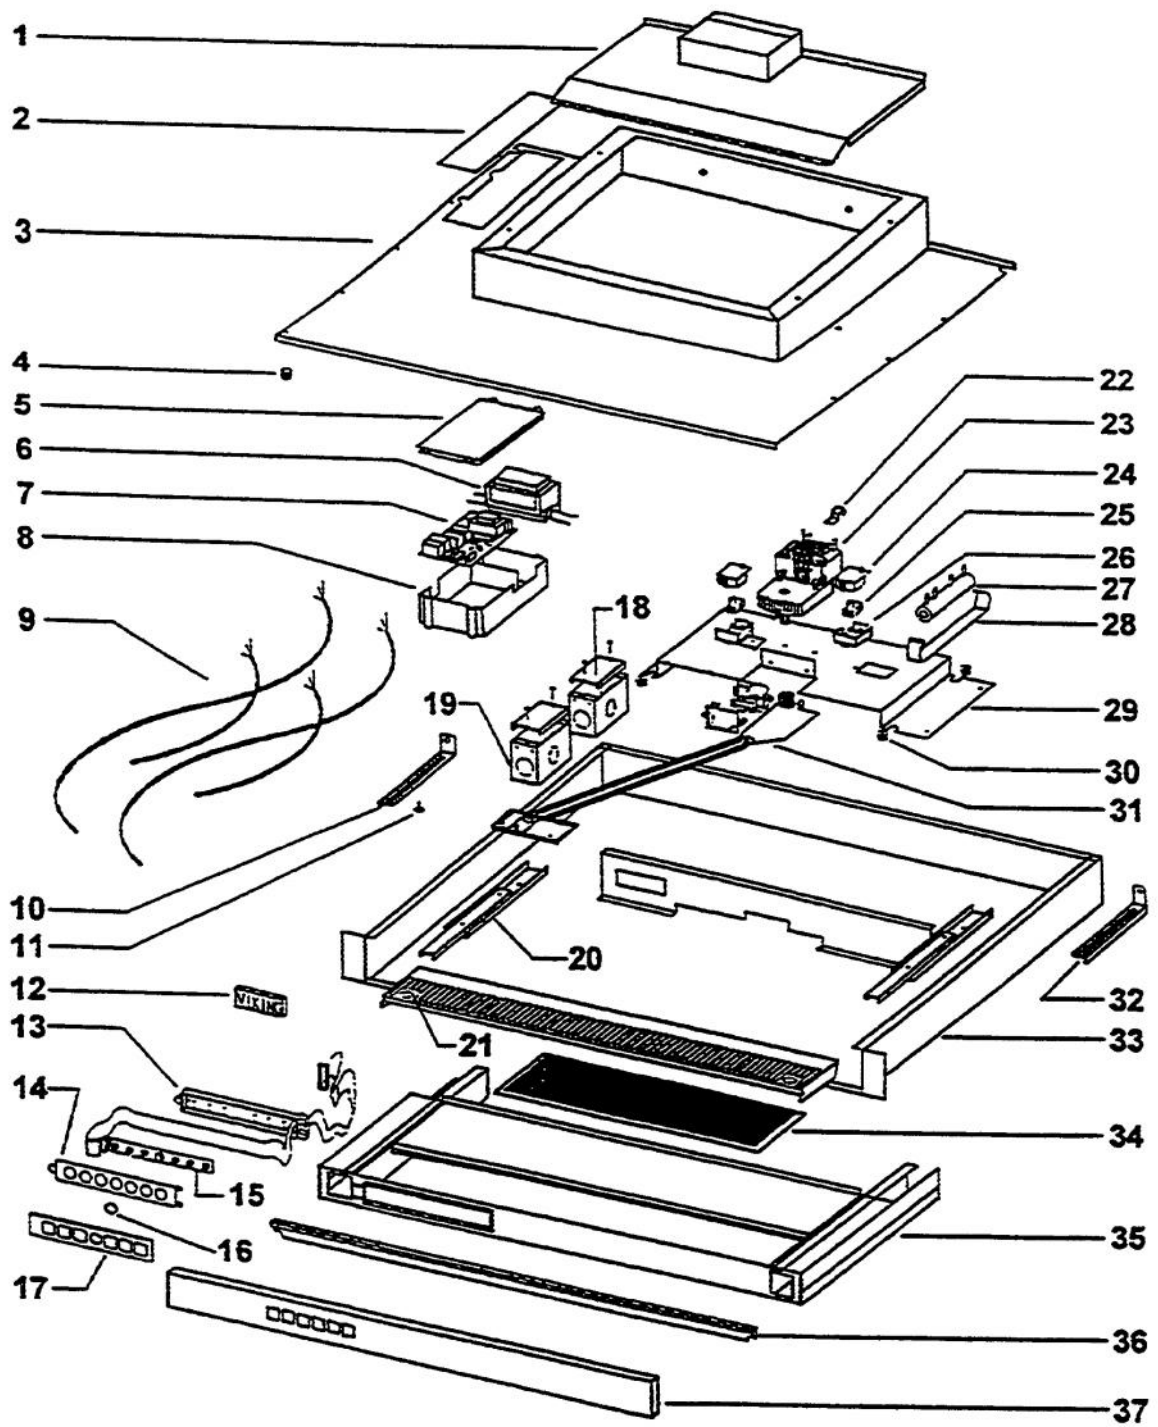

Ref #	Part Number	Qty.	Description
1	PD230001		UPPER CLOSURE PANEL (E3400340)
2	PD230002		POWER CABLE COVER (E3235434)
3	PD230005		CLOSURE PANEL 48 (008088647)
4	PD200001		SPACER 032921910
5	PD230006		ELECTR. P.C. BOARD BOX C. 03294033
6	PD210001		TRANSFORMER (02300672)
7	PD210002		ELECTRICAL P.C. BOARD (08086121)
8	PD230007		ELECTRICAL P.C. BOARD BOX 03292353
9	PD210003		WIRES (04296019)
10	PD230008		BRACKET E3335435
11	PD220001		GASKET VIBRATION DAMPER (03202192)
12	PE010020		LOGO - PROFESSIONAL - VRTR, XBKX ASSY
13	PD230009		SWITCH BOARD BOX COVER (03292352)
14	PD210004		SWITCH BOARD (03292351)
15	PD210005		CONTROLS P.C. BOARD (SB08080108)
16	PD210006		WARNING LIGHT (03292282)
17	PD220002		SWITCH BUTTON (03292281)
18	PD230010		POWER CABLE BOX COVER (E3335140)
19	PD230011		POWER CABLE JUNCTION BOX (E3334250)
20	PD200002		RUNNER BALL (020003530)
21	PD240003		GRILL 48 (E3331932)
22	PD210007		RUNNER WIRES 03290499
23	PD220003		MOTOR
NI	PD200007		TENSION (ROLL) PIN
24	PD230012		MICRO SWITCH BOX COVER (03292350)
25	PD210008		MICRO SWITCH (02300620)
26	PD230013		MICRO SWITCH BOX (03292349)
27	PD210009		RESISTER (02300673)
28	PD210010		RESISTER BLOCK (02000183)
29	PD210011		MOVEMENT BLOCK (E3335401)
30	PD200003		RUBBER WASHER (03202007)
31	PD230014		DISPLAY VISOR PIVOT (08088698)
32	PD230015		LEFT BRACKET (E3335436)
33	PD230018		DISPLAY SUPPORT 48 (008088624)
34	PD220006		GREASE FILTER 48 (08087421)
35	PD240006		DISPLAY VISOR 48 (08088345)
36	PD240009		TRIMMING 48 (E3331930)
37	PD230021BK		FRONT PANEL 48 (BLACK) (003180935)
	PD230021SS		FRONT / TOP TRIM (180)
	PD230021WH		FRONT PANEL 48 (WHITE) (003180935)