

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




VIKING VBCV48381 Owner's Manual

[Shop genuine replacement parts for VIKING
VBCV48381](#)



[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

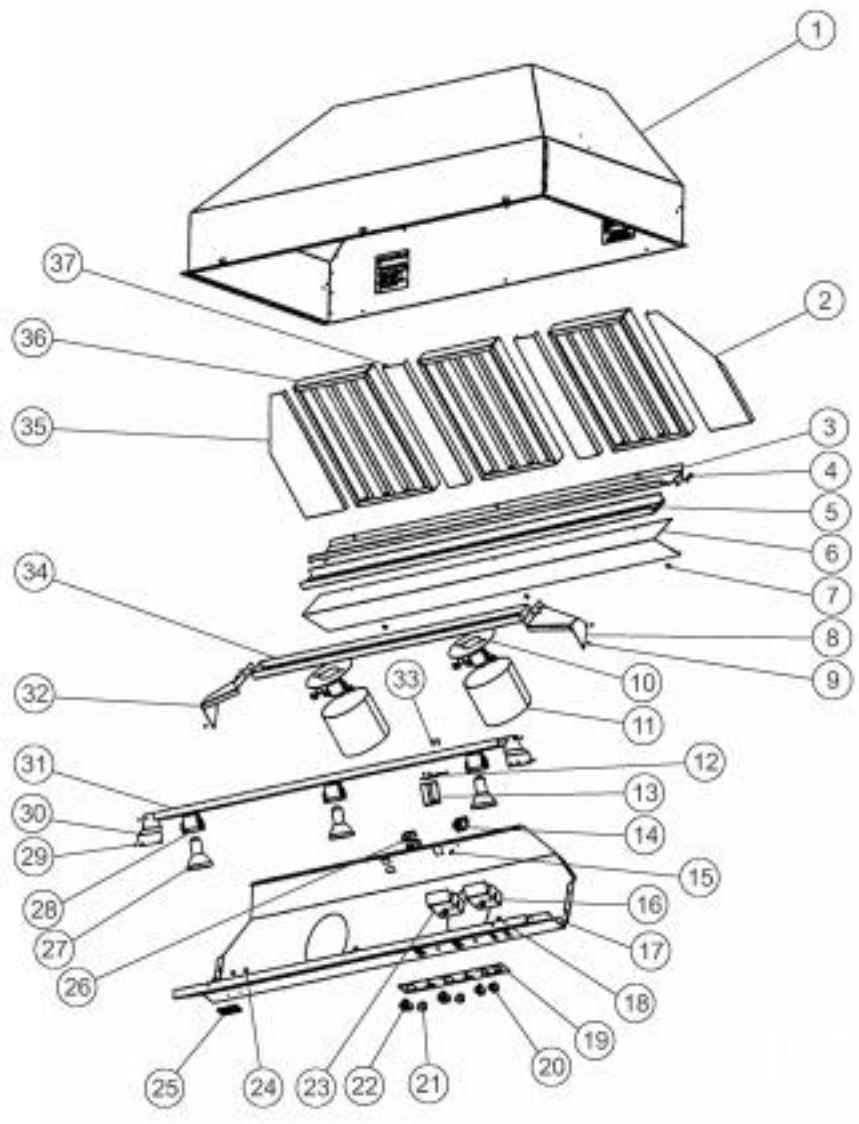

Ref #	Part Number	Qty.	Description
1	UNSERVICEABLE	1	OVEN CAVITY, ASM 36
2	B20011006	1	RH SIDE SPACER (VBCV48)
3	B20010299	1	REAR FILTER SUPPORT TOP (VBCV48)
4	PD020032	4	SRW-8(A)X3/8PH.WFR HD 7/16DIAXNICL
5	B2003906	1	GREASE TROUGH (VWH4848/78)
6	B20011021	1	FILTER SUPPORT BTM (VCWH48)
7	PD020087	17	10 X 1/2 PAN PH. TEK ZINC
8	A2009301	1	RH LIGHT SUPPORT TOP (VCWH)
9	PC040010	20	POP RIVET
10	A2003889	2	COWLING BRKT
11	B2003888	2	HEAT LAMP COWLING (18 HIGH HOODS)
12	B2003837	1	HEAT SENSOR BRKT
13	A2103810	1	THERMODISC BRACKET
14	PE070197	1	MALE SOCKET (3 PRONG)
15	PD020010	1	10 X 3/8 GREEN GROUNDING SCREW
16	PE050156	1	PRO BLOWER CONTROL
17	B20011000	1	CONTROL PANEL (VBCV48)
18	PD030010	2	NO.10-24 KEPS NUT
19	PE040134	1	CONTROL PANEL PLATE
20	PE050048	2	FAN/LIGHT SWITCH (HOODS) EP0M11J
21	PA010071	2	LIGHT/MOTOR CONTROLLER KNOB
22	PE050050	1	HEAT LAMP SWITCH (A111B1100000)
23	PE050141	1	PRO LIGHT CONTROL
24	PD030006	2	CAPPED WASHER PAL NUT
25	PE010165	1	VIKING CHROME PLATE LOGO
26	PE070196	2	FEMALE SOCKET (2 PRONG)
27	PE050034	3	HALOGEN BULB 50W
29	013549-000	3	LIGHT SOCKET (125C LEADS)
30	A20011005	2	BOTTOM LIGHT SUPT BRKT (VWH/VBCV/VCWH)
32	A20011004	1	BOTTOM LIGHT SUPT (VWH/VBCV/VCWH48)
33	A2009300	1	LH LIGHT SUPPORT TOP (VCWH)
34	A2009305	1	LIGHT SUPPORT TOP (VCWH4848)
35	B20011007	1	LH SIDE SPACER (VBCV48)
36	G3108724	3	BAFFLE FILTER ASSY (VWH2448) 9.625 X 14
37	B20012419	2	FILTER SPACER VBCV4838
NI	PE070367	1	VWH4848/78 - 5448/78 WIRING HARNESS
NI	PE070204	1	HEYCO STRAIN RELIEF - 7-P2
NI	019561-000	1	ENCLOSED JUNCTION BOX
NI	PE070205	1	3 PRONG FEMALE SUPPLY CORD
NI	PJ030014	1	HEAT SENSOR (N.O.) 160 DEG.