

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VGRT302 Owner's Manual

[Shop genuine replacement parts for VIKING VGRT302](#)






[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)

----- Manual continues below -----

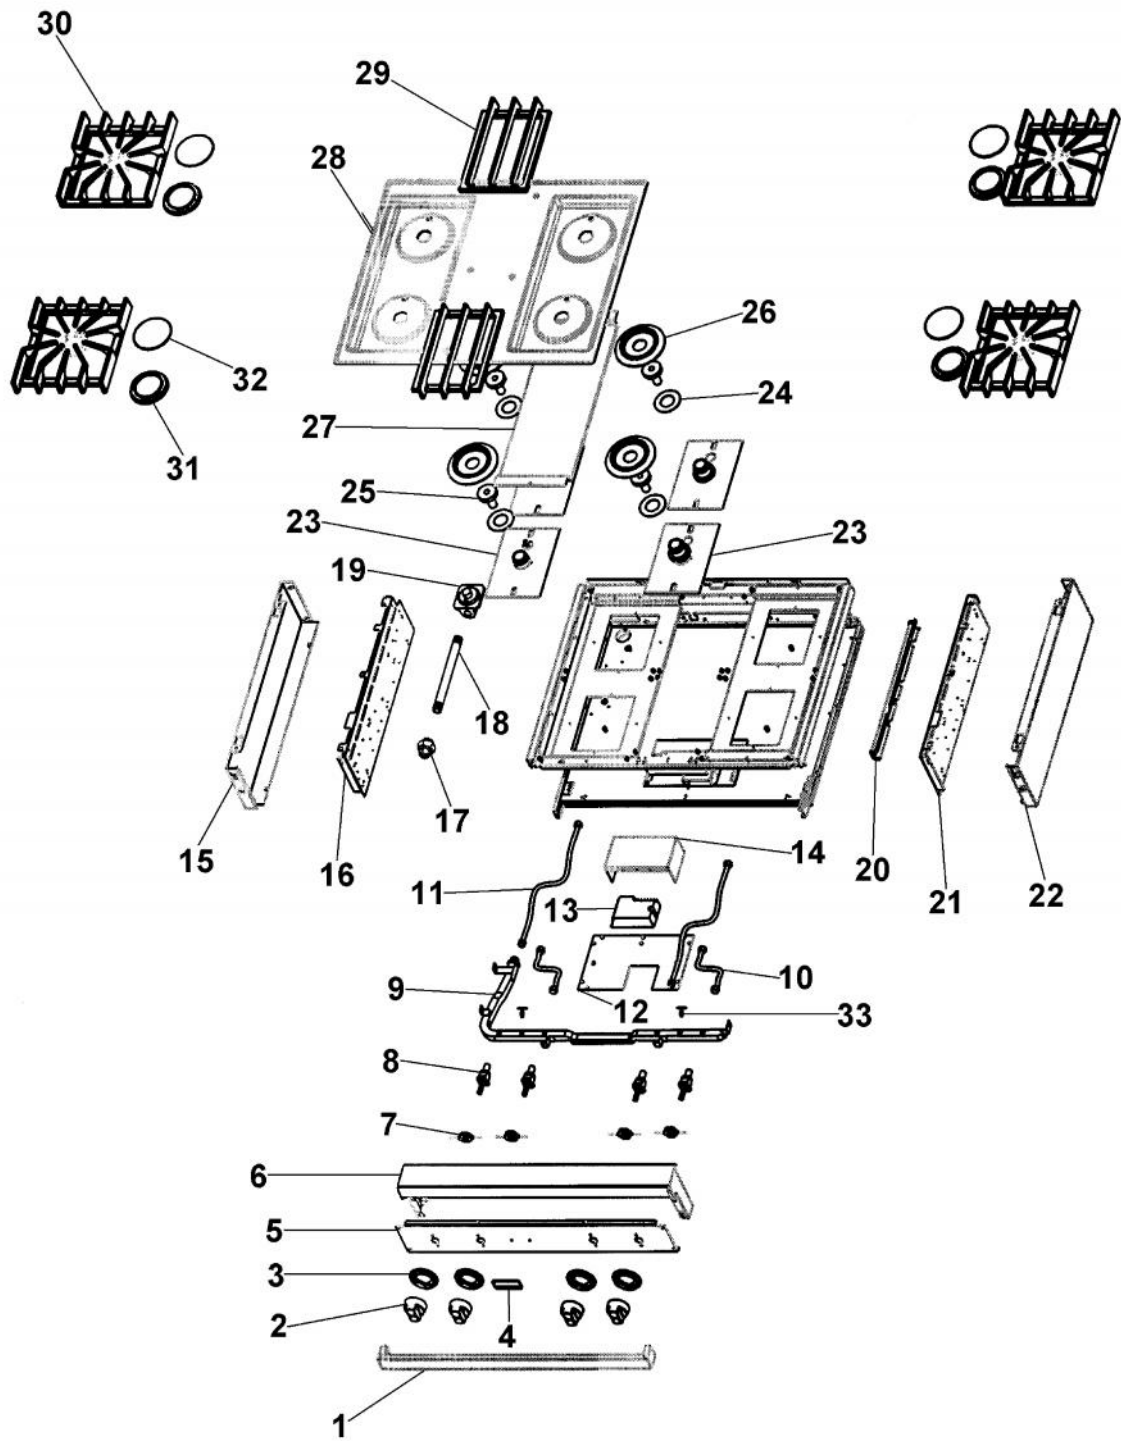

Ref #	Part Number	Qty.	Description
1	B2006772		FALSE TRAY HANDLE - SS
	C9306772BR		FALSE TRAY HANDLE - 6B (BR)
2	PB010206		VGSC,VGRC,VGRT TOP BURNER KNOB(BK)
	PB010207		VGSC,VGRC,VGRT TOP BURNER KNOB(WH)
3	PB010208		BEZEL, CHROME PLATE
	PB010209		BEZEL BRASS
4	PE010142		3 LOGO XBKXXCHROME
	PE010143		3 LOGO BK/BR
	PE010144		3 LOGO XWHXCHROME
	PE010145		LOGO - WH / BR
5	B9201332		CTRL PAN-VGRT300-4BSS XSLK SCRXX
6	G3006766		SEALED LANDING LEDGE ASSY
7	PA020015		SPARK IGNITION SWITCH
	PA020045		IGNITOR SWITCH
8	G50012679		SEALED BURNER VALVE KIT
	PA010158		SUB TO 003517-000 - SEALED BURNER FLARE VALVE
9	PA050113		MANIFOLD
10	PB020192		10 FLEX TUBING W/CONNECTORS
11	PB020193		16 FLEX TUBING W/CONNECTORS
12	A1006737		DOOR LOCK ACCESS PANEL-SEALED
13	PA020041		TYTRONICS 0+4 SPARK MODULE
14	A2008210		COVER BOX
15	B2001920		SIDE PANEL-LH (VGRT)
16	A2006748		BURNER BOX SIDE LH (VDSC3074B)
17	PA050080		1/2" THREADED PIPE UNION
18	PB020162		1/2 NPT STEEL PIPE-10 1/8
19	PA070001		PRESSURE REGULATOR (NAT.)
20	A2000210		WIRE CHANNEL
21	A2006747		BURNER BOX SIDE RH (VDSC3074B)
22	B2001919		SIDE PANEL-RH (VGRT)
23	G3206743		BURNER BODY ASSY (VDSC3074B)
24	PB070124		GASKET (VDSC3074B) REPLACED BY PB050081
25	PA010100		VENTURI D (VDSC3074B)
26	PB050062		BURNER BASE
NI	PB040264		GLAZED ELECTRODE REPLACED BY PB050081
27	A2006744		CENTER SUPPORT (VDSC3074B)
28	G3206723AL		MAIN TOP WELD ASSY. - AL (BEFORE 6/11/03)
	G3206723		30 MAIN TOP ASSY (VDSC3074B)
	G3206723BT		MAIN TOP WELD ASSY. - BT (BEFORE 6/11/03)
	G3206723CB		MAIN TOP WELD ASSY. - CB (BEFORE 6/11/03)
	G3206723EP		MAIN TOP WELD ASSY. - EP (BEFORE 6/11/03)
	G3206723FG		MAIN TOP WELD ASSY. - FG (BEFORE 6/11/03)
	G3206723GG		MAIN TOP WELD ASSY. - GG (BEFORE 6/11/03)
	G3206723LE		MAIN TOP WELD ASSY. - LE (BEFORE 6/11/03)
	G3206723MJ		MAIN TOP WELD ASSY. - MJ (BEFORE 6/11/03)
	G3206723SG		MAIN TOP WELD ASSY. - SG (BEFORE 6/11/03)
	G3206723VB		MAIN TOP WELD ASSY. - VB (BEFORE 6/11/03)
	G3206723WH		30 MAIN TOP ASSY (VDSC3074B)
	E9107413AL		MAIN TOP WELD ASSY. - AL (AFTER 6/11/03)
	E9107413BK		MAIN TOP 30 XBKX
	E9107413BT		MAIN TOP WELD ASSY. - BT (AFTER 6/11/03)
	E9107413CB		MAIN TOP WELD ASSY. - CB (AFTER 6/11/03)
	E9107413EP		MAIN TOP WELD ASSY. - EP (AFTER 6/11/03)
	E9107413FG		MAIN TOP WELD ASSY. - FG (AFTER 6/11/03)
	E9107413GG		MAIN TOP WELD ASSY. - GG (AFTER 6/11/03)
	E9107413LE		MAIN TOP WELD ASSY. - LE (AFTER 6/11/03)
	E9107413MJ		MAIN TOP WELD ASSY. - MJ (AFTER 6/11/03)
	E9107413SG		MAIN TOP 30 XSGX
	E9107413VB		MAIN TOP WELD ASSY. - VB (AFTER 6/11/03)
	E9107413WH		MAIN TOP 30 XWHX

Ref #	Part Number	Qty.	Description
29	E9107413WH PA060060 PA060061		MAIN TOP 30 XWHX SEALED COOKTOP CENTER GRATE XBKX SEALED COOKTOP CENTER GRATE GRAY
30	PA060054 PA060062		SEALED GRATE XBKX SEALED GRATE GRAY
31	PB050063		BURNER HEAD
32	PA080045		BURNER CAP - BK?
33	PA010012		ROPER PLUG
NI	G50013868		VGRT302 BURNER SUPPORT SERVICE KIT

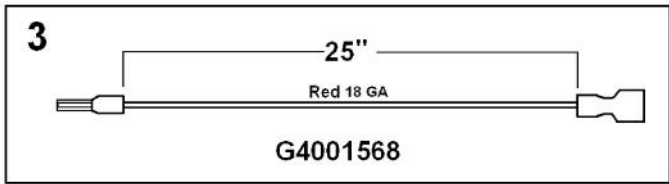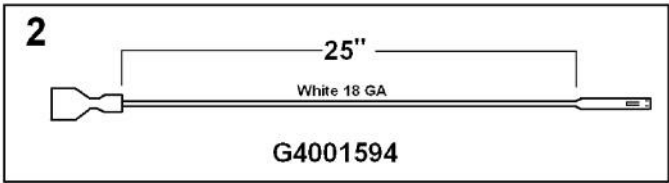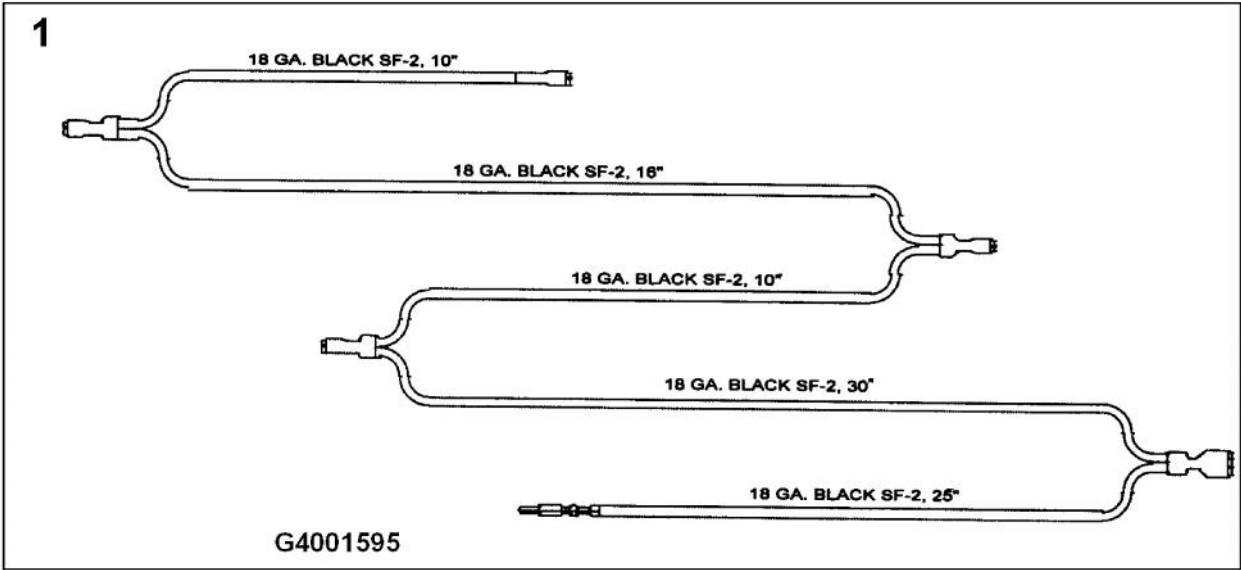   

Ref #	Part Number	Qty.	Description
1	G4001595		WIRE HARNESS (LINE) (VGRT3004B)
2	G4001594		WIRE ASSY XALX VGRT3004B
3	G4001568		SPARK SWTXBUX67.5