

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
# VIKING VESO177 Owner's Manual

[Shop genuine replacement parts for VIKING VESO177](#)




[Find Your VIKING Oven Parts - Select From 98 Models](#)


----- Manual continues below -----

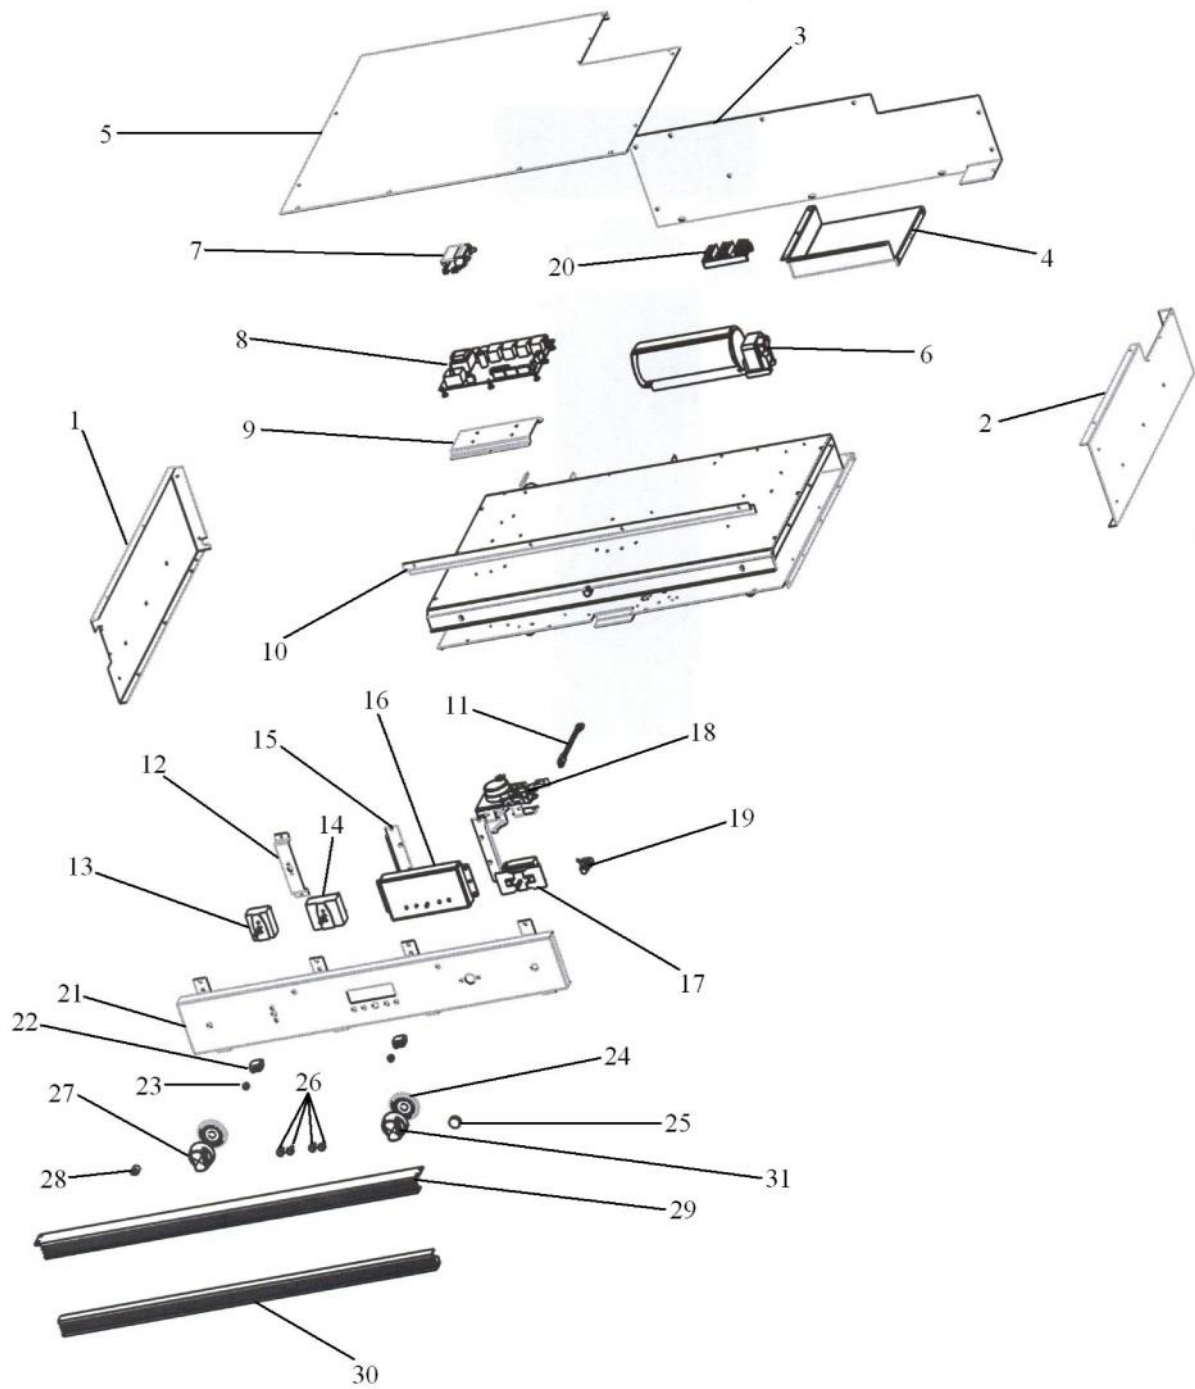


Ref #	Part Number	Qty.	Description
1	A2007699		CABINET SIDE LH
2	A2007698		CABINET SIDE RH
3	A2008558		27 TOP REAR COVER
4	A2008543		TOP CHANNEL
5	A2008556		27 CABINET TOP
6	PE050087		BLOWER ASSEMBLY - DESIGNER SERIES
7	PJ030002		AUTO RESET (SELF-CLEAN) VDSC
8	PE070472		ELECTRONIC CONTROL BOARD
9	A2009884		AUTO RESET BRACKET
10	E9108559		TOP VENT COVER 27
11	PE050059		HI-LIMIT SWITCH
12	A2008526		SELECTOR BRACKET
13	PJ030011		SWITCH (2-POSITION) VESO105
14	PJ030001		SELECTOR SWITCH (8-POSITION) VDSC
15	A2008527		CLOCK BRACKET
16	PE050213		PRO 120V DIGITAL CLOCK
17	PJ030037		SUB TO PS500033 - SELF CLEAN THERMOSTAT
18	PE050112		DOOR LATCH
19	PE050019		OVEN LIGHT SWITCH (VGSO166) 90-DEG.
20	PE070147		TERMINAL BLOCK
21	B9208563		27 SINGLE CONTROL PANEL
	C9208563BK		27 SINGLE CONTROL PANEL XBKX
	C9208563WH		27 SINGLE CONTROL PANEL XWHX
22	PE050024		OVEN IND. LIGHT (LIGHT HOUSING)
23	PE050023		OVEN IND. LIGHT (LENS & BEZEL)
24	PB010152		KNOB BEZEL-CHROME (30 B-IN OVEN)
	PB010153		KNOB BEZEL-XBRX (30 B-IN OVEN)
25	PB010163		OVEN LIGHT SWITCH KNOB BK
	PB010164		OVEN LIGHT SWITCH KNOB XWHX (VESO/D
26	PB010248		CLOCK BUTTON
	PB010249		PUSH BUTTON WHITE
27	PB010148		SELECTOR KNOB-XBKX (30DOUBLE OVEN
	PB010149		SELECTOR KNOB-XWHX (30 B-IN OVEN)
28	PB010165		TIME MANUAL KNOB XBKX (VESO/VEDO)
	PB010166		TIME MANUAL KNOB XWHX (VESO/VEDO)
29	PE040085		TOP EXTRUSION (27/VESO/DO)
30	PE040217		LOWER CONTROL PANEL EXTRUSION
31	PB010150		T/STAT KNOB-XBKX (30 B-IN OVEN)
	PB010151		T/STAT KNOB-XWHX (30 B-IN OVEN)

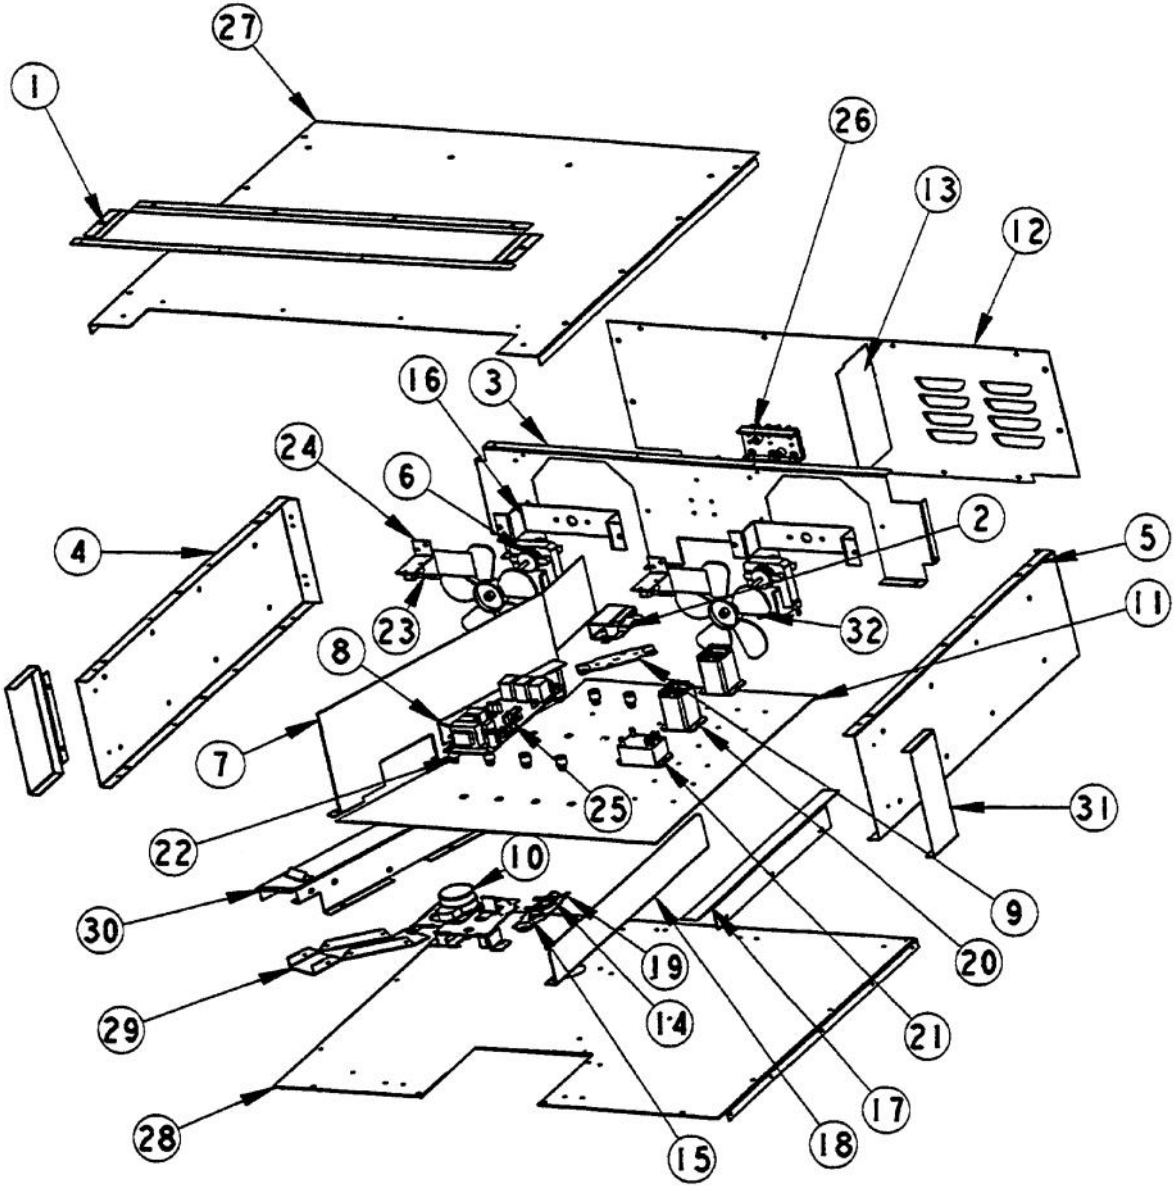 

Ref #	Part Number	Qty.	Description
1	E9104321		AIR VENT (27 OVEN)
2	PJ030002		AUTO RESET (SELF-CLEAN) VDSC
3	A2004310		CABINET BACK (VESO176/DO276)
4	A2002906		CABINET SIDE
5	A2002965		CABINET SIDE RH (VESO105)
6	PE110024		MOTOR FAN Y0042226
7	A2002950		DIVIDER - VESO/VEDO
8	A2002956		FLOOR BRACE - VEDO205/VESO105
9	A1002456		THERMO-DISC BRKT (VDSC)
10	PE050112		DOOR LATCH
11	A2004312		FALSE FLOOR - 27 (VESO176/DO276)
12	A1004320		FAN COVER (VESO176)
13	A2002948		FAN DIVIDER - VESO/VEDO
14	PE050059		HI-LIMIT SWITCH
15	PJ030022		HIGH LIMIT SWITCH
16	A2002911		FAN MTG BRKT
17	A2002952		FLOOR BRACE - VESO/VEDO
18	A2002951		FLOOR SUPT - VESO/VEDO
19	A1002456		THERMO-DISC BRKT (VDSC)
20	PM010029		RELAY (DOUBLE POLE-DOUBLE THROW)TEM
21	PM010129		RELAY
22	PD030033		GROMMET NUT-ROUND HD. NO.8 X .500DIA.
23	PE070246		20 WATT 100 OHM RESISTOR
24	PE050001		TERMINAL BOARD
25	PE070148		SELF-CLEAN BOARD/TIMER (VDSC)
26	PE070147		TERMINAL BLOCK
27	A2004318		TOP COVER (VESO176/DO276)
28	G3008412		TOP INSULATION RETAINER ASSY
29	A2002909		VENT BTM
30	A2002910		VENT TOP
31	A2002954		CABINET COVER
32	PE110031		BLADE FAN Y0314548

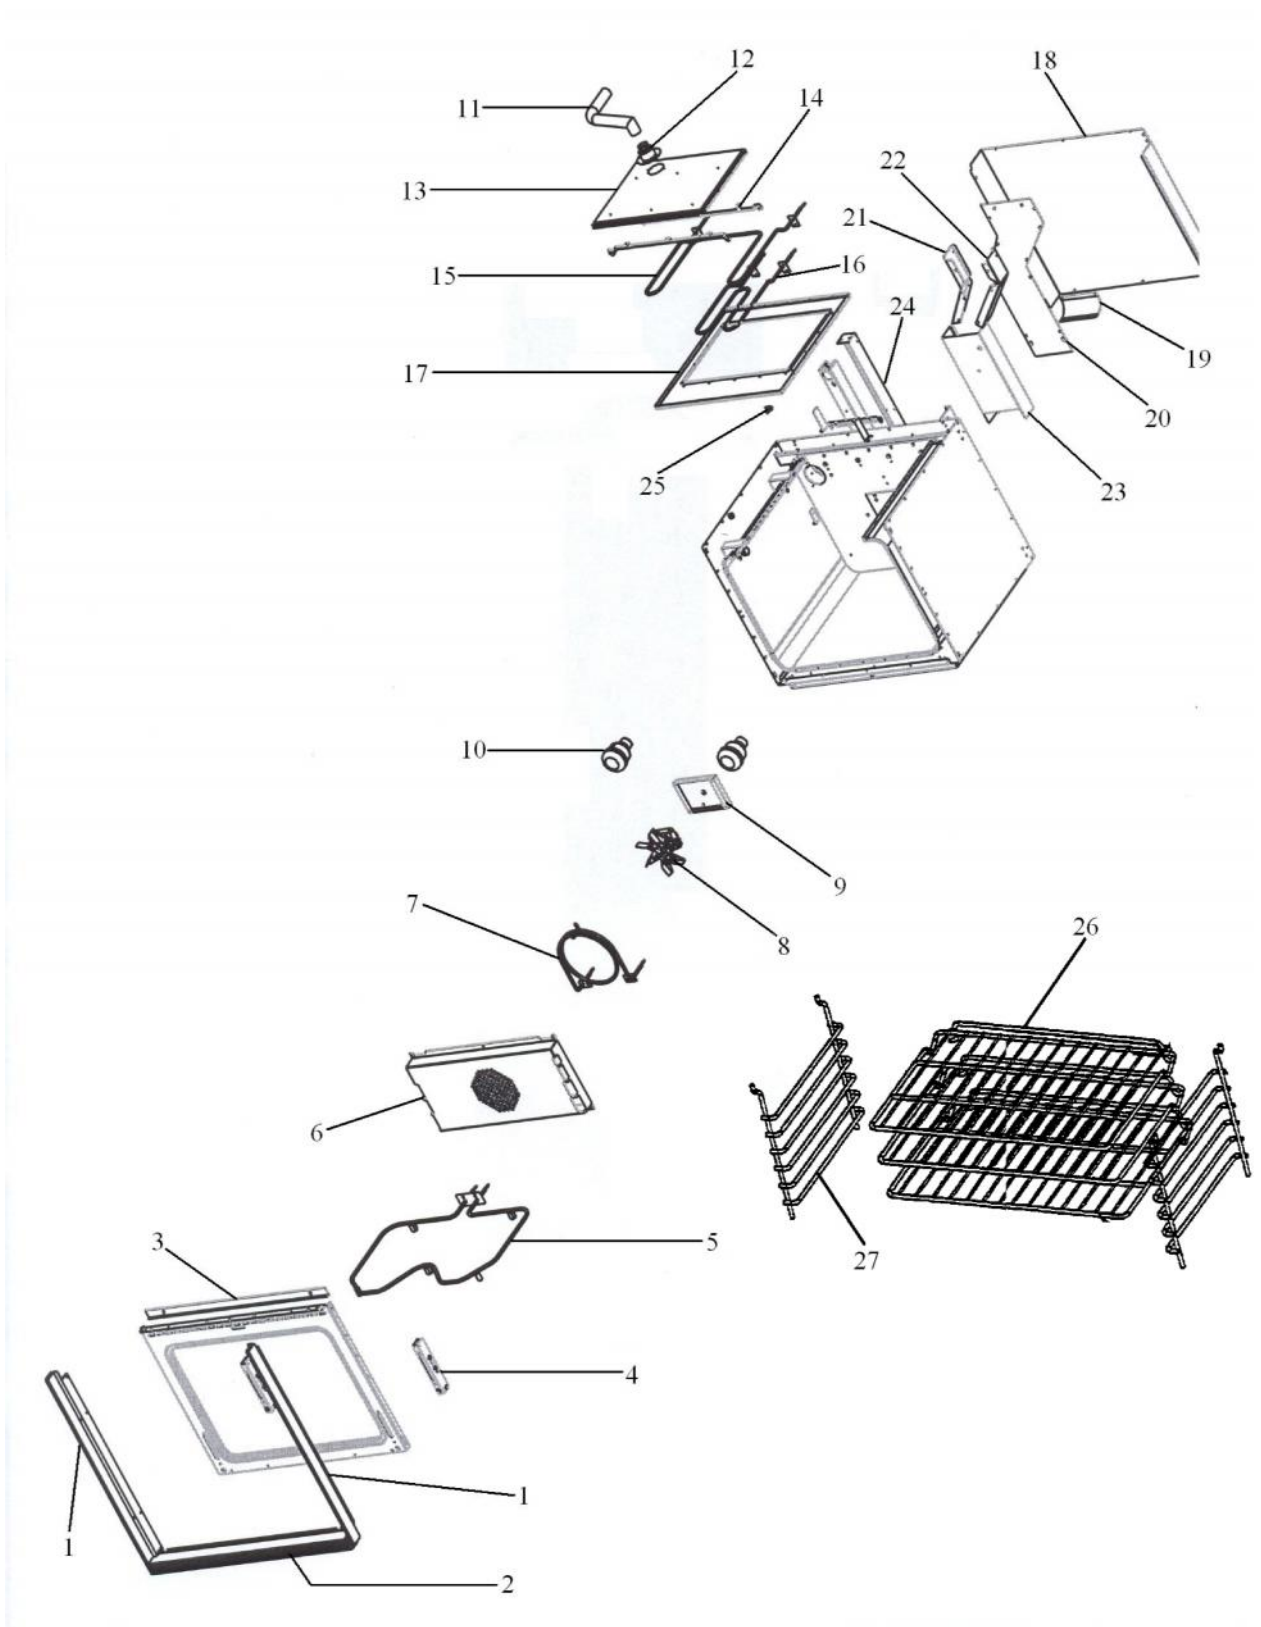 


Ref #	Part Number	Qty.	Description
1	PE040071		SIDE TRIM-EXTRUDED (VESO105)
2	PE040219		BOTTOM TRIM
3	H9108575		27 UPPER FRONT FRAME ASSY
4	PC020016		HINGE RECEIVER (VEDO/VEDO)
5	PJ010012		BAKE ELEMENT (VESO176/VEDO276)240V
6	E9104309		CONVECTION FAN COVER
7	PJ010003		CONVECTION ELEMENT (VDSC) 240V
8	PE050005		CONVECTION FAN ASSY
9	A2002595		CONVECTION FAN BOX (VDSC)
10	PE050009		OVEN LIGHT SOCKET - 36 BUILT-IN
11	PB020117		DESIGNER OVEN VENT
12	PM010014		SMOKE ELIMINATOR (VDSC)
13	B2004311		BROILER TOP (27) (VESO176/DO276)
14	B2004315		BROIL ELEMENT BRKT (VESO176/DO276)
15	PJ010011		OUTSIDE BROIL ELEMENT (27 OVEN)240
16	PJ010001		BROIL ELEMENT 240V
17	E9104302		OVEN TOP (VEDO276/VESO176)
18	A2007877		27 UPPER OUTER BACK
19	A2006182		AIR SCOOP
20	A1006190		SINGLE OVEN COVER PLATE
21	A2006324		VENT SIDE LH
22	A2006323		VENT SIDE RH
23	A2006326		LOWER AIR VENT SINGLE
24	A2006189		SINGLE OVEN FLUE COVER
25	PJ030002		AUTO RESET (SELF-CLEAN) VDSC
26	PB060048		OVEN RACK - 27
27	PB060030		RACK SUPT REPL PB060010
NI	PE050115		MEAT PROBE JACK
NI	PM010160		MEAT PROBE JACK COVER

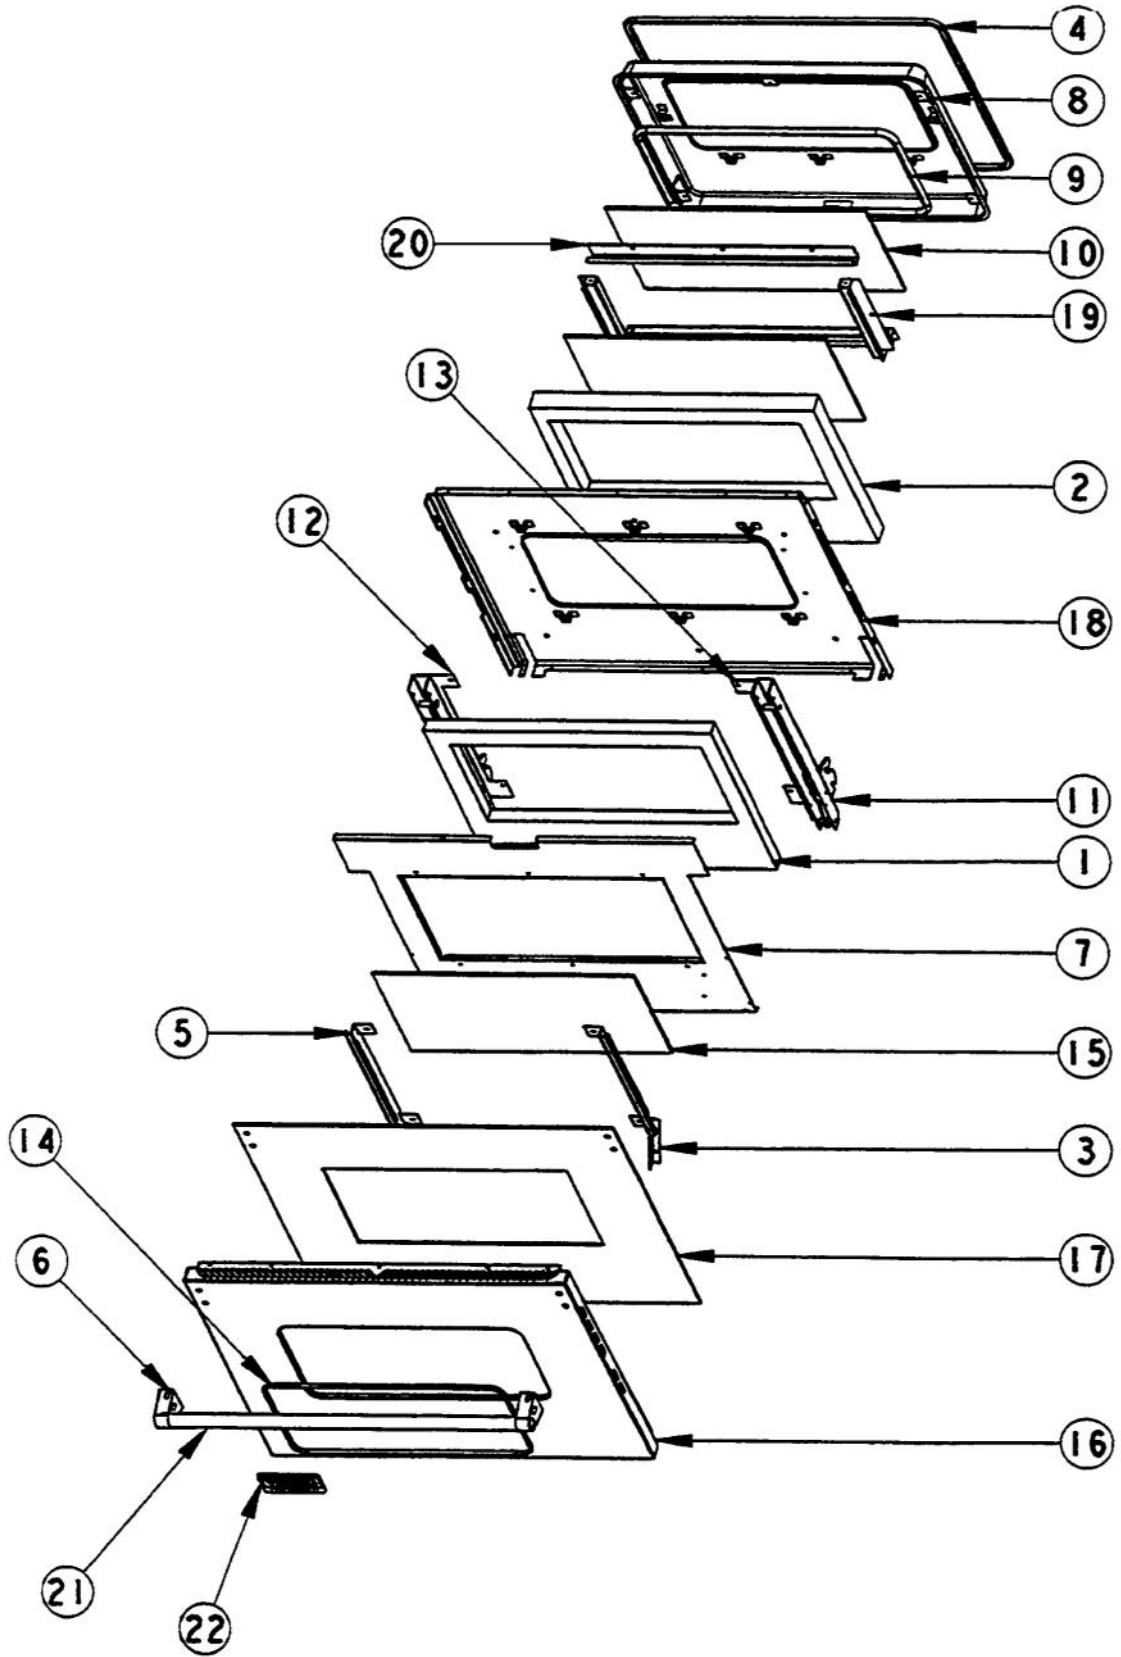 


Ref #	Part Number	Qty.	Description
NI	G3204338AL		DOOR ASSY XALX (VESO176/DO276)
	G3204338ALBR		DOOR ASSY XAL/BRX (VESO176/DO276)
	G3204338BK		DOOR ASSY XBKX (VESO176/DO276)
	G3204338BKBR		DOOR ASSY XBK/BRX (VESO176/DO276)
	G3204338BT		DOOR ASSY XBTX (VESO176/DO276)
	G3204338BTBR		DOOR ASSY XBT/BRX (VESO176/DO276)
	G3204338BU		DOOR ASSY XBUX (VESO176/DO276)
	G3204338BUBR		DOOR ASSY XBU/BRX (VESO176/DO276)
	G3204338CB		DOOR ASSY XCBX (VESO176/DO276)
	G3204338CBBR		DOOR ASSY XCB/BRX (VESO176/DO276)
	G3204338EP		DOOR ASSY XEPX (VESO176/DO276)
	G3204338EPBR		DOOR ASSY XEP/BRX (VESO176/DO276)
	G3204338FG		DOOR ASSY XFGX (VESO176/DO276)
	G3204338FGBR		DOOR ASSY XFG/BRX (VESO176/DO276)
	G3204338GG		DOOR ASSY XGGX (VESO176/DO276)
	G3204338GGBR		DOOR ASSY XGG/BRX (VESO176/DO276)
	G3204338LE		DOOR ASSY XLEX (VESO176/DO276)
	G3204338LEBR		DOOR ASSY XLE/BRX (VESO176/DO276)
	G3204338MJ		DOOR ASSY XMJX (VESO176/DO276)
	G3204338MJBR		DOOR ASSY XMJ/BRX (VESO176/DO276)
	G3204338SG		DOOR ASSY XSGX (VESO176/DO276)
	G3204338SGBR		DOOR ASSY XSG/BRX (VESO176/DO276)
	G3204338SS		DOOR ASSY XSSX (VESO176/DO276)
	G3204338SSBR		DOOR ASSY XSS/BRX (VESO176/DO276)
	G3204338VB		DOOR ASSY XVBX (VESO176/DO276)
	G3204338VBBR		DOOR ASSY XVB/BRX (VESO176/DO276)
	G3204338WH		DOOR ASSY XWHX (VESO176/DO276)
	G3204338WHBR		DOOR ASSY XWH/BRX (VESO176/DO276)
1	PB070034		INSULATION-TRS-10 1 X 20 X 3`
2	PB070038		TRS-10 2 X 24 X 3` INSULATION
3	A2002497		DOOR GUIDE ANGLE VDSC
4	PB070041		SUB TO 000623-000 - DOOR GASKET(3/8DIA.) (VDSC)
5	A2002367		DOOR GLASS BRKT
6	PE030001		BRACKET, DOOR, HANDLE
	PE030001PVD		END CAP DOOR HANDLE XBR
7	A2004332		DOOR INSULATION RETAINER (27OVEN)
8	G50010124		VESO176/VEDO276 DR LINER SVC-KIT
9	PB070040		FIBERGLASS ROPE
10	PE060023		HEAT TREATED DR GLASS(27WALL OVEN)
11	PC020188		DOOR HINGE
12	A2008437		HINGE BRACKET - LH
13	A2002962		HINGE BRACKET - RH (VEDO/VESO)
14	PE060050		J-MOLD XCHROMEX (27 OVEN)
	PE060051		J-MOLD XBRX (27 OVEN)
15	PE060022		OUTER DOOR GLASS (27 WALL OVEN)
16	B2004326		OUTSIDE DOOR PANEL(VEDO276/VESO176)
	C9004326AL		OUTER DOOR PAN XALX (27OVEN)
	C9004326BK		OUTER DOOR PAN XBKX (27OVEN)
	C9004326BT		OUTER DOOR PAN XBTX (27OVEN)
	C9004326BU		OUTER DOOR PAN XBUX (27OVEN)
	C9004326CB		OUTER DOOR PAN XCBX (27OVEN)
	C9004326EP		OUTER DOOR PAN XEPX (27OVEN)
	C9004326FG		OUTER DOOR PAN XFGX (27OVEN)
	C9004326GG		OUTER DOOR PAN XGGX (27OVEN)
	C9004326LE		OUTER DOOR PAN XLEX (27OVEN)
	C9004326MJ		OUTER DOOR PAN XMJX (27OVEN)
	C9004326SG		OUTER DOOR PAN XSGX (27OVEN)
	C9004326VB		OUTER DOOR PAN XVBX (27OVEN)
	C9004326WH		OUTER DOOR PAN XWHX (27OVEN)
17	J1004330		DOOR HEAT SINK (VESO176/DO276)

Ref #	Part Number	Qty.	Description
17	J1004330		DOOR HEAT SINK (VESO176/DO276)
18	G50010124		VESO176/VEDO276 DR LINER SVC-KIT
19	E9102179		WINDOW LINER-SIDE (VDSC)
20	E9102178		WINDOW LINER-TOP/BTM (VDSC)
21	PE030074		DOOR HANDLE SS (27 WALL OVEN)
	PE030075		DOOR HANDLE BR (27 WALL OVEN)
22	PE010016		NAMEPLATE, LOGO, PRO
	PE010017		LOGO (VGSO,VEDO,VGDO,VUD) XWH/CHR
	PE010079		4.5 LOGO/VIKING PROF, BK/BR
	PE010080		4.5 LOGO/VIKING PROF XWH/BR
NI	B1009167		HINGE CLIP
NI	PD020032		SRW-8(A)X3/8PH.WFR HD 7/16DIAXNICL

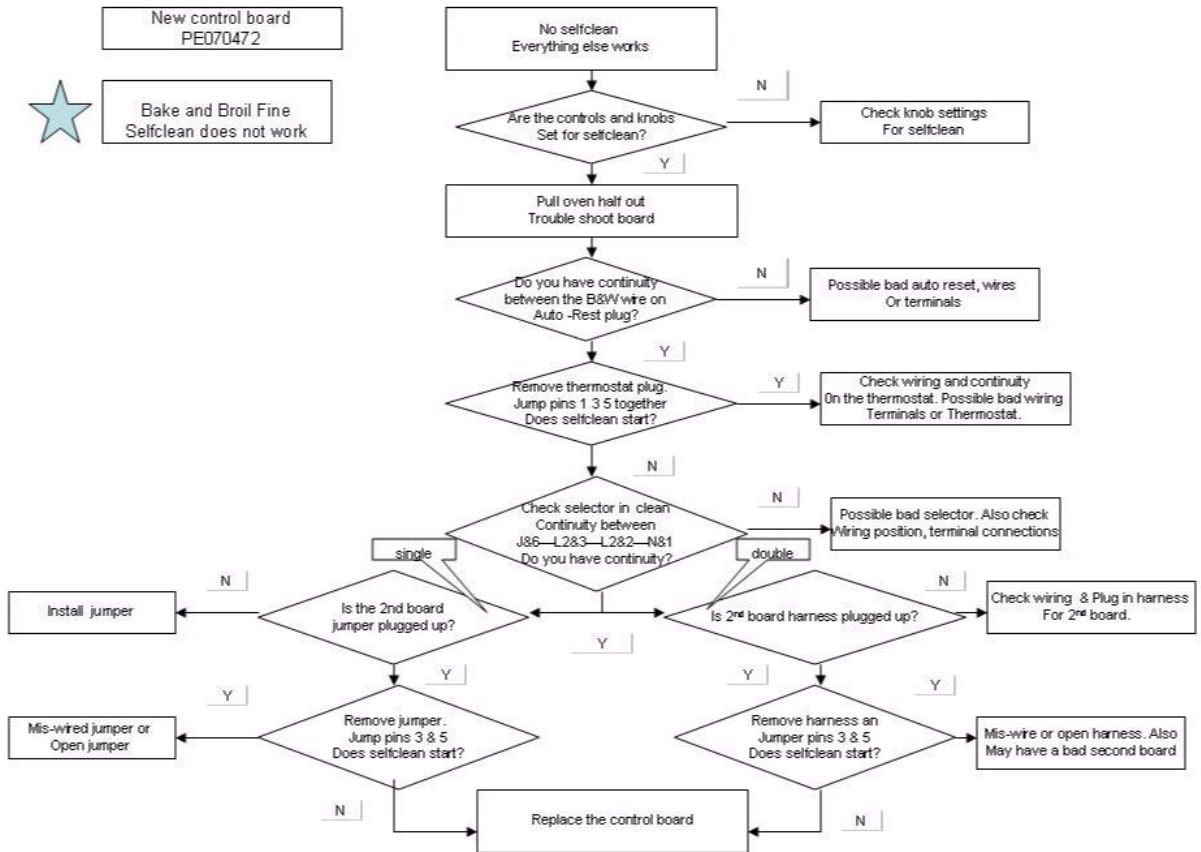 


Ref #	Part Number	Qty.	Description
-------	-------------	------	-------------

 ---

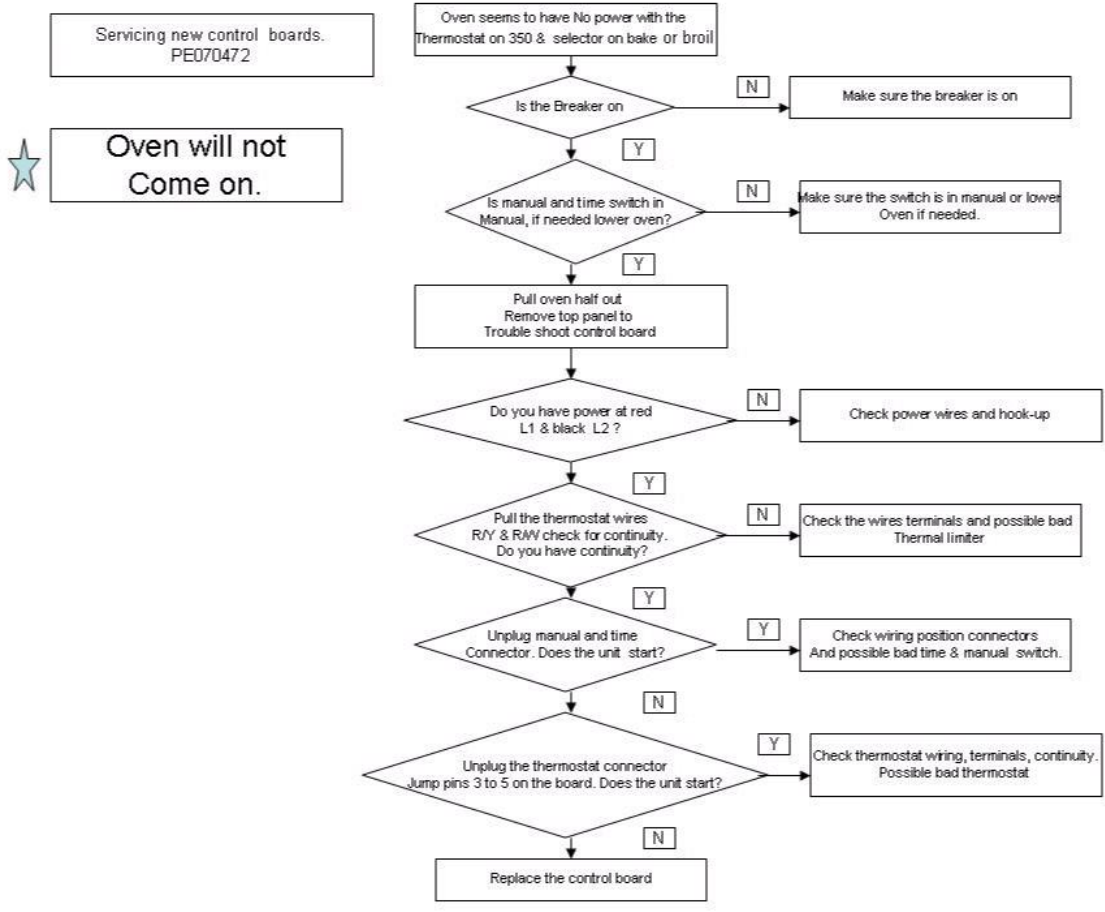

Ref #	Part Number	Qty.	Description
-------	-------------	------	-------------

 ---

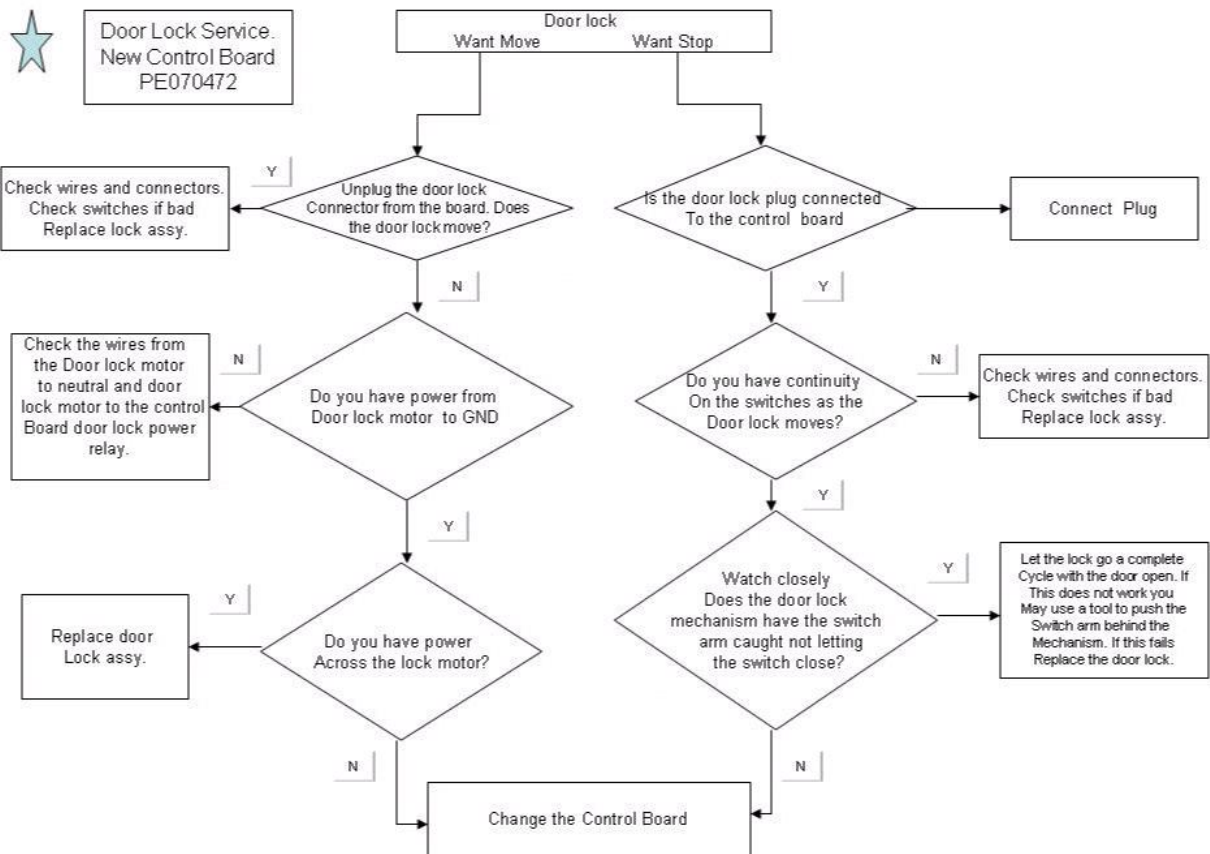

Ref #	Part Number	Qty.	Description
-------	-------------	------	-------------

---