 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VEC5304B Owner's Manual

[Shop genuine replacement parts for VIKING VEC5304B](#)

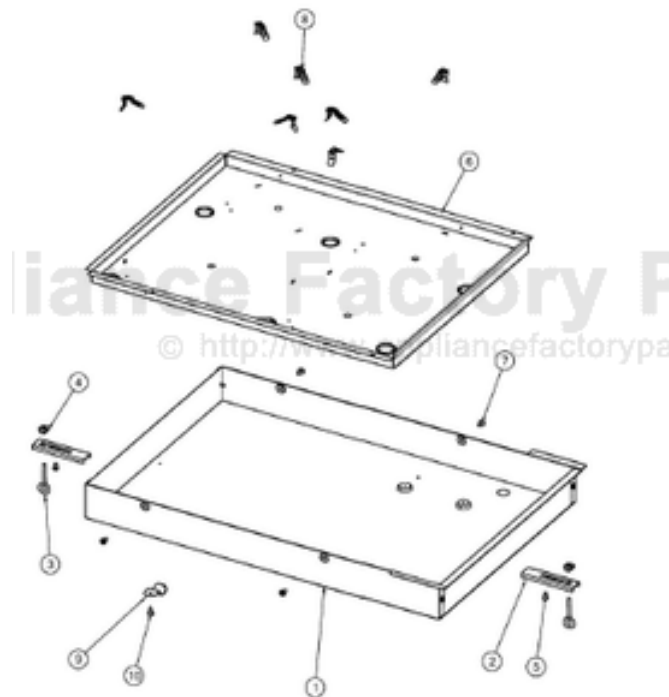


[Find Your VIKING Range Hoods Parts - Select From 411 Models](#)


----- Manual continues below -----

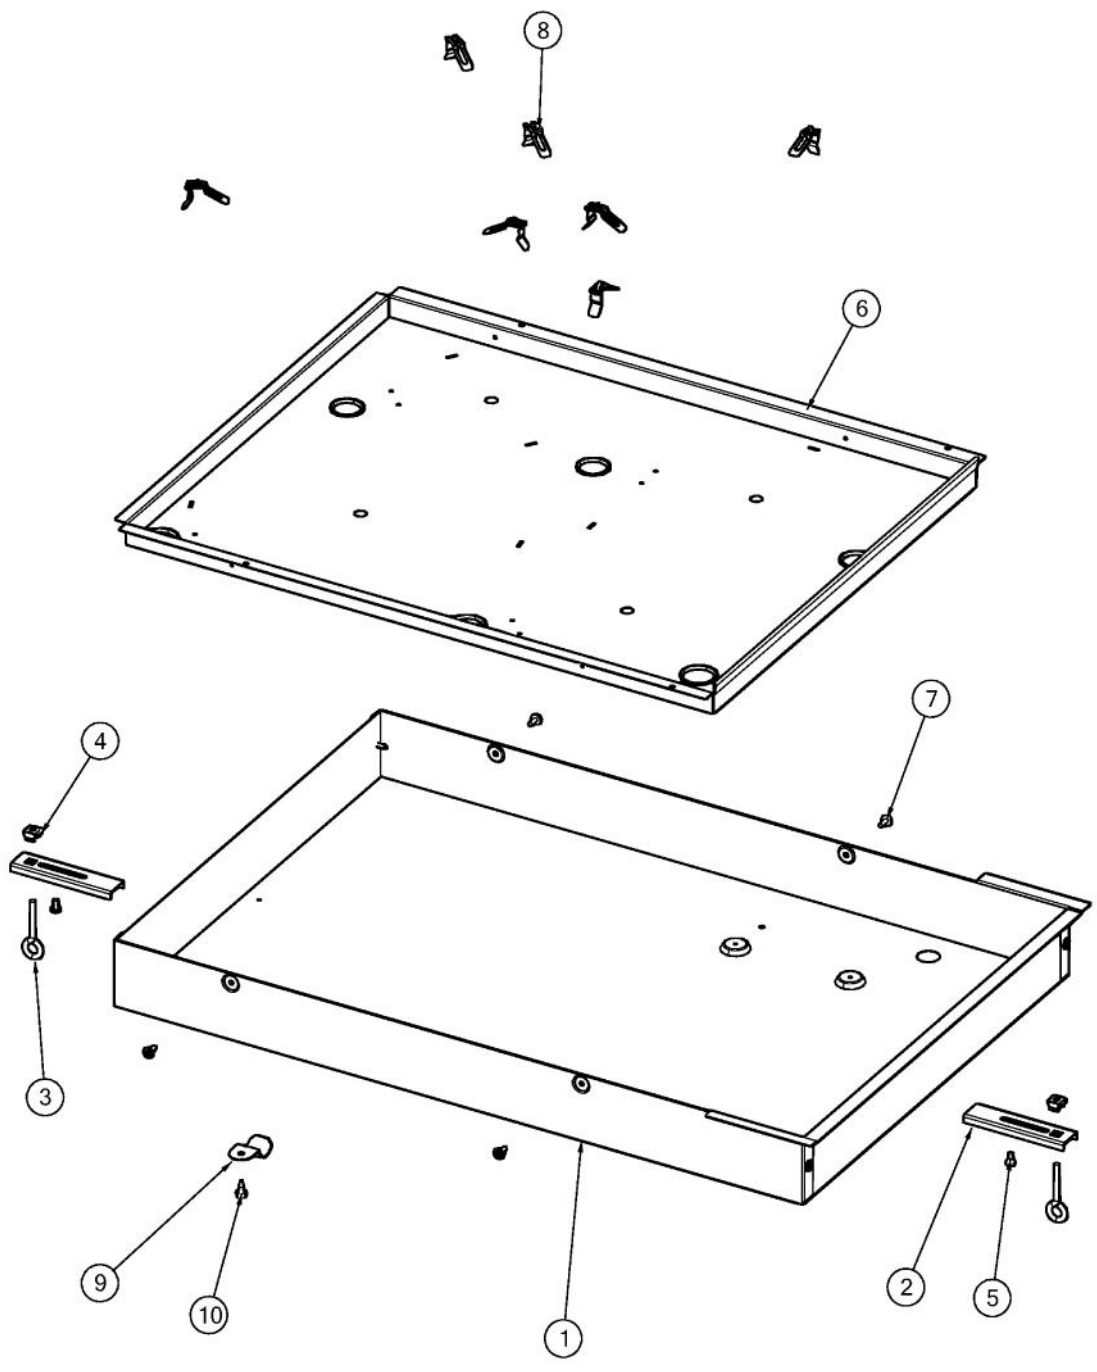

Ref #	Part Number	Qty.	Description
1	039976-000	1	BOX, BURNER, 30
2	038618-000	2	BRACKET, HOLD
3	PD010027	2	EYE BOLT-VGSU101/161
4	PD030029	2	SELF RETAINING NUT (1/4-20)
5	PD020004	2	10X3/8PH.HD.TYPE 25 REPL PD040125
6	039970-000	1	BOX, ELEMENT, MTG, 30
7	PD020046	4	NO.8 X 1/2 SCREWS
8	026923-000	7	CLIP, SPRING, ELECTRIC ELEMENT
9	044546-000	1	CLAMP, CONDUIT
10	003860-000	1	NO.10-18 X .500 FASTNR,SCR,HXWH,STL,ZPLT

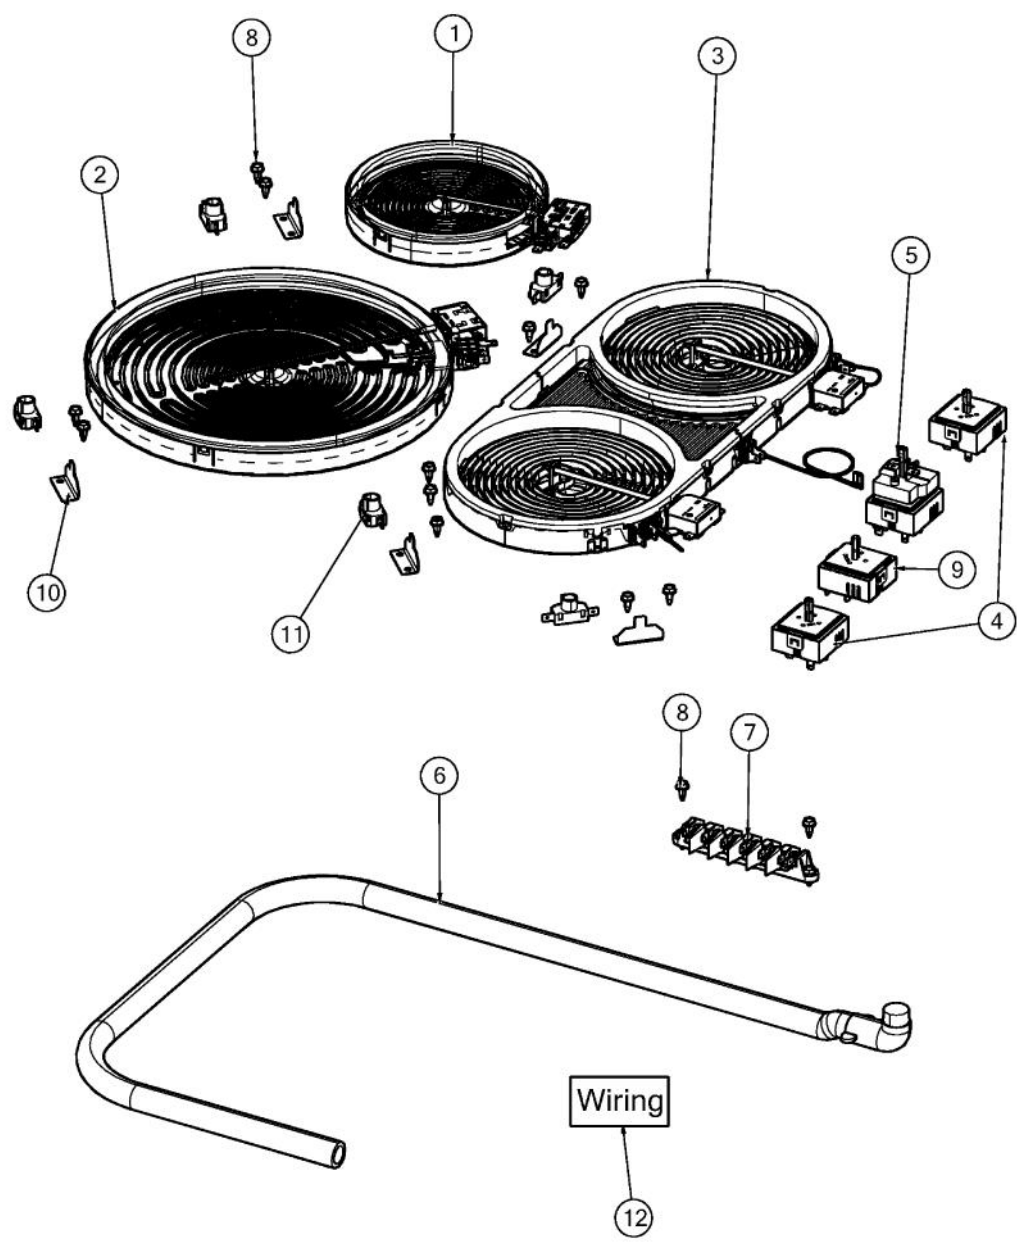 

Ref #	Part Number	Qty.	Description
1	031377-000	1	EGO SINGLE 1200W
2	031373-000	1	TRIPLE 3200W (1100/1000/1100) ELEMENT
3	043271-000	1	ELEMENT, BRIDGE
4	031728-000	2	SINGLE INFINITE SWITCH
5	031734-000	1	TRIPLE INFINITE SWITCH
6	036549-000	1	CONDUIT, D3 45 COOKTOP
7	PE070231	1	TERMINAL BLOCK - 6 POLE (HEYCO)
8	003860-000	12	NO.10-18 X .500 FASTNR,SCR,HXWH,STL,ZPLT
9	031733-000	1	DUAL INFINITE SWITCH
10	041593-000	5	BRKT, LIGHT, IND
11	PE050077	5	INDICATOR LIGHT
12	043157-000	1	WIRE HARNESS, ELEC, COOKTOP, 30, 5 SERIES

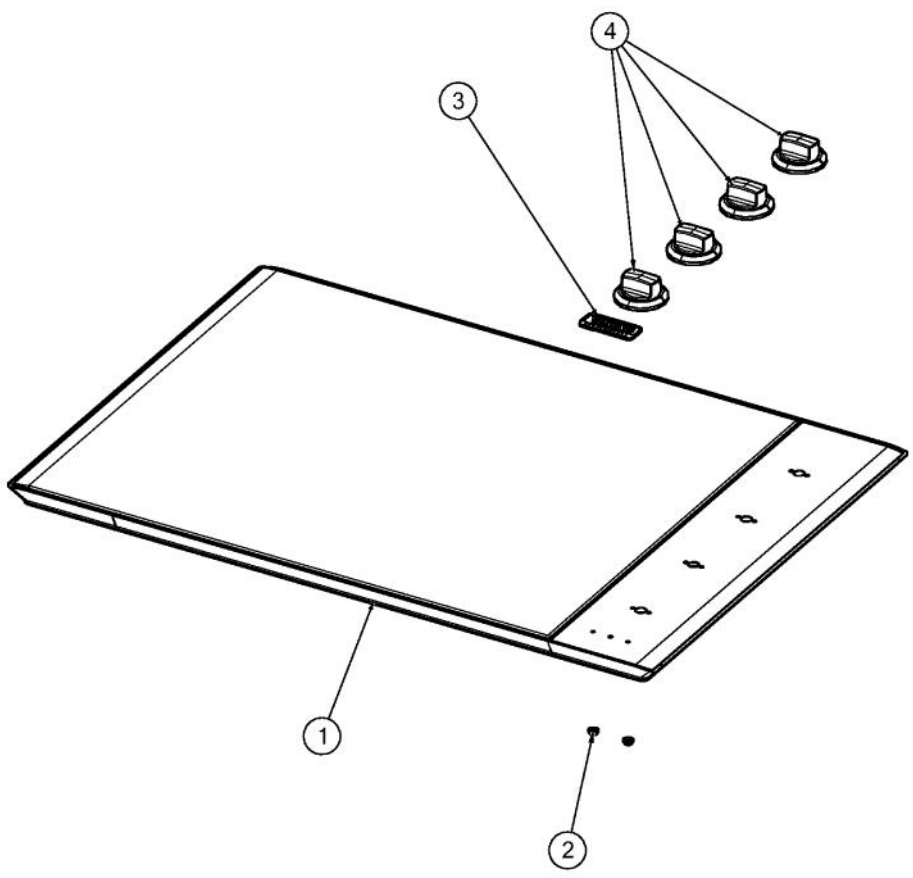 

Ref #	Part Number	Qty.	Description
1	039820-000	1	30 ELEC TOP ASM
2	PD030006	2	CAPPED WASHER PAL NUT
3	040029-000	1	LOGO, COOKTOP
4	040186-000	4	ELEC, KNOB, ASM