

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# CUISINART GG-2 Owner's Manual

[Shop genuine replacement parts for CUISINART GG-2](#)



[Find Your CUISINART Grill Parts - Select From 152 Models](#)

----- Manual continues below -----



## Grill & Griddle

GG-2

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

## 1. READ ALL INSTRUCTIONS

2. Do not touch hot surfaces. Use handles and knobs.
3. To protect against fire, electric shock, and injury to persons, DO NOT IMMERSE CORD OR PLUG in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest Cuisinart Authorized Service Facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electrical shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Unplug the unit when finished using.
12. Do not use appliance for other than intended use.
13. Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
14. Always attach plug to appliance first, then plug cord into the

wall outlet. To disconnect, turn control to OFF setting, then remove plug from wall outlet.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ONLY AUTHORIZED PERSONNEL SHOULD DO REPAIRS.**

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over.

### NOTICE


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

# TABLE OF CONTENTS

Introduction . . . . .	Page 2
Parts and Features . . . . .	Page 2
Before the First Use . . . . .	Page 2
Assembly Instructions . . . . .	Page 3
Operating Instructions . . . . .	Page 3
Cleaning and Care . . . . .	Page 4
Storage . . . . .	Page 4
Temperature Chart . . . . .	Page 5
Tips and Hints . . . . .	Page 5
Recipes . . . . .	Page 6-13
Warranty . . . . .	Page 13

## INTRODUCTION

Congratulations on your purchase of the Cuisinart™ Grill & Griddle. This product is the ultimate kitchen appliance, with a large 18" reversible, nonstick plate that makes it two appliances in one. The cooking plate has been designed with an internal heating element for even heat transfer while cooking. Use the grill surface to evenly grill poultry, meats, seafood, vegetables and much more. Or flip the cooking plate to the griddle surface and set the electric thermostat to perfectly cook pancakes, eggs, hash browns or toasted cheese sandwiches.

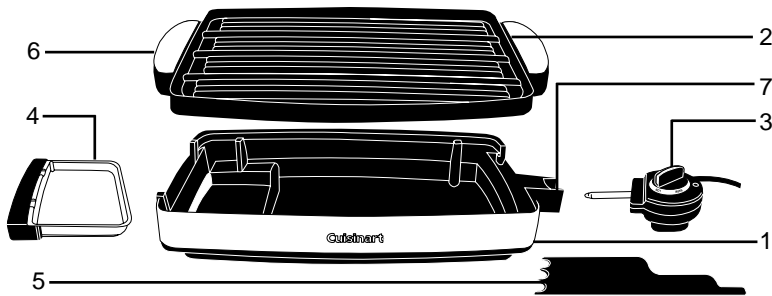

## PARTS AND FEATURES:

1. **Base** - Elegant brushed stainless steel housing.
2. **Reversible Cooking Plate** – Extra large 18" nonstick cooking surface. One side is a grill surface; the other side is a griddle surface.
3. **Temperature Control** – Five adjustable settings, OFF position and indicator light. Plugs into cooking plate when on base.
4. **Drip Tray** – Collects grease and removes from base for cleanup.
5. **Cleaning/Scraping Tool** – Helps clean grill or griddle after cooking.
6. **Convenient Handles** – For reversing cooking plate.

## BEFORE THE FIRST USE:


Remove all packaging materials and any promotional labels or stickers from your grill. Be sure all parts (listed above, **Parts and Features**) of your new appliance have been included before discarding any packaging materials. You may want to keep the box and packing materials for use at a later date.

Before using your Cuisinart™ Grill & Griddle for the first time, remove any dust from shipping by wiping the base and temperature control with a damp cloth. Thoroughly clean both sides of the cooking plate, drip tray and scraping tool. The cooking plate can be submerged in water for cleaning. The drip tray and scraping tool are dishwasher safe.

Never place the temperature control with power cord in the dishwasher, nor should you immerse it in water. Always use a damp cloth to clean these parts.

## ASSEMBLY INSTRUCTIONS:

1. Place base on a clean, flat surface where you intend to cook.
2. One end of the base has a slot provided for the drip tray. Slide the drip tray into the base. (see figure A.)
3. The cooking plate has two sides: The Grill side with ribbed surface is intended for grilling steaks, hamburgers, chicken, seafood and vegetables. (see figure B.) The Griddle side with smooth surface is perfect for frying bacon and eggs, pancakes, French toast and toasted sandwiches. (see figure C.) Choose the side you intend to cook on and place the cooking plate on the base with the chosen side facing up. Make sure that the drip holes in the cooking plate line up over the drip tray.
4. Insert the temperature control probe into the socket in the cooking plate on the end opposite the drip holes. It will click into place. (see figure D.)
5. Plug the cord into a standard electrical outlet.

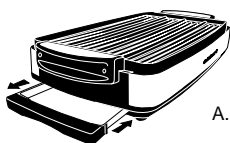

A.



B.



C.



D.

## OPERATING INSTRUCTIONS:

Once the Grill & Griddle is assembled properly and you are ready to begin cooking, turn the temperature control knob to the desired tem-

perature level. The indicator light will illuminate to indicate that the power is on. It may take 10-12 minutes to reach operating temperature, depending on the temperature level that has been set. When the thermostat has reached the desired temperature, the indicator light will turn off, indicating that the Grill & Griddle is ready for cooking.

During operation, the light will continue to turn on and off as the thermostat regulates the temperature. This is normal.

The temperature control is used to set and maintain the temperature of the cooking surface. Temperatures range from about 150° on the Warm setting to 450° on the Sear Setting. You may vary the setting of the control knob at any time during cooking, and may wish to do so depending on the types of foods on the cooking plate. Refer to the **Cooked Food Temperature Chart** on page 5 for recommendations.


**CAUTION:** Handles will become hot during use. The cooking plate should not be removed from the base or flipped over while hot. Allow unit to cool down for at least 30 minutes before handling.

The Grill & Griddle has a built-in safety feature that prevents the unit from operating when the cooking plate is not on the base. If the cooking plate is removed from the base while in use, the power will shut off.

**NOTE:** The first time you use your Grill & Griddle, it may have a slight odor and smoke a bit. This is normal and common to appliances with a nonstick surface.

### To flip over to use reverse side of plate:

1. Turn temperature control knob to OFF setting.
2. Unplug appliance from wall outlet.
3. Pull out temperature control probe from cooking plate.

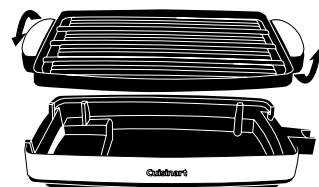

4. Allow unit to cool down completely.
5. Carefully slide out the drip tray and dispose of its contents. Clean tray and replace in base. (see **Cleaning and Care**)
6. Thoroughly clean cooking plate. (see **Cleaning and Care**)
7. Hold cooking plate by the handles when removing from base, flipping plate over, and returning to base.
8. Make sure that holes in plate line up over drip tray.
9. Reconnect the temperature control and plug the cord into a standard electrical outlet.

#### **User Maintenance:**

- Never use metal utensils, as they will scratch the nonstick grill plate. Instead, use only wooden or heat-proof plastic utensils.
- Never leave plastic utensils in contact with the hot grill plate.
- After using, scrape excess food buildup through holes and into drip tray, then wipe off any residue with a paper towel before proceeding with next recipe.

## **CLEANING AND CARE**

### **CAUTION: BEFORE CLEANING APPLIANCE, MAKE SURE IT HAS COOLED DOWN COMPLETELY.**

Once you have finished cooking, allow the unit to cool down completely and then turn the temperature control knob to the OFF setting. Unplug the appliance from wall outlet and remove the temperature control probe from cooking plate.

Carefully slide the drip tray out from the base and dispose of its contents. The drip tray can be cleaned by hand or in the dishwasher.

Use the cleaning/scraping tool to remove any leftover food from the cooking plate. The scraping tool can be washed by hand or in the dishwasher.

If you have been cooking seafood, wipe the cooking plate with lemon juice to prevent seafood flavor from transferring to the next recipe.

Hold cooking plate by handles when removing. The cooking plate can be washed by hand, using a soft sponge or cloth and hot water. The cooking plate may be submerged in water, but **DO NOT wash in the dishwasher**. Do not use metallic objects such as knives or forks for cleaning. Do not use a scouring pad for cleaning. The nonstick coating can be damaged.

The temperature control can be wiped clean with a damp cloth.

**Never submerge the temperature control or plug in water.**

**Do not place it in a dishwasher.** Wipe it clean with a damp cloth.

The housing base can be wiped clean with a soft, dry cloth. For tough stains, dampen cloth. Never use an abrasive cleaner or harsh pad.

## **STORAGE**

Always dry and assemble the grill (without controller) before storing. Ensure that the base, cooking plate and drip tray are correctly positioned.

Store the temperature control in a safe place. Do not knock or drop the probe, as this can cause damage.

Rare	Bright red center, lighter pink to outside	140°F
Medium	Light pink center, brown to outside	160°F
Well-done	Brown consistently throughout	170°F+

## COOKED FOOD TEMPERATURE CHART

Check internal temperature, using an instant read thermometer.

### Beef

The USDA recommends **cooking all ground beef to at least Medium (160°F) doneness**, or until center is no longer pink.

### Pork

Always grill using an instant read thermometer until the internal temperature reaches 160°F when tested.

### Poultry

Boneless poultry breast should be cooked to an internal temperature of 170°F.

Ground poultry should be cooked to an internal temperature of 165-170°F.

**(The Cuisinart™ Grill & Griddle is not recommended for cooking bone-in poultry.)**

### Seafood

Fin Fish – Cook until opaque and easily flaked with a fork.

Scallops – Cook until opaque and firm.

Shrimp – Cook until shrimp turn orange/red and flesh is pearly opaque.

### Bacon

Cook bacon until crispy to taste.

### Hot Dogs/Smoked Sausages

Although they are “precooked”, we recommend cooking hot dogs and smoked sausages until the internal temperature is 165°F when tested with an instant read thermometer.

## Tips & Hints for Using the Cuisinart™ Grill & Griddle

- Trim excess fats from meat before grilling/griddling.
- Do not press down on meats, poultry or seafood when grilling/griddling – this will press out the juices, which keep the texture of the meat moist and tender.
- To create a “diamond” pattern on meats and fish when grilling, brush or pat item lightly with olive oil. Cook on the first side without turning, for 2 to 3 minutes. Then rotate 45 degrees (a quarter turn) and cook for 2 to 3 minutes longer or until that side is done. Repeat the procedure for the second side.
- Firm fleshed fish can be cooked directly on either the Grill or Griddle surface. Smaller items such as shrimp or scallops can be skewered if desired (if using wooden skewers, soak first to prevent burning).
- For the best burgers, handle the meat as little as possible. Press 5 to 6 ounces lean ground meat into 4-inch rounds – a large round cookie cutter makes a good template. Grill, then season with salt and pepper to taste.
- The Grill can be used to grill foods other than meats. Grilled Garlic Bread or “Texas” Toast can be made by brushing melted butter seasoned with garlic and herbs on thickly sliced artisan breads, then grilling until golden brown. Vegetables can be grilled as an entrée or side dish, and fruits can be grilled for desserts. Firm tofu can also be marinated and grilled.
- The Griddle is the perfect appliance for preparing Grilled Cheese Sandwiches for a group. Using 2 slices per sandwich of your favorite bread, lightly brush one side of each slice with melted butter or olive oil, add your favorite fillings, and “Grill” on the Griddle side, preheated to Medium High. Turn when toasty, crisp and deep golden, about 3 to 4 minutes per side.

- French Toast is simple to prepare on the Griddle. Use your favorite recipe using egg and milk mixture to soak bread, then cook on Griddle preheated to Medium heat.
- If preparing a complete breakfast using the Griddle for a crowd, cook meats first and keep them warm in a Low (200°F) oven after draining. Then cook hash browns, pancakes or French toast; keep warm in low oven on a rack placed over a baking sheet. Lastly, prepare and cook eggs.
- To prepare bacon, place the bacon strips on the cold Griddle. Heat to Medium-High, and cook until desired crispiness is reached, turning once or twice while cooking.
- Simplify chopping and blending tasks while preparing the following recipes, by using a Cuisinart® Food Processor, Chopper/Grinder or Blender.

## RECIPES FOR THE GRILL:

### Grilled Vegetable Salad

Makes about 8 cups

- 1/2 cup extra virgin olive oil
- 1 tablespoon herbs de Provence or Italian herbs
- 1 clove garlic, peeled and finely chopped
- 1 pound small eggplant, rinsed
- 1 teaspoon kosher salt, divided
- 12 ounces red and/or yellow bell peppers, rinsed
- 12 ounces yellow or sweet onions, peeled
- 12 ounces small zucchini, rinsed
- 12 ounces yellow squash or yellow summer squash, rinsed
- 8 ounces Portobello mushrooms
- 2-3 tablespoons white balsamic vinegar or rice vinegar
- 1/2 cup imported or domestic pitted olives, halved

- 1/4 cup chopped Italian parsley
- 1/4 cup slivered/chopped oil-packed (drained) sun-dried tomatoes
- 1/4 cup capers, rinsed and drained
- 1/2 teaspoon freshly ground pepper
- 1/4 cup toasted pine nuts (optional)

Combine the olive oil, herbs and garlic in a small bowl. Let stand while preparing the vegetables.

Cut the eggplant in 1/2-inch slices, sprinkle with 1/2 teaspoon salt and place in a colander to drain. Cut the red/yellow peppers into flat slabs. Cut the onions into 1/2-inch thick slices; slide a toothpick or short wooden skewer into the slice horizontally (this will help to hold it together while grilling). Cut the zucchini and yellow squash into 1/2-inch thick slices. Cut the Portobello mushrooms into 1/2-inch thick slices.

Preheat the Grill side to High.

Rinse and dry the eggplant slices. Brush all vegetables lightly with the seasoned olive oil mix – there will be oil mixture left over.

Grill the vegetables on both sides until tender and nicely marked:

Eggplant – about 6-8 minutes per side; peppers – about 8-10 minutes per side; onions – about 5-7 minutes per side; squashes – about 6-8 minutes per side; and Portobellos – about 4-5 minutes per side. As the vegetables are done, let cool slightly on a prep board. When cool enough to handle (but still warm), cut into 1-inch pieces and transfer to a large bowl. When all vegetables have been grilled and cut, toss gently to combine. Add the vinegar (to taste), olives, parsley, sun-dried tomatoes, and capers; toss gently to combine. Season with remaining 1/2 teaspoon salt and pepper; toss gently to combine. Cover and refrigerate until ready to serve. Just before serving, sprinkle with toasted pine nuts if desired.

*Nutritional information per serving:*

*Calories 141 (59% from fat) • carb. 12g • pro. 3g • fat 10g • sat. fat 1g • chol. 0mg • sod. 538mg • calc. 43mg • fiber 3g*

## Lemon Herb Grilled Chicken

Makes 6 servings

- 6 boneless, skinless chicken breast halves (5-6 ounces each)
- 1 green onion, trimmed, finely chopped (include several inches of green)
- 1 tablespoon fresh parsley leaves, finely chopped
- 1/2 tablespoon fresh rosemary, finely chopped
- 1/2 teaspoon kosher salt
- 1/2 teaspoon freshly ground pepper
- 1/3 cup extra virgin olive oil
- 3 tablespoons fresh lemon juice

Trim all fat from chicken. Place a chicken breast between 2 sheets of plastic wrap and use the flat side of a meat pounder to pound to an even thickness, about 1/2 inch. Repeat with remaining chicken.

Combine green onion, parsley, rosemary, salt, pepper, olive oil and lemon juice in a bowl; whisk to blend. Pour over the chicken and stir to coat completely. Allow to marinate for 15 minutes – no longer.

(This is important, as the citrus will begin to “cook” the chicken and toughen it.)

Five minutes before grilling, preheat the Grill side to High. When Grill is hot and chicken has finished marinating, drain the chicken. Arrange the chicken on the hot Grill, spacing evenly. Grill for 5 to 6 minutes on each side.

Do not move while on the Grill, to allow nice grill markings to develop.

Check internal temperature of chicken with an instant read thermometer — the temperature should be 170-175°F. Let chicken rest for 5 minutes before slicing and serving.

*Nutritional information per serving:*

*Calories 124 (24% from fat) • carb. 1g • pro. 23g • fat 3g • sat. fat 1g  
• chol. 60mg • sod. 397mg • calc. 17mg • fiber 0g*

## Ginger Wasabi Grilled Flank Steak & Portobellos

Makes 8 servings

- 1 flank steak, 1-1/2 to 1-3/4 pounds
- 1 pound Portobello mushrooms, cleaned, sliced 1/2 inch thick
- 1/2 ounce fresh ginger, peeled, cut in 1/2 inch or smaller pieces
- 1 small shallot (1/2 ounce), peeled, cut in 1/2 inch or smaller pieces
- 1 clove garlic, peeled
- 2/3 cup medium dry sherry
- 2/3 cup low-sodium soy or tamari sauce
- 3 tablespoons seasoned rice or wine vinegar
- 2 tablespoons dark molasses
- 1 tablespoon brown sugar, packed
- 1 tablespoon Asian sesame oil (toasted sesame oil)
- 2 teaspoons Wasabi powder
- 1-1/2 teaspoons powdered ginger
- 1/2 teaspoon freshly ground black pepper

Place ginger, shallot and garlic in a blender and cover. Set on Low; pulse 5 times. Scrape sides of jar; pulse 5 times.

Add remaining ingredients in order given. Blend for 20 seconds. Transfer to a resealable container and let stand for 30 minutes before using to allow flavors to develop. Unused portions may be refrigerated for up to a week. Stir before using.

Trim excess visible fat from steak, and lightly score with a sharp knife on both sides in a diagonal crosshatch pattern — the cuts should be about 1 – 1-1/2 inches apart. This will prevent the meat from curling when heated on the Grill. Place the meat in a resealable, heavy-duty food storage bag and the mushrooms in a second bag.

Add 1/2 cup of the marinade to the flank steak and seal; add 1/2 cup of the remaining marinade to the Portobellos; seal the bag and toss to coat. Allow both to marinate for about 30 minutes. Place remaining 1 cup of marinade in

a resealable container and refrigerate for use at a later time. Marinade will keep for 2 weeks refrigerated.

Preheat the Grill side to Med-High heat. Drain excess marinade from flank steak. Grill for 5 to 8 minutes per side, depending on preferences. When tested with an instant read thermometer, meat will register 120 – 125°F for rare, 125 – 140° F for medium rare, 145 – 155° F for medium, and 160° F+ for well-done. Do not move steak while on grill, except to turn. Remove meat to a cutting board or platter and let rest for 10 to 15 minutes before slicing.

While steak is resting, grill the Portobello slices. Arrange the mushroom slices in a single layer on the grill and grill for 2 to 3 minutes on each side, until tender with nice grill markings – do not move mushrooms while grilling.

Remove and transfer to a bowl, with any remaining marinade from the mushrooms.

To serve, slice the flank steak into thin slices on a slight diagonal against the grain. Arrange meat on platter and surround with grilled Portobellos. Pour accumulated juices from meat and Portobellos over the meat. Serve.

*Nutritional information per serving:*  
Calories 221 (39% from fat) • carb. 10g • pro. 19g • fat 10g • sat. fat 3g  
• chol. 40mg • sod. 913mg • calc. 58mg • fiber 0g

## Spicy Grilled Pork Chops

Makes 8 servings

- 1 tablespoon kosher salt
- 1 tablespoon sweet paprika
- 1 tablespoon thyme
- 1-1/2 teaspoons granulated garlic
- 1-1/2 teaspoons dried powdered onion
- 1 teaspoon freshly ground (coarse) black pepper
- 3/4 teaspoon cayenne pepper
- 1/2 teaspoon white pepper
- 8 boneless pork loin chops, 5 ounces each, about 3/4 inch thick

Place the salt, paprika, thyme, garlic, onion, black pepper, cayenne, and white pepper in a bowl and mix together. Makes about 1/4 cup Spicy Rub. Sprinkle each pork chop with 1/2 teaspoon of the Spicy Rub. Rub in to distribute evenly over both sides of the chops. Let stand 15 minutes or longer.

Preheat the Grill side to High. When hot, arrange the pork chops on the grill, spacing them evenly - they should not be crowded together. Grill for 9 to 12 minutes per side, moving them only to turn, until the internal temperature of the pork chops reads 160°F when tested with an instant read thermometer. Let pork chops rest for 5 minutes before serving.

*Nutritional information per serving:*  
Calories 178 (35% from fat) • carb 1g • pro. 27g • fat 7g • sat. fat 2g  
• chol. 81mg • sod. 210mg • calc. 18mg • fiber 0g

## Turkey Burgers with Cranberry Mustard

Makes 6 servings

- 1/2 cup dried cranberries
- 2 tablespoons boiling water
- 1/2 cup Dijon-style mustard
- 1-1/2 pounds lean ground turkey
- 1 cup (5-oz.) finely chopped mushrooms
- 1/4 cup fresh breadcrumbs
- 1 teaspoon thyme
- 1/2 teaspoon kosher salt
- 1/2 teaspoon freshly ground pepper

Place cranberries in a small bowl and add boiling water; cover and let stand until softened and cooled, about 20 to 30 minutes. Place softened cranberries in a blender. Blend until smooth – mixture will resemble “grainy” type mustard. Reserve. Makes about 3/4 cup Cranberry Mustard.

Place turkey, mushrooms, breadcrumbs, thyme, salt, and pepper in a large bowl. Mix gently to combine (do not overwork mixture). Form into six burgers of equal size. Cover and refrigerate if not grilling immediately.

Preheat the Grill side to High setting. Arrange the turkey burgers evenly spaced on the Grill. Grill for 6 to 7 minutes per side, until internal temperature reaches 165°F when tested with an instant read thermometer. It is important to cook ground turkey (or chicken) to this temperature, but do not overcook – it will dry out.

Serve with Cranberry Mustard. Turkey Burgers can be served alone, or are delicious when served on grilled whole wheat buns or sour dough rolls.

*Nutritional information per serving (one burger + 1 tablespoon mustard):  
Calories 175 (35% from fat) • carb. 3g • pro. 24g • fat 8g • sat. fat 2g  
• chol. 70mg • sod. 283mg • calc. 29mg • fiber 1g*

## Saga Blue Stuffed Beef Fillets with Herb Crust

Makes 6 servings

- 3 tablespoons herbes de Provence
- 1-1/4 teaspoons kosher salt
- 1/2 teaspoon freshly ground black pepper
- 6 beef tenderloin fillets, each about 6 ounces – 1 inch thick
- 6 tablespoons cold Saga Blue cheese (may also use Brie, mushroom Brie or Cambazola cheese)
- 1 tablespoon good quality olive oil

Place the herbes de Provence, salt and pepper in a small bowl. Stir to blend; reserve.

Using a sharp knife, cut a horizontal slit in the side of a fillet, then carefully cut into the center of the fillet to create a pocket – do not cut all the way through to the sides. Repeat for each fillet. Place one tablespoon of the cheese in each pocket – press the open sides together tightly. Drizzle the fillets with the olive oil and rub in to coat completely and evenly. Sprinkle the fillets on both sides with the herb mixture and press mixture on. Refrigerate for 20 to 30 minutes before grilling. (Fillets may be prepared up to 8 hours ahead and refrigerated.)

Preheat Grill side to Sear. When Grill is hot (indicator light will go out) arrange the fillets evenly spaced on the Grill. Grill on each side for 3 minutes. Lower

9

the heat to High and continue to cook for another 4 to 8 minutes on each side, depending on preference for doneness – less time for rare and more time for well done. For a cross-hatch grill pattern on the meat, turn the meat 45° when placing it on the grill after turning over. (Note: this type of beef has more flavor and better texture when cooked rare to medium.) Let meat rest for 5 to 10 minutes before serving.

*Nutritional information per serving:  
Calories 464 (55% from fat) • carb. 1g • pro. 50g • fat 27g • sat. fat 11g •  
chol. 148mg • sod. 456mg • calc. 57mg • fiber 0g*

## Grilled Fresh Pineapple

Makes 8 servings (1 slice per serving)

- 1 large fresh pineapple, peeled, cored, cut into 8 slices\*
- 8 teaspoons powdered sugar

Preheat the Grill side to High. Sprinkle the pineapple slices lightly with powdered sugar, using 1/2 teaspoon per side. Arrange pineapple slices evenly on preheated Grill. Grill for 4 to 5 minutes per side, turning once. Serve warm or cool.

Grilled Fresh Pineapple makes a wonderful base for dessert – just add a scoop of vanilla ice cream or frozen yogurt. You may drizzle it with a little rum or liqueur and add a sprinkling of chopped toasted nuts for a Grilled Pineapple Sundae.

\*Many grocery stores sell peeled and cored pineapples in the produce sections.

*Nutritional information per serving:  
Calories 51 (6% from fat) • carb. 13g • pro. 0g • fat 0g • sat fat 0g  
• chol. 0mg • sod. 1mg • calc. 6mg • fiber 1g*

# RECIPES FOR THE GRIDDLE:

## Blueberry Ricotta Pancakes

Makes 18 pancakes, about 4 inches each

- 2 cups all-purpose flour
- 2 cups fresh or frozen thawed blueberries
- 2 teaspoons baking powder
- 1/2 teaspoon baking soda
- 1 tablespoon sugar
- 1/2 teaspoon salt
- 2 large eggs, separated
- 2 cups reduced fat milk
- 1/2 cup part-skim ricotta cheese
- 3 tablespoons unsalted butter, melted and cooled

Preheat the Griddle side to Medium.

Toss blueberries in 1 tablespoon of the flour; reserve. Place the remaining flour, baking powder, baking soda, sugar, and salt in a large bowl and stir to combine.

In a smaller bowl, combine the egg yolks, milk, ricotta cheese and unsalted butter; reserve. Beat the egg whites until they are stiff but not dry. With a spoon, stir the liquid mixture into the dry mixture until blended. Stir about one fourth of the beaten egg whites into the batter to lighten, then gently fold in the remaining egg whites, using a rubber spatula. Gently stir in the reserved blueberries.

Using a 1/4-cup measure/ladle, pour batter for six pancakes onto the preheated Griddle. Cook for 2-1/2 to 3 minutes, until bubbles form on the surface, then flip the pancakes over, using a heatproof nonstick spatula. Cook on the other side until golden brown and fluffy, about 2-1/2 to 3 minutes. Transfer to warm plates to serve. As you finish each batch of pancakes, you can keep them warm on a wire rack placed on a baking sheet in a low oven (200°F). Repeat until all the batter is used.

Serve with warmed maple syrup.

*Nutritional information per serving (3 pancakes):*

*Calories 332 (30% from fat) • carb. 46g • pro. 12g • fat 11g • sat. fat 6g  
• chol. 99mg • sod. 455mg • calc. 174mg • fiber 2g*

## Multigrain Pancakes

Makes about 14 pancakes

- 3 large eggs, lightly beaten
- 1 cup reduced fat milk
- 1/2 cup plain yogurt (may use fat-free)
- 1 cup all-purpose flour
- 1/2 cup whole wheat flour
- 1/2 cup oatmeal (regular or quick oats)
- 1/2 cup yellow cornmeal
- 3 tablespoons powdered buttermilk\* (do not add liquid)
- 1 tablespoon brown sugar
- 1 tablespoon baking powder
- 1 teaspoon salt
- 2 tablespoons melted butter, cooled slightly

Preheat the Griddle side to Medium.

Place the eggs, milk, and yogurt in a small bowl and whisk to blend until smooth; reserve.

Place the flours, oatmeal, cornmeal, buttermilk powder, brown sugar, baking powder, and salt in a medium bowl. Stir with a whisk to blend. Add the egg/milk mixture and stir until just blended. Stir in the melted, cooled butter. Do not overmix.

Using a quarter cup measure, drop batter evenly spaced (six pancakes fit very nicely) onto the preheated griddle. Cook pancakes until bubbles form, about 2 to 2-1/2 minutes; flip and cook until done, about 2 to 2-1/2 minutes longer. Transfer to warm plates to serve. As you finish each batch of pancakes, you can keep them warm on a wire rack placed on a baking sheet in a low oven (200°F). Repeat until all the batter is used.

Serve with warmed maple or fruited syrup.

\*Powdered Buttermilk is available in the baking section of most well-stocked grocery stores.

*Nutritional information per serving (2 pancakes):*  
Calories 226 (28% from fat) • carb. 31g • pro. 9g • fat 7g • sat. fat 3g  
• chol. 105mg • sod. 510mg • calc. 125mg • fiber 2g

## Hash Brown Potatoes

Makes 4 servings

- 2 8-10 ounce russet potatoes, baked and cooled
- 1/2 cup chopped onion
- 1/2 cup chopped bell pepper (red, yellow, or green)
- 1 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- 1/2 teaspoon thyme
- 3 tablespoons melted butter
- 1 tablespoon chopped fresh parsley

Preheat the Griddle side to Medium-High.

Cut the potatoes into 1/2-inch cubes (no need to remove the skins). Place the potatoes in a medium bowl with the onion, bell pepper, salt, pepper, and thyme. Stir gently to combine. Drizzle with the melted butter and stir to coat.

Place the potato mixture on the hot griddle in a single layer. Allow to cook for 15 minutes, turning the mixture every 2-3 minutes, until browned, crispy and hot. After the potatoes have cooked for about 12 minutes, sprinkle with the chopped parsley.

Transfer the potatoes to a bowl and keep warm in a low oven (about 250°F) if not serving immediately. Serve hot.

**Tip:** When preparing baked potatoes for a meal, bake 2 extra. Cool, wrap and refrigerate to make hash brown potatoes.

If serving hash brown potatoes with eggs & bacon, cook bacon first.

11

Keep warm in low oven, then prepare hash brown potatoes and keep warm in low oven. Prepare eggs just before serving.

*Nutritional information per serving:*  
Calories 222 (24% from fat) • carb. 40g • pro. 4g • fat 6g • sat. fat 4g  
• chol. 16mg • sod. 345mg • calc. 29mg • fiber 4g

## Challah French Toast

Makes 6 servings (2 slices per serving)

- 12 3/4-inch thick slices day-old challah or brioche type bread (loaf shape)\*
- 8 large eggs
- 1-1/2 cups evaporated fat free milk (do not add liquid) or use 3/4 cup skim or 1% milk and 3/4 cup half-and-half
- 1/2 cup half-and-half (may use fat free)
- 1/4 teaspoon salt
- 1 teaspoon cinnamon
- pinch nutmeg (freshly grated)
- 1 tablespoon vanilla extract
- Tart Cherry Maple Syrup, warm (recipe follows)

Preheat oven to 200°F. Place a rack on a baking sheet and place in oven.

Arrange the challah slices in two 13 x 9 - inch glass baking dishes. Blend eggs, half-and-half, salt, spices, and vanilla until smooth but not foamy. Pour the batter around the bread slices. Turn the bread slices over and let sit 5 minutes; turn the bread over again.

Preheat the Griddle side to Medium (300°). When the Griddle is hot (indicator light will turn off), arrange 6 of the soaked slices on the Griddle surface. Cook until deep golden brown on each side, about 3 to 4 minutes per side. Remove from Griddle and serve or keep warm in low oven while preparing the remainder of the French Toast. Serve with warm Tart Cherry Maple Syrup.

\*Loaf style challah or brioche bread is available in the in-store bakery of most well-stocked grocery stores or in a bakery. Use a serrated knife to slice the bread.

*Nutritional information per serving:*  
Calories 408 (31% from fat) • carb. 48mg • pro. 21g • fat 14g • sat. fat 5g • chol. 332mg • sod. 657mg • calc. 318mg • fiber 0g

## Tart Cherry Maple Syrup

Makes 2 cups

- 1-1/2 cups real maple syrup
- 3/4 cup dried tart cherries (may substitute dried apples, blueberries, or cranberries)

Place the maple syrup and dried tart cherries in a 1-1/2 quart saucepan. Bring to a simmer over medium low heat. Reduce heat to low and keep syrup warm until ready to serve. Leftover syrup may be placed in a resealable container and refrigerated to use at another time. Reheat to serve.

*Nutritional information per serving (1/4 cup):*  
Calories 177 (0% from fat) • carb 45g • pro. 0g • fat 0g • sat. fat 0g • chol. 0mg • sod. 6mg • calc. 68mg • fiber 0g

## Seared Scallops

Makes 4 to 6 servings

- 2 pounds large sea scallops (dry preferred)
- 1-1/2 tablespoons extra virgin olive oil
- 1/2 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- 1/4 teaspoon sweet paprika
- lemon wedges

Remove the tough "foot" (muscle) from the side of each scallop – it is slightly more opaque in appearance and comes off easily. Place the scallops in a shallow bowl, drizzle with olive oil, and sprinkle with seasonings. Stir gently to coat evenly.

Preheat the Griddle side to Sear setting. When hot, arrange the scallops evenly over the Griddle, shaking off excess oil. Cook for 2 to 3 minutes (depending upon size), turn once and cook until deep golden in color, opaque and slightly firm to the touch. Serve hot or chilled.

*Nutritional information per serving (based on six servings):*  
Calories 192 (25% from fat) • carb. 3g • pro. 30g • fat 5g • sat. fat 0g • chol. 74mg • sod. 462mg • calc. 28mg • fiber 0g

## Salmon Burgers with Lemon Tarragon Sauce

Makes 6 servings

- 2 ounces shallots, peeled, finely chopped
- 1-3/4 pounds boneless, skinless salmon fillet, chopped into 1/4-inch pieces
- 2 ounces smoked salmon, finely chopped
- 1/2 tablespoon Dijon-style mustard
- 1/2 teaspoon kosher salt
- 1/4 teaspoon freshly ground black pepper
- Lemon Tarragon Sauce

Place the shallots, salmon and smoked salmon in a bowl. Stir in the mustard, salt and pepper. Divide the mixture into 6 equal portions and shape into 4-inch "burgers". Chill, if not cooking immediately.

Preheat the Griddle side to Med-High. When the Griddle is hot, arrange the Salmon Burgers evenly spaced on the Griddle. Cook for 3 (3-1/2 if mixture is chilled after preparing) minutes per side – do not overcook. Serve on toasted sourdough rolls or bread, with Lemon Tarragon Sauce.

*Nutritional information per serving (one salmon burger):*  
Calories 235 (44% from fat) • carb. 3g • pro. 29g • fat 11g • sat. fat 2g • chol. 78mg • sod. 400mg • calc. 40mg • fiber 0g

## Lemon Tarragon Sauce

Makes 1/2 cup

- 1/2 cup fat free plain yogurt
- zest of 1/2 lemon – strips, bitter white pith removed, finely chopped
- 1/2 teaspoon kosher salt
- 1/3 cup low-fat mayonnaise
- 1 teaspoon Dijon-style mustard
- 1 teaspoon tarragon

Place the yogurt in a yogurt strainer or fine mesh strainer lined with a paper coffee filter. Allow yogurt to drain for 30 to 40 minutes; discard whey (liquid).

Combine yogurt, mayonnaise, mustard, tarragon, lemon zest, pepper and salt in a bowl. Whisk until smooth and blended. Cover and refrigerate for 30 minutes or longer to allow flavors to blend.

*Nutritional information per serving (one tablespoon):*  
Calories 36 (71% from fat) • carb 2g • pro. 1g • fat 3g • sat. fat 0g  
• chol. 4mg • sod. 164mg • calc. 26mg • fiber 0g

## WARRANTY

### Limited Three-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart™ Grill & Griddle that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart™ Grill & Griddle will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We suggest you complete and return the enclosed product registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart™ Grill & Griddle should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it without charge to you. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Customer Service Representatives or send the defective product to Customer Service at Cuisinart, 150 Milford Rd., East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

**NOTE:** For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Please be sure to include your return address, daytime phone number, description of the product defect, product model # (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

Your Cuisinart™ Grill & Griddle has been manufactured to the strictest specifications and has been designed for use with the authorized accessories and replacement parts.

This warranty expressly excludes any defects or damages caused by accessories, replacement parts, or repair service other than those that have been authorized by Cuisinart.

This warranty does not cover any damage caused by accident, misuse, shipment or other ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

**CALIFORNIA RESIDENTS ONLY:**

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product to the store where it was purchased or to another retail store which sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product.

If either of the above two options does not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

# Cuisinart™

SAVOR THE GOOD LIFE™



Coffeemakers



Food Processors



Toaster Ovens



Blenders



Cookware



Ice Cream Makers

Discover the complete line of Cuisinart® brand premier kitchen appliances including food processors, mini food processors, hand mixers, blenders, toasters, coffeemakers, cookware, ice cream makers and toaster ovens at

**[www.cuisinart.com](http://www.cuisinart.com)**

©2004 Cuisinart  
Cuisinart® is a registered trademark of  
Cuisinart  
150 Milford Road  
East Windsor, NJ 08520  
Printed in China  
[www.cuisinart.com](http://www.cuisinart.com)

03CU13711

U IB-5059