

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Landmann 11543 Owner's Manual

[Shop genuine replacement parts for Landmann 11543](#)



[Find Your Landmann Grill Parts - Select From 200 Models](#)

----- Manual continues below -----



WARNING - risk of burning!

- ⇒ The barbecue must be positioned on a stable and secure surface when it is in use, otherwise it may tip over.
- ⇒ **WARNING!** This barbecue becomes very hot and should not be moved while in use!
- ⇒ Wear barbecue mitts or use barbecue tongs when barbecuing .
- ⇒ Allow the barbecue to cool down completely before cleaning it.
- ⇒ **CAUTION!** Do not use spirit or petrol to light or re-light the fire!

⇒ **CAUTION!** Only use firelighters that correspond to the European Standard for firelighters (EN 1860-3)!

⇒ Never use water to extinguish the charcoal.



WARNING - risk of suffocation!

⇒ Do not use indoors!



DANGER to children and pets!

⇒ Never leave the hot barbecue unattended.

⇒ **WARNING!** Keep children and pets at a safe distance!

Safe Operation of the Barbecue

Before using the barbecue for the first time, it should be heated with fuel (charcoal or briquette) for approximately 30 minutes.

General hints for a successful assembly

Carefully read the assembly instructions and the listed safety hints. Take time to assemble the barbecue and allow for a free area of approximately two - three square metres. Remove the barbecue from the packaging!

Note: First assemble all parts loosely, upon completion tighten all nuts and bolts securely

Single part list

A.	Cooking Grill	2
B.	Grill Handle	4
C.	Wind shield, side	2
D.	Wind shield, back	1
E.	Grill Support	1
F.	Grill Support, centre	1
G.	Charcoal Tray	2
H.	Hearth	1
I.	Carrying Handle	1
J.	Long Leg	1
K.	Wheel Leg	1
L.	Connecting Tube	2
M.	Bottom Wire Tray	1
N.	Leg Cap (pre assembled)	2
O.	Wheel	2
P.	Feet for Charcoal tray	4

Preparation

Check that all parts are complete as per the list and drawing. Have suitable tools ready.

