

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



LENNOX EC06 Owner's Manual

[Shop genuine replacement parts for LENNOX EC06](#)



[Find Your LENNOX Evaporative Cooler Parts - Select From 1 Models](#)

----- Manual continues below -----

LENOXX

Lenoxx Electronics Aust Pty Ltd
www.lenoxx.com.au
Customer Service : 1300 666 848

**Model Number : EC06
Evaporative Cooler
User Manual**



Please read and keep manual to ensure safe and effective use
of this Appliance

HOUSEHOLD USE ONLY

Table of Contents

Important Safety and General Instructions.....	3-4
Parts List Diagram	5
Operating Instructions.....	5
Cleaning, Care and Maintenance.....	7
Warranty Details and Customer Support Hotline.....	8-9

 
Important Safety and General Instructions

Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.



1. Read all instructions before using the Lennox EC06 Evaporative Cooler.
2. Close supervision is necessary when any appliance is used by or near children.
3. Do NOT use the Evaporative Cooler for other than its intended use.
4. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the appliance.
5. To protect against the risk of electric shock, do not immerse the motor unit, cord set or plug in water or any other liquid, or rinse under a tap.
6. The Evaporative Cooler is not intended to be operated by means of an external timer or any type of separate remote control system.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. This Evaporative Cooler is intended to be used **indoors for household use only**.
9. Before use, always ensure the Evaporative Cooler contains water. After cleaning, the water tank should be emptied.
10. When humidity is high, the Evaporative Cooler should be operated at normal fan type.
11. Do NOT use an extension cord unless completely necessary with this product. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of this appliance.
12. Do NOT pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
13. Do NOT bend or damage the power cord.
14. Always unplug the appliance when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, maintenance or moving the Evaporative Cooler.
15. Do NOT move or lift the Evaporative Cooler while the power cord is still connected to the wall outlet or still on. Always ensure it is switched off.
16. Never force the plug into an outlet.
17. To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product.
18. Do NOT leave the Evaporative Cooler unattended when in use.
19. Do NOT place the appliance near a hot gas or electric burner.
20. Do NOT cover the appliance whilst in use. If it is covered there is a risk of fire.
21. Improper installation may result in the risk of fire, electric shock and/or injury to persons

-
22. If the supply cord or plug is damaged, do not use the appliance. Please return to your place of purchase along with your receipt for a refund or exchange.
 23. The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
 24. The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
 25. Do not use the device at room temperatures above 40 °C.
 26. Do not leave the appliance exposed to harsh weather conditions (direct sunlight, rain, etc.).
 27. Do NOT place the product in or near an open window as rain may enter the product and cause electrical short-circuiting.
 28. Do NOT insert fingers or any other object through the grilles or into any opening of the product.
 29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
 30. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner, take it to the store where the unit was purchased or call Lenoxx customer service for further assistance on 1300 666 848

Parts List

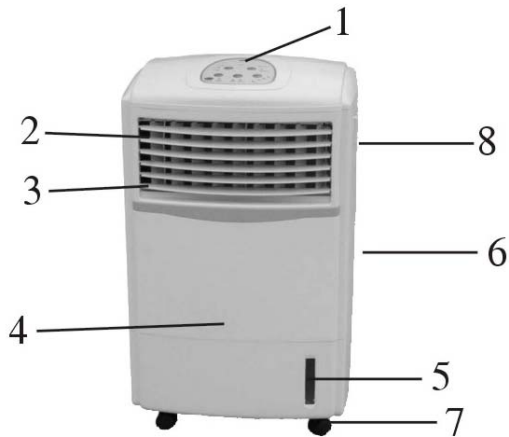

  
1. Control Panel
2. Vertical Grill
3. Horizontal Grill
4. Main Body
5. Water Level Indicator
6. Water Tank Opening
7. Castor Wheels
8. Handle
9. Cold PAK
10. Remote Control (not pictured, includes 2 x CR2032 lithium coin batteries)
11. Ice tray opening

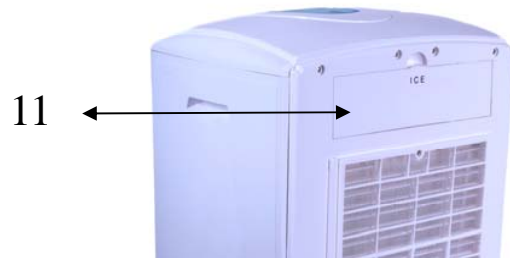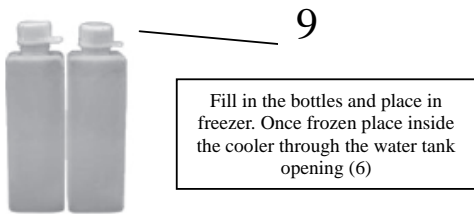

Operating Instructions

Please remove all parts from the packaging and read through the manual thoroughly before using for the first time. Ensure all parts indicated in the above parts list have been included in the gift box.

 Control Panel (on Unit)

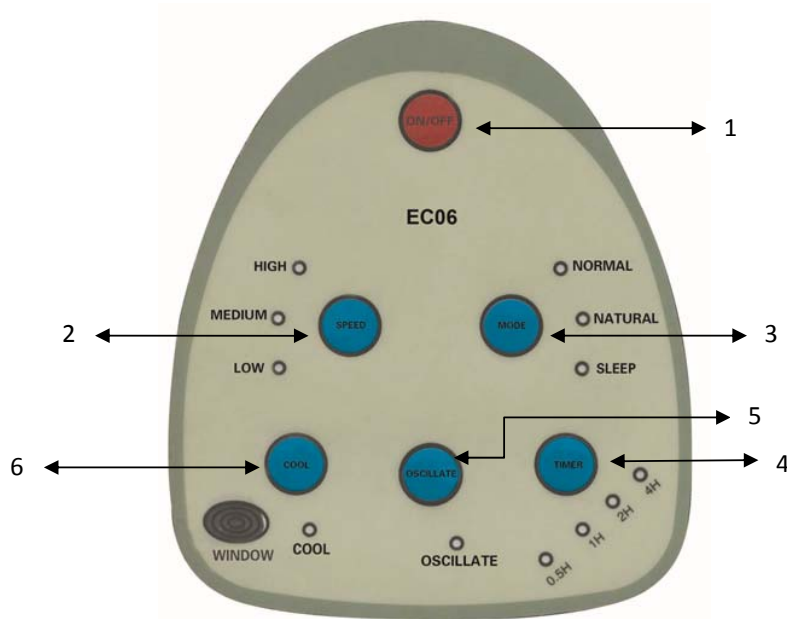

1. ON/OFF

To switch evaporative cooler on, press the **ON/OFF** (1) button. Press again to turn off.

2. Speed Selector – You can choose from 3 speeds by pressing the SPEED selector button (2) LOW, MEDIUM and HIGH.

3. Mode – Press the MODE button (3) to choose from the below options:

Normal – Continuous operation at your chosen speed setting.

Natural – In natural mode, the Cooler will cycle depending on the speed setting chosen:

HIGH – cycles between HIGH/MED/LOW/OFF

MEDIUM – cycles between MED/LOW/OFF

LOW – cycles between LOW/OFF

Sleep – In this mode, the Cooler cycles between MED/LOW/OFF. To activate sleep mode, you will need to set the TIMER to the period of the time that you desire. After the timer has expired, the Evaporative Cooler will switch OFF automatically and go to sleep.

NOTE: ONE full cycle is approximately 100 seconds. The Cooler will stop blowing air during this cycle for a few seconds. This is a normal part of the Natural and Sleep mode cycle.

 
4. Timer - The timer options are for 0.5, 1.5, 3.5 or 7.5 hours. Press the TIMER button (4) once to select 0.5 hours. The 0.5 will illuminate on the control panel. Press again to select 1.5 hours (both 0.5 and 1 will illuminate). Pressing 3 times will set the timer for 3.5 hours (0.5, 1 and 2 will illuminate). To set the maximum of 7.5 hours, press the TIMER four times (all 4 lights will be illuminated).

NOTE: The numbers illuminated on the display need to be added together, and the total will equal the length of time that the Evaporative Cooler stays on for. These numbers are represented by 0.5, 1, 2 and 4 on the control panel.

5. Oscillate – Press the OSCILLATE button (5) to turn on the automatic horizontal louvre function. The indicator light will illuminate when this function is chosen. The vertical direction can also be adjusted manually by moving the louvre in the direction you wish.

6. Cool – Press the COOL button (6) to switch to cool air flow.

Remote Control – The Evaporative Cooler comes with a remote control unit for more convenience. The remote requires 2 x CR2032 lithium coin batteries (included). The functions on the remote control are the same as those on the control panel of the main unit.

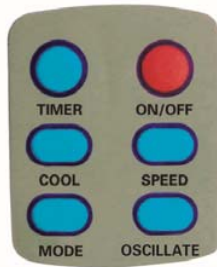

Operation

1. Place the Evaporative Cooler on a level, dry surface.
2. Open the water tank cover and pour in clean water or ice. If you use ice, you will actually get a cooler air temperature. Do NOT fill the water tank above MAX level indicator in the water tank.

NOTE: If fresh water/ice is required for next use, (or to empty the water tank) place a water container or bucket under the plug hole (found on the bottom of the unit) and remove the rubber plug. The residual water will then drain out from the water tank.



Figure: 1

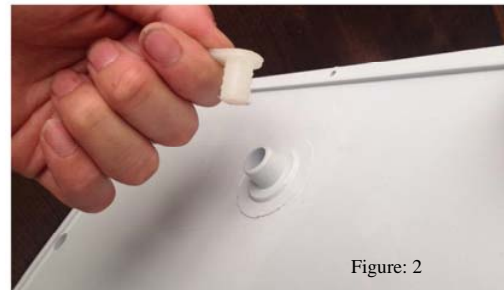 


Figure: 2

3. Select the wind speed by pressing the SPEED button. Please note the default wind speed is medium when you first press the **ON** button.
4. Press the MODE button to choose your desired setting.
5. Set the timer by pressing the TIMER button. The minimum setting is 0.5hr and maximum is 7.5hr.
6. To turn on horizontal oscillation, press the OSCILLATE button. You can control the vertical flow by manually adjusting the vertical louvres on the Evaporative Cooler.
7. To utilise the humidifying function, fill the Cold PAK with cold water then place in the freezer until they are frozen. Next, place inside the water tank. This will lower the water temperature, and the Evaporative Cooler will begin to humidify the air.

Cleaning, Care and Maintenance

NOTE: Always unplug the Evaporative Cooler from the electrical outlet and allow it to cool before servicing, relocating, cleaning, or storing it.

- Remove the rubber plug from the back of the unit and drain the water (place a bucket beneath the plug for the water to drain into). (see above figure 1 & 2 where rubber plug is found)
- Clean the body with a soft, slightly damp cloth; do not use abrasive or corrosive products.
- Clean the exterior surfaces only by wiping with a soft, damp cloth. Dust can be removed from the grille using a small vacuum.
- Do NOT disassemble the motor housing of this product for cleaning of internal parts, as doing so may result in product damage and will void the warranty.
- Do not immerse any part of the Evaporative Cooler in water or other liquid:
- It is essential that the motor's air vents be kept free from dust and lint.
- If the Evaporative Cooler is not used for long periods (eg. over winter), it is recommended to store the Cooler away in its original packaging in a cool dry place.

LENOXX
www.lenoxx.com.au



Facebook.com/LenoxxElectronics

Follow us



twitter.com/LenoxxAustralia

LENOXX

Lenoxx Electronics Aust Pty Ltd
www.lenoxx.com.au
Customer Service : 1300 666 848

LENOXX

LENOXX ELECTRONICS AUSTRALIA PTY LTD

Importers & Wholesalers of Electronics & Toys

6 Oban Court Laverton North Vic 3026

ABN: 97 844 321 851

Customer Service: 1300-666-848

Email Address: Lenoxx@lenoxx.com.au

Web Site:

ELECTRONICS GOODS WARRANTY

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

IMPORTANT MESSAGE: BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

"Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

MODEL NO:

EC06

BATCH NO:

PR3264