
Cuisinart

Stainless 6 Burner Gas Grill

ASSEMBLY INSTRUCTIONS

Model GAS0656AF

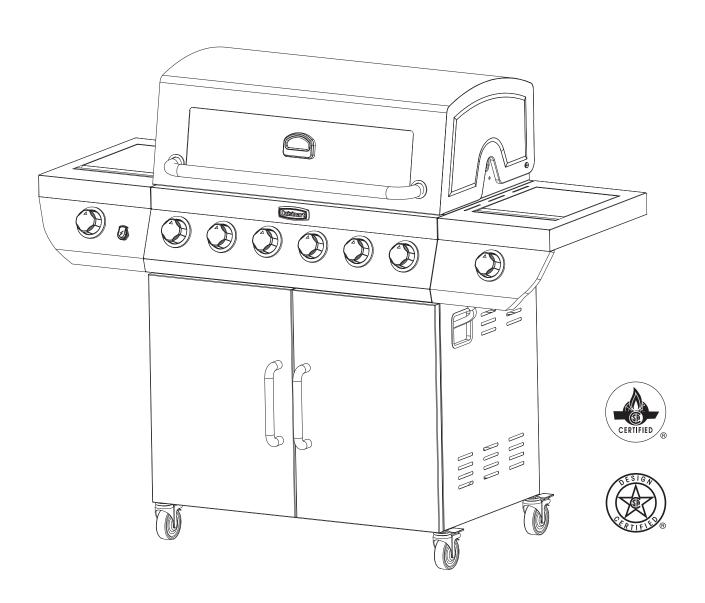

ASSEMBLY INSTRUCTIONS:

A READ ALL SAFETY WARNINGS & ASSEMBLY INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR OPERATING YOUR GRILL.

WE RECOMMEND TWO PEOPLE WORK TOGETHER WHEN ASSEMBLING THIS UNIT.

The following tools are required to assemble this Cuisinart 6 Burner Gas Grill:


- Phillips Screwdriver
- Pliers or Wrench

PARTS LIST:


① 1 ② 6 ③ 3 ④ 1	Grill Body Heat Tents Cooking Grates Warming Rack	9 2 10 2 11 1 12 1	Knobs Door Handles Grease Tray Handle AA Battery
(5) 1	Left Side Table	(13) 1	Grease Cup
<u>6</u> 1	Right Side Table	14 1	Sear Buner Grease Tray
7 1	Sear Burner Grate	15 1	Left Side Control Panel
8 1	Side Burner Grate	16 1	Right Side Control Panel
		17) 1	Sear Burner Wind Guard

Note: Most hardware is pre-attached to the grill. You may need to loosen some screws partially while others may need to be removed in order to assemble parts. The screws that you remove will be re-used so don't misplace this hardware.

Extra screws are included in a small bag with the owners manual.

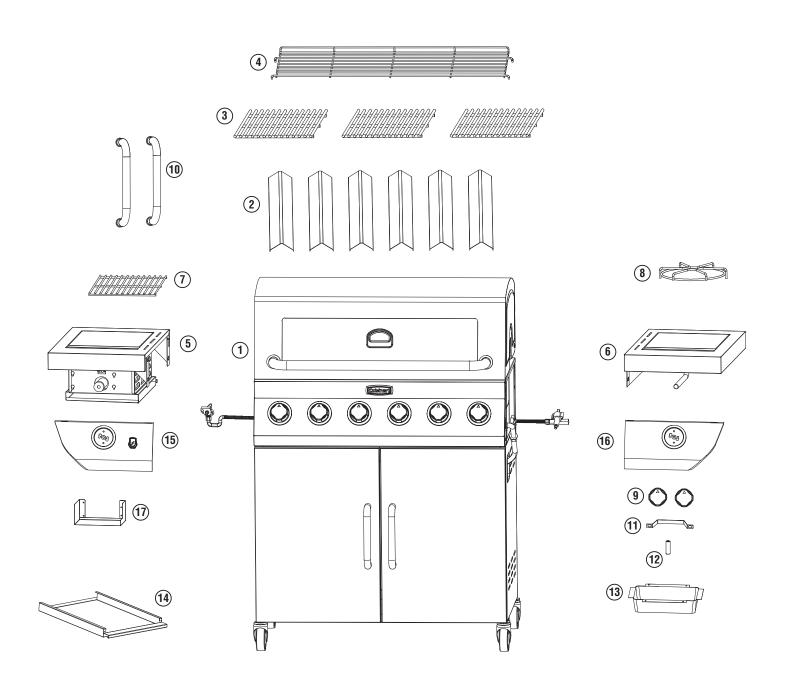



 Remove screw from LEFT SIDE TABLE 6

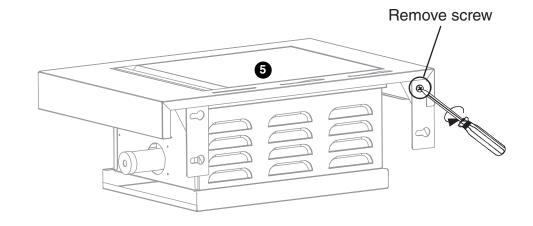


Step 2

• Remove 2 screws form **GRILL BODY**

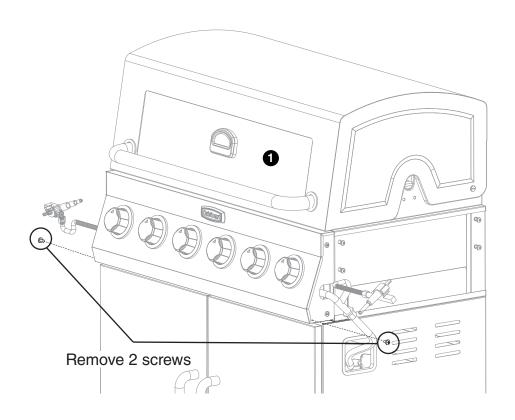

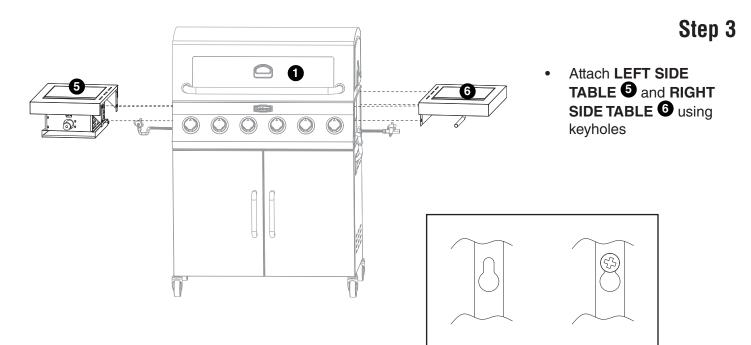


NOTE: Before tightening keyhole screws, make sure panels are aligned.

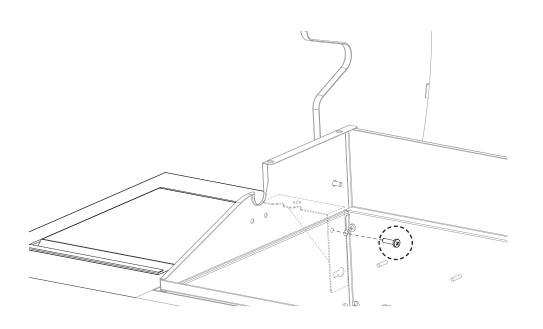

Step 4


 Install screw through firebox (Removed in Step 1)

- Remove 2 screws from SIDE BURNER VALVE
- Insert SIDE BURNER
 VALVE through holes in
 RIGHT SIDE CONTROL
 PANEL 6
- Tighten 2 screws on RIGHT SIDE CONTROL PANEL 6
- Attach RIGHT SIDE
 CONTROL PANEL to
 RIGHT SIDE TABLE using keyholes and screw
 (Removed in Step 2)
 make sure BURNER
 VENTURI fits over
 VALVE NOZZLE

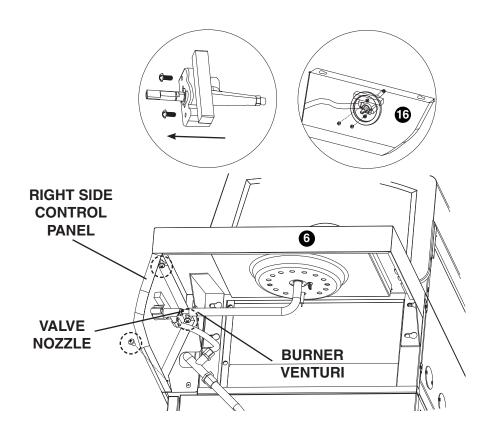


Step 6

 Attach ELECTRODE WIRE to IGNITOR

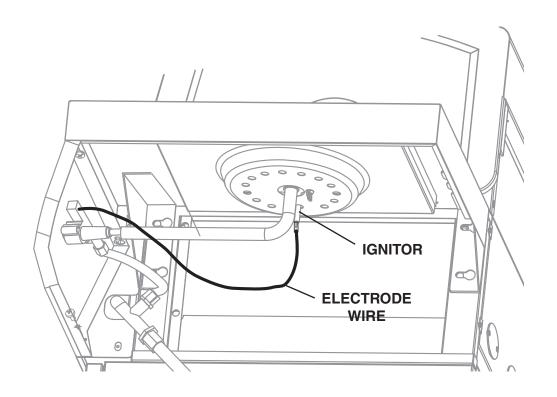


Step 7a

Attach **BLACK ELECTRODE WIRE** to **IGNITOR**

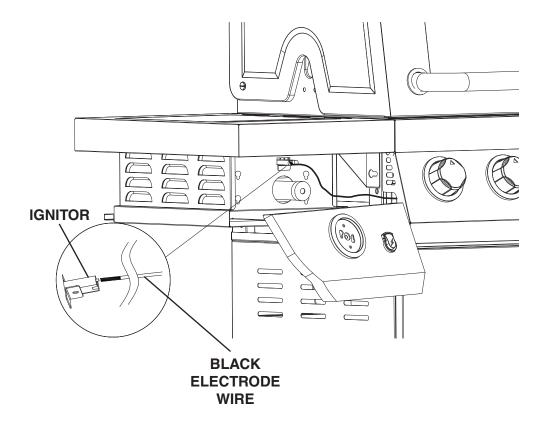


Step 7b

Attach IGNITOR WIRES to back of **IGNITOR BUTTON**

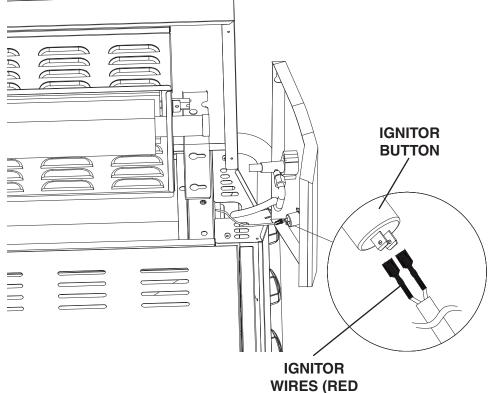


& WHITE)


- Remove 2 screws from SEAR BURNER VALVE
- Insert SEAR BURNER VALVE through holes in LEFT SIDE CONTROL PANEL 6
- Tighten 2 screws on LEFT SIDE CONTROL PANEL 15
- Attach LEFT SIDE
 CONTROL PANEL (5) to
 RIGHT SIDE TABLE (5)
 using keyholes and screw
 (Removed in Step 2)
 make sure BURNER
 VENTURI fits over
 VALVE NOZZLE

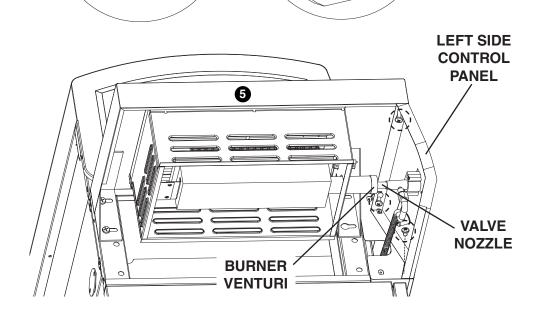


Step 9

- Loosen 4 screws on SEAR BURNER WIND GUARD
- Install SEAR BURNER
 WIND GUARD using
 keyholes
- Tighten 4 screws

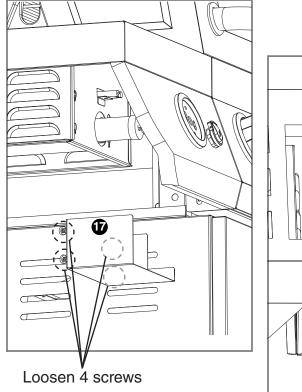

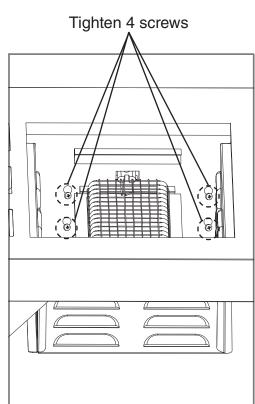


- Install HEAT TENTS 2, COOKING GRATES 3 and WARMING RACK 4
- Install SEAR BURNER
 GRATE 7 and SIDE
 BURNER GRATE 8
- Install SEAR BURNER and SIDE BURNER KNOBS 9

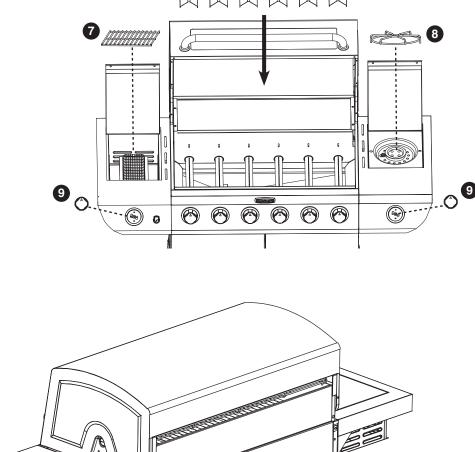


Step 11

- Remove 2 screws from GREASE TRAY
- Attach GREASE TRAY HANDLE 10 using 2 screws

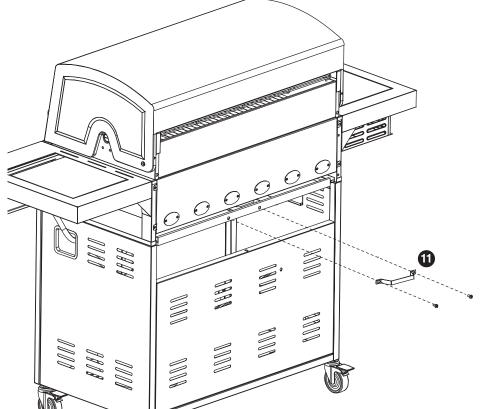


• Install SEAR BURNER
GREASE TRAY 4 and
GREASE CUP 13

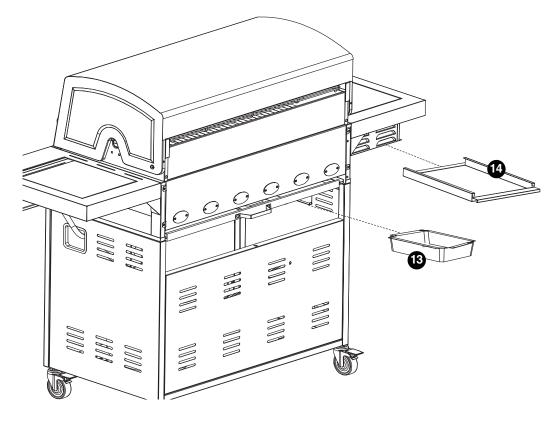


Step 13

Install DOOR HANDLES
 (Screws and inserts are pre-attached to handles)

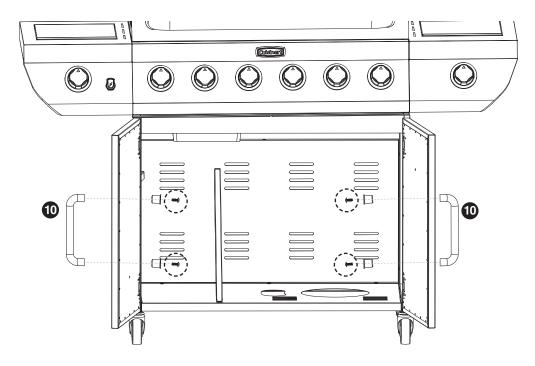

 Install AA BATTERY for ELECTRONIC IGNITION

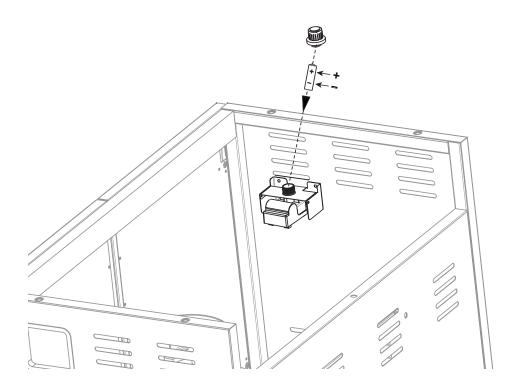

Model GAS0656AF Assembled

