

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Black & Decker P300S Owner's Manual

[Shop genuine replacement parts for Black & Decker
P300S](#)



[Find Your Black & Decker Toaster Ovens Parts - Select From 63 Models](#)

----- Manual continues below -----

BLACK+DECKER

TM

5 Minute

PIZZA OVEN & SNACK MAKER



use & care manual
P300S

* Tested with a 12" Cheese Classic Crust Pizza and a 12" Fresh Thin Crust Pizza at 120V.

THANK YOU FOR YOUR PURCHASE!



Register online at:

www.productprotect.com/applica



Rate and review your products at:

www.BlackAndDeckerAppliances.com



Share your pictures & stories with us online



Should you have any questions or concerns with your new 5 MINUTE PIZZA OVEN & SNACK MAKER, please call our Customer Service Line at 1-800-231-9786 (US and Canada.)

Please do not return to the store.

IMPORTANT SAFETY INSTRUCTIONS

When using your oven, basic safety precautions should always be followed, including the following:

- Read all instructions
 - Do not use this appliance for other than intended use.
 - Do not touch hot surfaces. Use handles or knobs. Internal cavity can reach up to 625°F.
 - To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
 - It is recommended to regularly inspect the appliance. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. For service, repair or any questions regarding your appliance, please call our Customer Service Line at 1-800-231-9786 (US and Canada.)
 - The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 - Do not use outdoors.
 - Do not let cord hang over edge of table or counter, or touch hot surfaces.
 - Do not place on or near a hot gas or electric burner, or in a heated oven.
 - To disconnect, turn timer control to "OFF"; then remove plug from wall outlet.
 - Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
 - Oversized foods or metal utensils must not be inserted in a pizza oven, as they may create a fire or risk of electric shock.
 - A fire may occur if the pizza oven is covered or touching certain materials, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation and keep oven vents unobstructed.
 - Use extreme caution while using containers constructed of materials other than metal or glass. Glass and metal containers should only be used on the Bake and Deep Dish settings of the appliance.
 - Do not store any materials, other than the manufacturer's recommended accessories, in this oven when not in use.
 - Do not place any of the following materials in the oven: paper, cardboard, plastic and other flammable materials.
 - Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - The appliance is not intended to be operated by means of an external timer or separate remote control system.
 - This pizza oven is not a traditional toaster oven and it is not intended to be used as a toaster. Never try to toast bread as it may create a fire or risk of electric shock.
- CAUTION:**
- This oven has been designed and tested to cook pizza and certain other foods. This oven is not intended, and should not be used to cook foods with a tendency to splatter or drip grease, as this can pose a fire risk. Food such as (but not limited to) bacon, bratwursts, and burgers should be avoided.
 - Use care when opening the oven door.
 - Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door.
 - Before cleaning any part of the unit, be sure the unit is off, unplugged and completely cool. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.
 - Do not use water on a grease fire.
 - Do not cook with the door open.
 - Do not place hands inside the appliance during operation.
- WARNING:**
- Only use provided Ceramic Tray and Tray Handle to cook and remove items from the oven. The Ceramic Tray must always be placed in the oven during operation. Standard oven safe pans, including but not limited to, metal and glass containers can only be used on Bake and Deep Dish settings.
 - Do not set the hot foods or Ceramic Tray directly on the countertop.
 - Do not attempt to heat or cook nonfood items in the oven.
 - Children should always be supervised around the oven during operation and while the oven is cooling before cleaning.
 - Do not use non-stick accessories such as pans and utensils while on the following settings: Regular/Thin Pizza Crust, Frozen Snacks, and Rising Crust Pizza.

SAVE THESE INSTRUCTIONS.
This product is for household use only.

SAFETY FEATURES

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electrical shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel. For service, repair or any questions regarding your appliance, please call our Customer Service Line at 1-800-231-9786 (US and Canada).

ELECTRICAL CORD

- 1) A short power cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- 2) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- 3) If a long detachable power-supply cord or extension cord is used:
 - a) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance,
 - b) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord
 - c) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power cord is damaged, please contact the warranty department listed in these instructions.

GETTING TO KNOW YOUR PIZZA OVEN



1. Ceramic Tray
(Part # P300S-01)
2. Crumb Tray
(Part # P300S-03)
3. Power Light
4. Tray Handle
(Part # P300S-02)
5. Tray Handle Hooks
(Part # P300S-04)
6. Control Knob
7. Timer and On/Off Knob




HOW TO USE

This product is for household use only.


GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Go to www.prodprotect.com/applica to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used. This unit should be placed on a stable, heat resistant surface, free from cloth, liquids and any other flammable materials. Allow enough space from back, front and sides of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Insert crumb tray before use. (Fig A)
- Install handle external hooks, see “Installing Tray Handle Hooks” section.
- Plug unit into electrical outlet. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

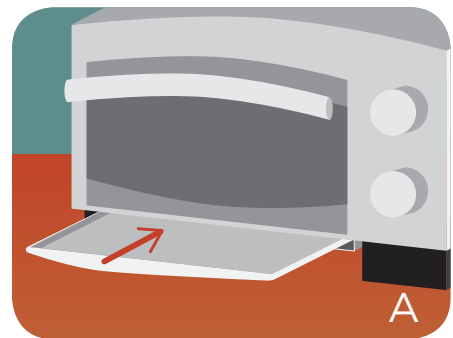

INSTALLING TRAY HANDLE HOOKS

1. Locate hook holes on both sides of the unit.
2. Find a location for your Pizza Oven, and then decide which side of the unit you would like your Tray Handle to be located.
3. Take the Handle Hooks, and screw them into the two holes on the desired side. Do not over tighten.
4. Place Tray Handle in the hooks. (Fig B)

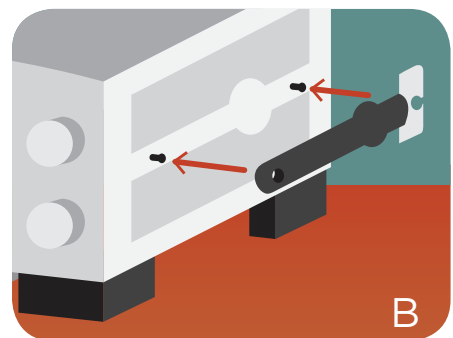

IMPORTANT INFORMATION ABOUT YOUR PIZZA OVEN

- This unit is designed to cook significantly faster than other cooking devices on most settings. Do not leave unit unattended while in use.
- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- Do not use cooking sprays or oils on ceramic tray while using functions that have Medium or High IR intensity. See function chart on next page.
- During first few minutes of use you may notice smoke and a slight odor. This is caused by oil that may have been used during manufacturing of the unit and will not impact the performance of this oven.
- You must set the timer for the pizza oven to function.
- The heating elements will cycle on and off during operation to maintain even heat distribution.
- Do not cut foods directly on the provided Ceramic Tray.
- Do not use parchment paper, silicone mats, or other baking liners in this oven.
- Opening the door often or for extended periods of time could impact preheat and cook time. Keep door closed whenever possible to retain heat.

PREHEATING

- Always preheat the oven for at least 5 minutes before use.
- For items such as pizza, frozen snacks, etc; always preheat the Ceramic Tray along with the oven by putting the Ceramic Tray in place before the appliance starts heating.
- For more sensitive baked goods such as cookies, croissants, etc; preheating the Ceramic Tray can cause the food to cook too quickly and is not recommended.
- As a general rule, if the foods are being cooked on the lower heat settings (Bake and Deep Dish) preheating the Ceramic Tray is not needed. If the foods cook at higher temperatures, preheat the Ceramic Tray for optimal results.
- For crispier crusts on your pizza we recommend preheating the oven for 10 minutes before the first use, then an additional 3-4 minutes between pizzas.

CHOOSING THE RIGHT FUNCTION

This Pizza Oven & Snack Maker features 5 easy to use settings that were specially programmed to ensure optimal results for the foods being cooked.

BAKE: Set with a constant temperature at 375°F, enabling you to bake general items like cookies or pastries in the Pizza Oven. Please note that while you can bake a variety of items at this temperature you may need to adjust your baking time.

FROZEN SNACKS: Optimized with high heat and high IR intensity to quickly cook basic frozen snack items in approximately half the time as a conventional oven. For best results insure all items being cooked are of the same type and general size. Please watch the cooking process closely as cooking times will vary depending on the item type and thickness.

PIZZA CRUST—REGULAR & THIN: This setting works with fresh or frozen pizza by optimizing the top and bottom heating elements to give you a crisp crust while melting the cheese on top. Depending on the thickness and number of toppings cooking times may vary so please watch the cooking process closely.

PIZZA CRUST—RISING: Developed with high heat but lowered IR intensity for both fresh and frozen rising crusts. This allows the crusts to rise appropriately. Please watch the cooking process closely as thickness and number of toppings may affect cook time.

PIZZA CRUST—DEEP DISH: Cooks the pizza more slowly at 375°F to ensure warm gooey toppings all the way through the pizza. While it will cook more closely to standard cooking times for deep dish pizzas please monitor the cooking process closely.

FUNCTION	IR INTENSITY	TEMP	RECOMMENDED BAKEWARE	EXAMPLE FOODS	RECOMMENDED COOK TIMES*	
Bake	Low	375°F	Provided Ceramic Tray, or oven safe metal or glass pans on provided tray	Cookies	8 - 12 mins	
				Croissants	8 - 10 mins	
				Cinnamon Rolls	7 - 10 mins	
Frozen Snacks	High	+600°F	Provided Ceramic Tray only	Frozen Potato Skins	4 - 5 mins	
				Frozen Jalapeño Poppers	5 - 6 mins	
				Frozen Chicken Nuggets	4 - 5 mins	
				Frozen Fish Sticks	4 - 5 mins	
PIZZA CRUST	Regular & Thin	High	+600°F	Provided Ceramic Tray only	Fresh Pizza Homemade Take and Bake**	4 - 5 mins
					Frozen Pizza	4 - 5 mins
					Thin Crust Pizza	4 - 5 mins
	Rising	Medium	+600°F	Provided Ceramic Tray only	Frozen Rising Crust Pizza	10 - 14 mins <i>time may vary depending on toppings</i>
					Frozen Meal Pockets	12 - 13 mins
	Deep Dish	Low	375°F	Provided Ceramic Tray, or oven safe metal or glass pans on provided tray	Deep Dish Pizza	35 - 45 mins
Pot Pie					25 - 30 mins	
Lasagna					50 - 60 mins	

*Household voltages may vary impacting cooking times

**If Take and Bake pizza comes with tray, do not use. Put pizza directly on Ceramic Tray.

OPERATING YOUR PIZZA OVEN

1. Turn the control knob to the desired function. See “Choosing the Right Function” section for guidance on settings.
2. Turn the timer knob past 10, and then to desired cooking time.
3. The power light will illuminate, indicating that oven is on and heating. The light will stay on until the timer counts down to “OFF”.
Note: The cooking cycle can be stopped at any time by manually turning the timer counter-clockwise to “OFF”.
4. Allow the Pizza Oven and Ceramic Tray to preheat for approximately 5 minutes. For crispier crust, preheat an extra 5 minutes on first pizza, and 3 - 4 minutes between pizzas.
Note: Preheat the Ceramic Tray along with the oven for frozen snacks, pizza, etc. For more sensitive baked goods, do not preheat the Ceramic Tray; instead insert the Ceramic Tray along with the food at the start of the baking time.
5. Open the door, slide the Ceramic Tray out using the Tray Handle, place the food in the center of the Ceramic Tray and close the door. Adjust timer as needed for cooking time.
Note: Placing pizzas or other items off center on the tray may cause uneven results.
6. At the end of the selected baking time the oven will ding and the power indicator light will go off, indicating the oven is no longer on.
7. Remove the food using oven mitts or by using the provided Tray Handle to pull the Ceramic Tray out. Place on a heat resistant surface. Always use caution when removing hot foods from the oven.
8. Unplug the appliance when not in use.

CARE AND CLEANING

This product contains no user serviceable parts.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged and completely cool. DO NOT clean the heating elements.

1. Clean the glass door with a sponge, soft cloth or nylon pad using dish soap and water. Do not use a spray glass cleaner.
 2. Clean the stainless steel with a sponge, soft cloth or nylon pad using dish soap and water. To polish and shine the stainless steel, you may use a non bleach cleaner such as *Barkeeper's Friend*[®].
 3. Ceramic Tray is dishwasher safe, but can also be cleaned using dish soap and water with a polyester or nylon pad. Similar to a pizza stone some discoloration will occur over time on the ceramic tray.
 4. Wipe crumb tray with a dampened cloth or paper toweling and dry thoroughly before inserting back into unit.
- Due to the intense heat inside of the oven, over time a slight yellowing may occur around the oven door. Cleaners such as *Barkeeper's Friend*[®] easily clean the surface to like-new condition. Only use these cleaners on the outside surfaces of the oven.
 - After use, the pan may slightly season and discolor. This is normal and should not affect results.

TROUBLESHOOTING

PROBLEM	EXPLANATION	RECOMMENDATION
My Pizza cooked unevenly.	The heating element types and location have been specifically optimized to cook a perfect pizza from the center of the pan without needing to rotate. Being off center can cause one side to cook a little faster than the other.	<ul style="list-style-type: none"> • When placing pizza on the tray, pull it out slightly with the tray handle to better see where the true center is. • If while cooking you notice this; pull the tray out and use oven safe utensils (such as a spatula or tongs) to move the pizza back into center for the rest of the cook time. Rotating the pizza can also help if you are farther long in the cooking process. Please note that opening the door could impact the cook time.
The food took longer to cook than expected or lacked crisp.	Preheating the appliance properly can affect the results; if a pizza is cooked before the oven is at the proper temperature the pizza may take longer to cook and could lack crisp.	<ul style="list-style-type: none"> • Always preheat the appliance for at least 5 minutes prior to cooking.
My Pizza didn't turn out on the Thin/Regular setting. or Some frozen snacks didn't turn out on the Frozen Snack setting.	<p>As with a normal oven, thick foods will need more cooking time than thinner foods. Because this oven cooks so quickly on the Thin/Regular and Frozen Snack settings the following may happen:</p> <ol style="list-style-type: none"> 1. Pizzas with thicker crusts or more toppings may brown before the pizza is truly cooked all the way through. Some toppings may even overcook while the rest of the pizza needs more time. 2. Frozen foods with various thicknesses may have some pieces done before others. Some piece may even overcook while others still need more time. 3. Some thick or dense frozen snacks might cook unevenly. The higher heat and IR intensity could cause the food to overcook on the outside, but still need more time on the inside. 	<ul style="list-style-type: none"> • Inspect the food before choosing a setting: <ul style="list-style-type: none"> • If the pizza crust looks thick or there are a lot of toppings (ex. supreme pizza), you may want to consider using the "Rising Crust" setting. The lower IR intensity helps cook slightly slower, giving the pizza more time to cook all the way through. • If frozen snacks have a large variation in thickness or size, you may want to consider using the "Rising Crust" setting. The lower IR intensity helps cook slightly slower, giving the food more time to cook all the way through. • If frozen foods are very dense or thick, you may want to try using the "Rising Crust" setting. The lower IR intensity helps cook slightly slower, giving the food more time to cook all the way through. • If while cooking you notice this, turn the control setting to "Rising Crust" and allow it to cook until desired doneness. If needed, remove items that are finished cooking and allow underdone items more time to finish cooking.
I want crispier crust on my pizza.	As with a normal oven, getting crispier crust requires more time and in some cases higher temperatures. Allowing the pizza oven to preheat longer will enable your oven to reach a higher temperature for desired results.	<ul style="list-style-type: none"> • Normal preheat is 5 minutes. Allow the oven to preheat for a full 10 minutes for crispier crust; follow the same cook times listed in cooking chart provided. • If cooking more than one pizza, allow 3-4 minutes of preheat between pizzas in order to keep the pizza oven at the correct temperature.
The unit is smoking.	As with a normal oven, leftover food or depress can cause the appliance to smoke.	<ul style="list-style-type: none"> • Always clean your oven between uses to avoid smoke and safety hazards. • Upon first use you may notice a light odor or smoke. This is normal and will cause no harm.

NEED HELP?

For service, repair or any questions regarding your appliance, please call our Customer Service Line at 1-800-231-9786. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this pamphlet.

Warranty Information

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands' liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.



www.BlackAndDeckerAppliances.com

BLACK+DECKER and the BLACK+DECKER logo are trademarks of The Black & Decker Corporation and are used under license. All rights reserved.

Made and Printed in People's Republic of China

© 2015 The Black & Decker Corporation and Spectrum Brands, Inc., Middleton, WI 53562

T22-5001336
11639-01