

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# Royal Gourmet CC1830F Owner's Manual

[Shop genuine replacement parts for Royal Gourmet  
CC1830F](#)



[Find Your Royal Gourmet Grill Parts - Select From 56 Models](#)

----- Manual continues below -----

# 30-Inch Charcoal Barrel Grill with Offset Smoker

## OWNER'S MANUAL

Series No. : 0919-A



### Customer Service

☎ 1-800-618-6798

#### FOR YOUR SAFETY!

Use outdoors only! Do not use it inside a building, garage, or any other enclosed space. Read the instructions before assembling and using the appliance.

DO NOT use the grill unless it is completely assembled, and all the parts are securely fastened. This grill will become very hot, do not move it during use. Keep away from children and pets.

#### CONTACT US FIRST!

This grill has been made to high quality standards.

If you have any questions that are not addressed in this Owner's Manual, or you need parts, please call our customer service hotline or

send an email to [service@royalgourmetusa.com](mailto:service@royalgourmetusa.com)

Please keep this Owner's Manual for future reference.

Learn more at:

[www.royalgourmetcorp.com](http://www.royalgourmetcorp.com)

**Before Using the Appliance** ..... 2

**For Your Safety** ..... 2-3

    Symbols ..... 2

    General Safety Instructions ..... 2

    Safety Instructions ..... 2-3

    Proposition 65 warning ..... 3

**Intended Use** ..... 3

**Assembly** ..... 3-9

    Preparation ..... 3

    Required Tool ..... 3

    Unpack Grill ..... 3

    Parts Diagram ..... 4

    Parts and Hardware List ..... 5

    Assembly Instructions ..... 6-9

**Smoker Preparation** ..... 10

**Types of Charcoal** ..... 10

**Smoking with Wood Chips** ..... 10

**Operating Instructions** ..... 11

**Indirect Operation** ..... 12

**Maintenance and Cleaning** ..... 12

**Grilling Recipes** ..... 13-14

**Smoking Recipes** ..... 15-16

**Disposal** ..... 17

**Declaration of Conformity** ..... 17

**Technical Details** ..... 17

**Warranty and Customer Service** ..... 17

**Spanish** ..... 18-35

**French** ..... 36-53

## Before Using the Appliance

After unpacking and before every use, check whether there is any sign of damage. If there is any damage, please do not use the grill and call customer service at 1-800-618-6798.

This owner's manual follows the standards and regulations applicable in the USA. For other countries, please follow the country-specific directives and laws!



Please read the safety information and this owner's manual before using the grill, to ensure safe and reliable use of this product.

Keep this owner's manual in a safe place and please provide this owner's manual along with the grill if you give it to someone else.

## For Your Safety

### Symbols

#### **Danger: High risk!**



Indicates a hazardous situation, which if not avoided, may result in death or serious injury.

#### **Caution: Moderate risk!**



Indicates a potentially hazardous situation, which if not avoided, could result in moderate injury.

## GENERAL SAFETY INSTRUCTIONS

### Shall be observed during each use.

- Do not use indoors!
- WARNING! Do not use spirit or petrol for lighting or relighting!
- WARNING! This appliance becomes extremely hot, do not move it when in use!
- WARNING! Keep children and pets away!

## SAFETY INSTRUCTIONS

### **Danger: Fire hazard!**



Live coals and grill components get extremely hot during use and can start fires.

1. Set up your smoker at least 3 feet (91 cm) away from any wall or surface. Maintain at least 10 feet (3 meters) clearance to objects that can catch fire or sources of ignition such as gas cans, LP cylinders, vehicle fuel cylinders etc.
2. Do not use this smoker on or near combustible surfaces or structures such as wood decks, dry leaves or grass, vinyl or wood siding, etc.
3. It is imperative that you have a fire extinguisher and first-aid kit handy in case of an accident or fire.
4. Place the grill on an even, horizontal, secure, heat-resistant, and clean surface.
5. Do not move the grill during use.
6. Ignite the charcoal only at a sheltered location.
7. Fill the grill with a max. 4.4 lb. of charcoal for the main chamber, and 3.3 lb. for the smoker.
8. Some foods produce flammable fats and juices. Clean the grill regularly preferably after each use.
9. Only tip out the ash once the charcoal has completely burned out and cooled down.

### **Danger: Risk of burning and accidents!**



This device is not intended for use by persons (including children) with limited physical, sensory, or mental capacities, or lacking experience, or knowledge.

- Such persons must be informed about the dangers of using the appliance and supervised by a person responsible for their safety.
- Any modifications to the product may lead to a large safety risk and are forbidden. Do not undertake any unauthorized modifications. In case of damage, repair, or other problems with the grill, contact our customer service at 1-800-618-6798, or send an email to [service@royalgourmetusa.com](mailto:service@royalgourmetusa.com)
- Keep children and pets away from the appliance. The grill, the charcoal, and the grilled food become hot during use. Any direct contact can result in serious burns.
- Keep sufficient distance from the hot parts, as any direct contact can lead to severe burns.
- Always wear oven mitts or BBQ gloves when grilling.
- Use only long-handled utensils with heat-resistant grips.
- Do not wear any clothing with wide sleeves.
- Use only dry lighters or special fluid lighters.
- Let the grill cool down completely before cleaning and/or placing in storage.

### **Danger: Risk of explosion!**



Flammable liquids that are poured on the embers may cause flash flames or explosions.

- Never use flammable liquids such as petrol or spirit.
- Do not put pieces of charcoal soaked in flammable liquid onto the embers.

### **Danger: Carbon monoxide hazard!**



When burning charcoal, barbecue briquettes, etc., carbon monoxide is formed. This gas is odorless and can be fatal in closed spaces!

- NEVER burn charcoal inside houses, vehicles, tents or other enclosed space.
- Use the grill OUTDOORS ONLY.

### **Danger: Health risk!**



Do not use any decolorants or thinners to remove stains. These are harmful to health and must not come into contact with food.

### **Danger: Injury to children!**



While playing, children can become caught in the packaging film and choke.

- Do not let children play with the packaging film.
- Make sure that children do not put any small assembly parts into their mouths. They could swallow the parts and choke on them.

## Danger: Risk of injury



Some parts may contain sharp edges!

- Be careful when touching the grill and its components as there is risk of accidents and/or injury during assembly and use. Wear protective gloves if necessary.
- Do not set up the grill near entryways or where a lot of people move around.
- Always exercise extreme caution while grilling. If distracted, you can lose control of the appliance.
- Always be attentive and aware of what you are doing. Do not use the grill if you are not focused, tired, or under the influence of drugs, alcohol, or medication. Just one moment of carelessness during use of the product can lead to serious injuries.

## Caution: Risk of damage!



During use, the screws may loosen slowly and impair the grill's stability.

- Check that the screws are well-tightened prior to each use. If necessary, tighten all the screws again to ensure the grill is standing securely.

## Caution: Risk of damage!



Do not use any strong or grinding solvents or abrasive ZJA pads, as these can damage the surface and leave behind scrape marks.



## CALIFORNIA PROPOSITION 65 WARNING

1. Fuels used in wood and charcoal burning appliances and the combustible byproducts of such fuels, can expose you to chemicals including carbon black and wood dust, which are known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm.
2. This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer.

Wash hands after handling this product.

For more information, go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## Intended Use

Use this grill to heat, cook and grill food.

This grill is intended exclusively for outdoor use and not for use indoors.

Only use the product as described in this owner's manual.

All other uses are considered improper and can lead to material damage or even personal injuries.

The manufacturer accepts no liability for damage caused by improper use.

## Assembly

Preparation

## Danger: Risk of explosion!



Failure to follow these instructions can lead to problems and risks while using the grill.

- Follow all the assembly instructions listed here.
1. First read the assembly instructions completely.
  2. Allow yourself enough time for assembly and find an even working space of two to three square meters.
  3. Small parts such as handles are preassembled.

## Required Tool (Not included)


1 x Phillips screwdriver



## Unpack Grill

Unpack the grill and dispose of all packaging materials. Keep the packaging materials out of the reach of children and dispose of them according to regulations after assembly of the grill. Take the following steps to assemble the grill.

**Before use, place the grill on an even, sturdy surface outdoors.**

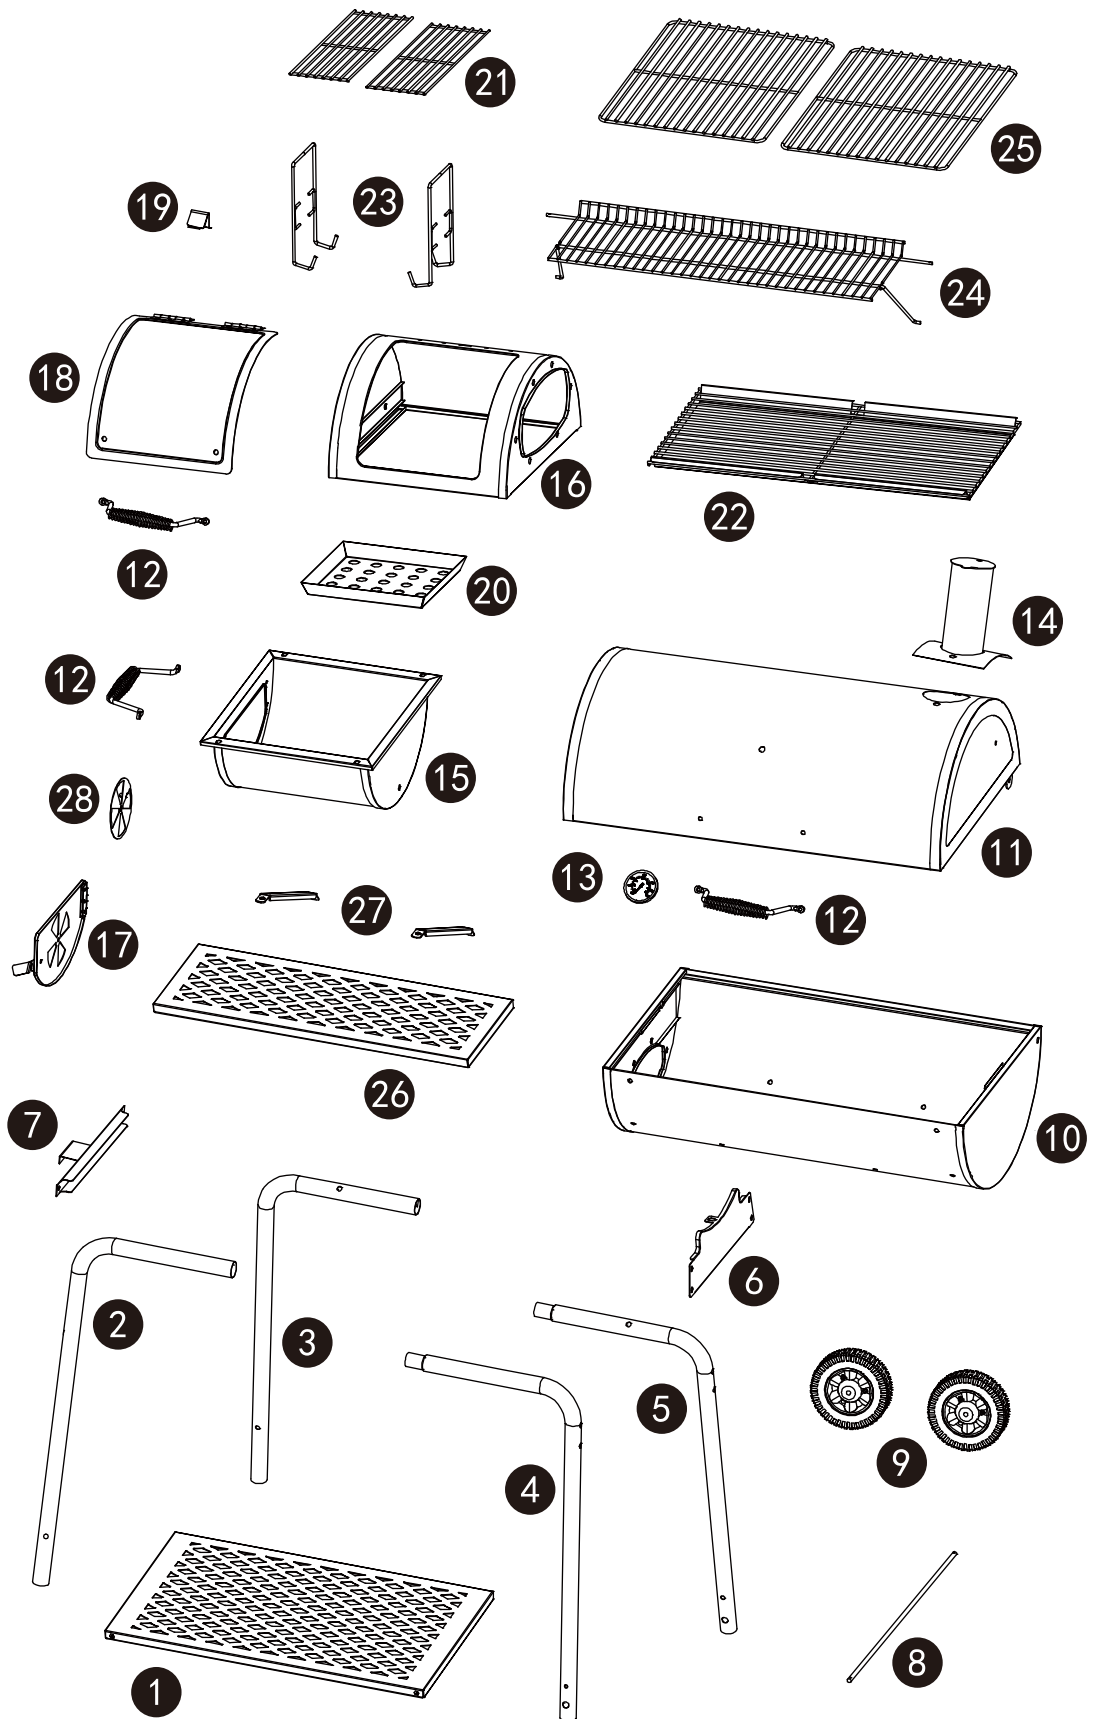

Ref	Description	Illustration	QTY	Ref	Description	Illustration	QTY
1.	Bottom shelf Z-CC1830056		1	15.	Smoker chamber H-CC1830012		1
2.	Left front leg Z-CC1830F014		1	16.	Smoker chamber top H-CC1830011		1
3.	Left back leg Z-CC1830F015		1	17.	Smoker side door H-CC1830007		1
4.	Right front leg Z-CC1830F016		1	18.	Smoker lid H-CC1830010		1
5.	Right back leg Z-CC1830F017		1	19.	Smoker lid connector Z-CC1830029		1
6.	Leg brace Z-CC1830010		1	20.	Smoker charcoal pan Z-CC1830054		1
7.	Smoker brace H-CC1830003		1	21.	Smoker cooking grate W-CC1830010		2
8.	Wheel axle W-20130023		1	22.	Charcoal pan set Z-CC1830008 W-CC1830007		1
9.	Wheel W-20130010		2	23.	Lifting rack W-CC1826A004		2
10.	Grill chamber H-CC1830013		1	24.	Warming rack W-CC1830003 W-CC1830006		1
11.	Grill chamber lid H-CC1830001		1	25.	Cooking grate W-CC1830005		2
12.	Handle W-CC1830S001 W-CC1830002		3	26.	Front table Z-CC1830057		1
13.	Thermometer W-11920008		1	27.	Front table support beam Z-CC1830031		2
14.	Stack H-CC115WT003 + Z-GC33A009		1	28.	Damper Z-GC33E028		1

A	M6x15	34 pcs	B	M4x8	6 pcs	C	M6	11 pcs	D	M6	3 pcs	E	M6x50	4 pcs
<b>F</b>	<b>Split pin</b>	<b>4 pcs</b>	<b>G</b>	<b>Pad</b>	<b>2 pcs</b>	<b>H</b>	<b>M5x10</b>	<b>4 pcs</b>						

Step 1


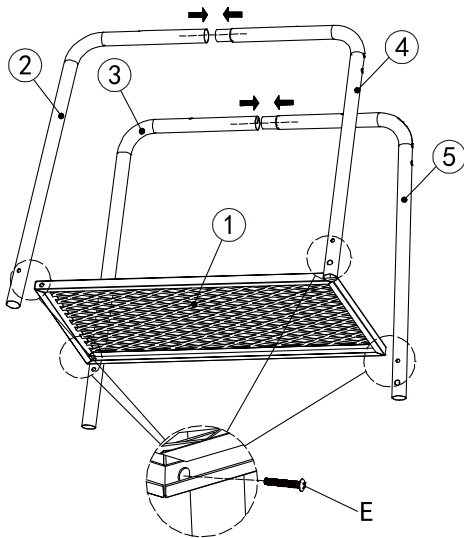


IMAGE 1


Connect the front legs (2) and (4); connect the back legs (3) and (5).  
Assemble the bottom shelf (1) to the legs with 4 bolts (E).

Step 2

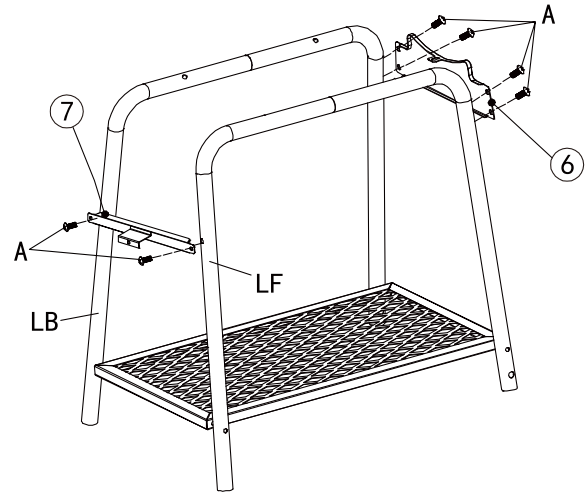


Assemble the smoker brace (7) to the left legs with 2 bolts (A), then attach the leg brace (6) to the right legs with 4 bolts (A).  
Please note: Do not secure the bolts until step 4.

Step 3

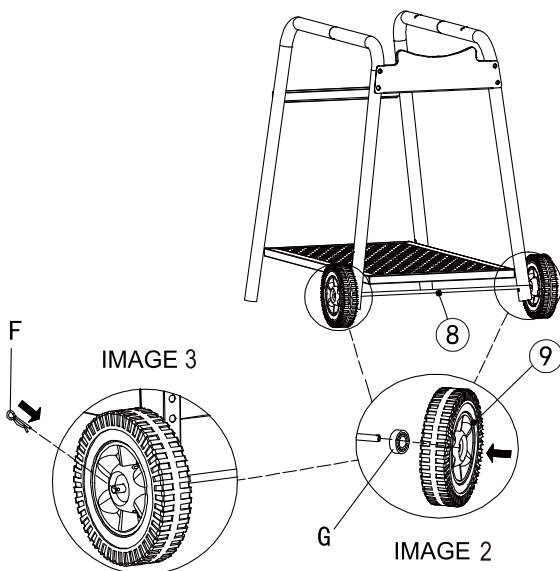


Slide the wheel axle (8) through the lower holes of the right leg assembly.  
Attach the wheel washers (G) and wheels (9) to the axle from both ends as shown in IMAGE 2.  
Secure each wheel with a split pin (F) as shown in IMAGE 3.

Step 4

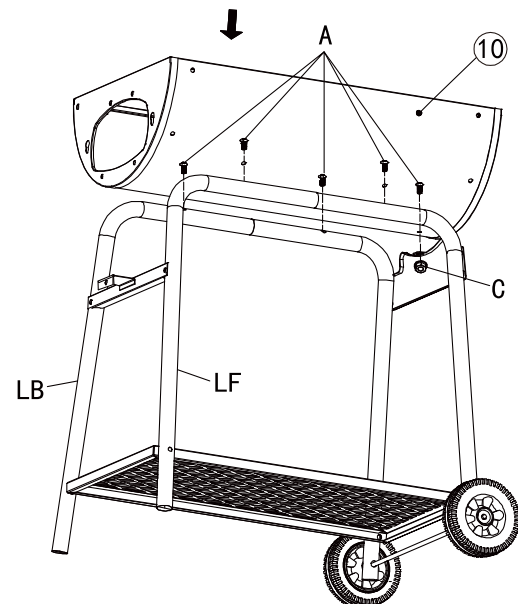


Assemble the grill chamber (10) to the legs with 4 bolts (A).  
At this point, hand-tighten the bolts only.  
Fasten the grill chamber to the leg connector with 1 bolt (A) and 1 nut (C) as shown.  
Now, secure all the bolts.

Step 5

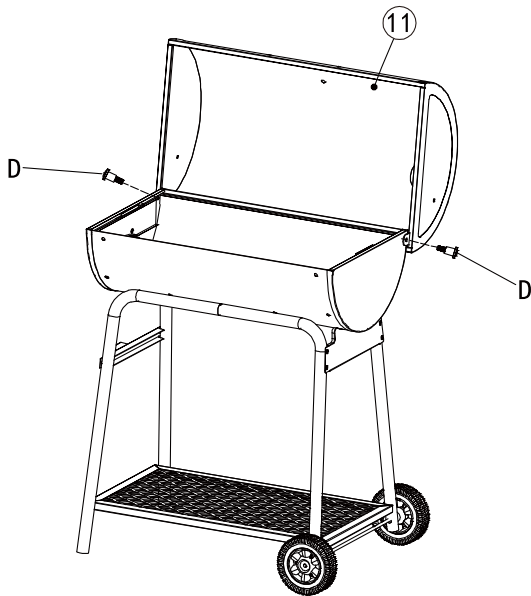


Assemble the grill chamber lid (11) to the grill chamber with 2 bolts (D).

Step 6

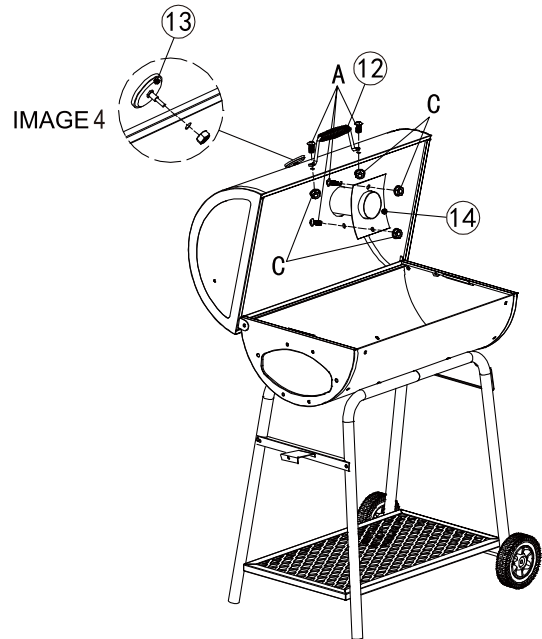


Fasten the handle (12) to the lid with 2 bolts (A) and 2 nuts (C).  
Fasten the stack (14) onto the lid with 2 bolts (A) and 2 nuts (C).  
Insert the thermometer (13) into the hole on the lid and secure it in place with the nut.

Step 7

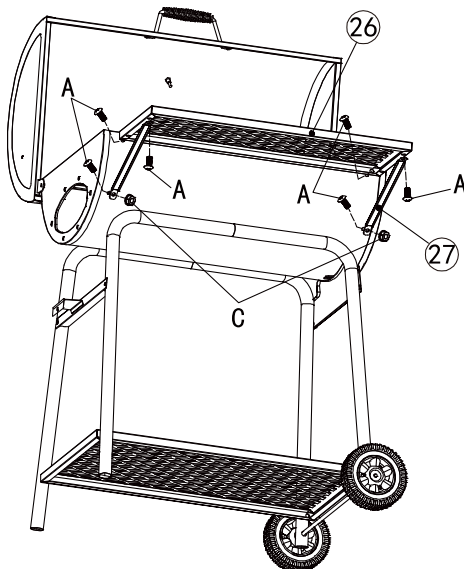


Assemble one end of the front table support beams (27) to the grill chamber with 2 bolts (A) and 2 nuts (C).  
Assemble the front table (26) to the grill chamber with 2 bolts (A).  
Fasten the other end of the support beams to the front table with 2 bolts (A).

Step 8

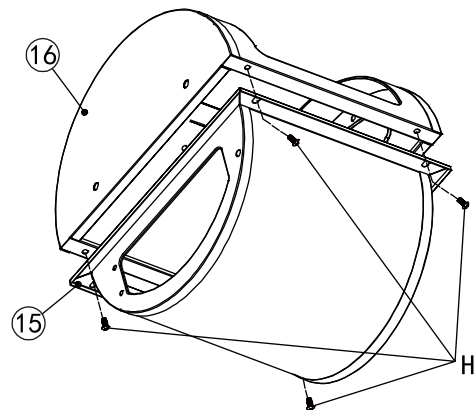


Assemble the smoker chamber (15) and the smoker chamber top (16) together with 4 bolts (H).

Step 9

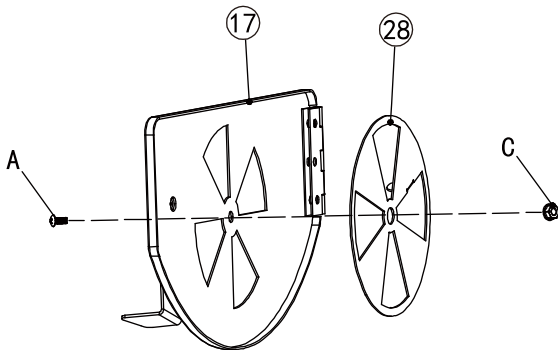


Fasten the damper (28) with the smoker side door (17) with a bolt (A) and a nut (C).

Step 11

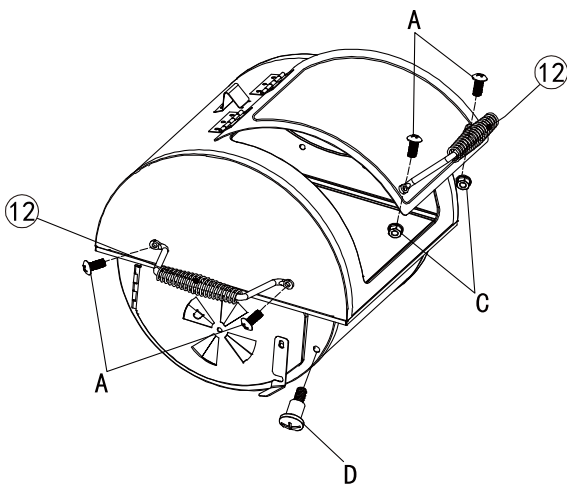


Fasten one handle (12) to the smoker lid with 2 bolts (A) and 2 nuts (C), and another handle (12) to the left side of the smoker chamber top with 2 bolts (A). Screw 1 bolt (D) to the smoker chamber as shown.

Step 10

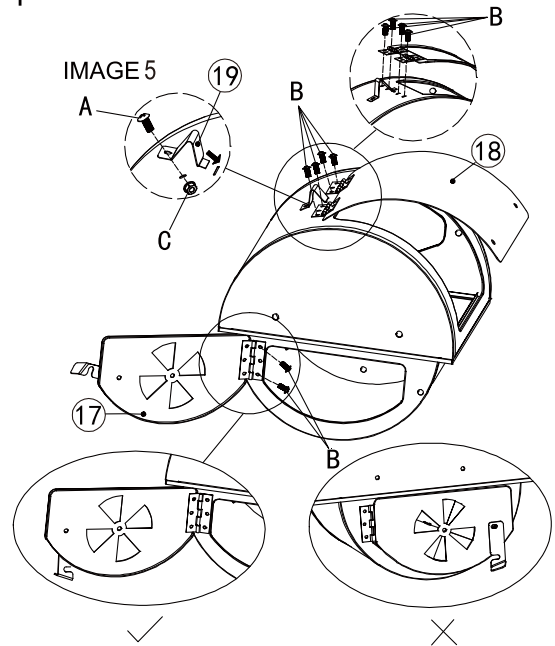


Assemble the smoker side door (17) to the smoker chamber with 2 bolts (B). Insert the smoker lid connector (19) to the slot on the smoker chamber, and fasten it with 1 bolt (A) and 1 nut (C) as shown in IMAGE 5. Assemble the smoker lid (18) to the smoker chamber with 4 bolts (B).

Step 12

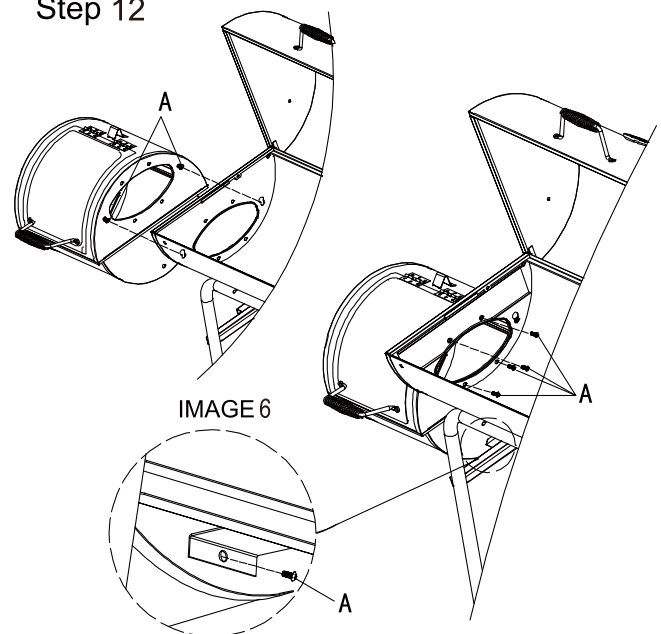


Half screw 2 bolts (A) on the smoker and align them with the holes on the grill chamber as shown. Fasten the smoker to the grill chamber with another 4 bolts (A) as shown. Secure the smoker to the smoker brace with 1 bolt (A) as shown in IMAGE 6.

Step 13

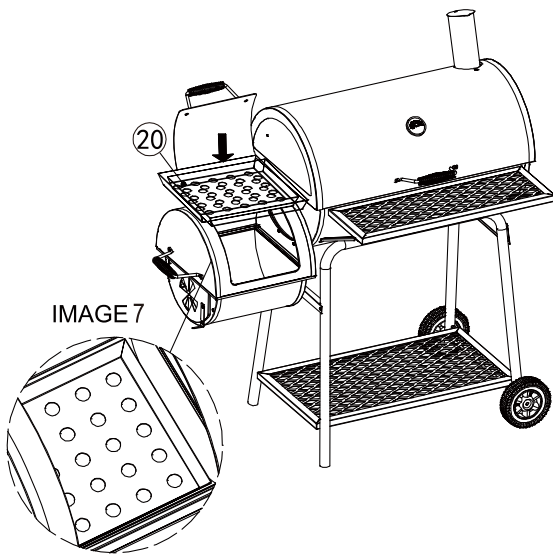


Place the smoker charcoal pan (20) into the smoker as shown in IMAGE 7.

Step 14

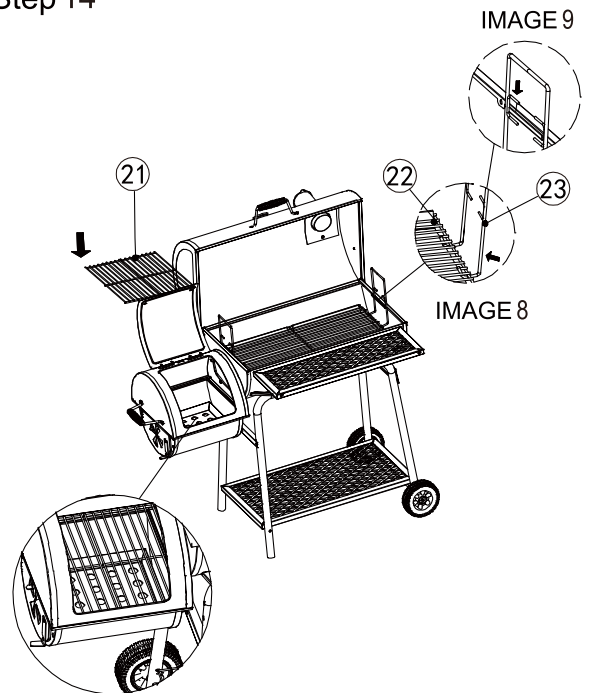


Place the smoker cooking grates into the smoker. Connect the lifting racks (23) to the charcoal pan (22) and place them into the grill chamber as shown in IMAGEs 8 and 9.

Step 15

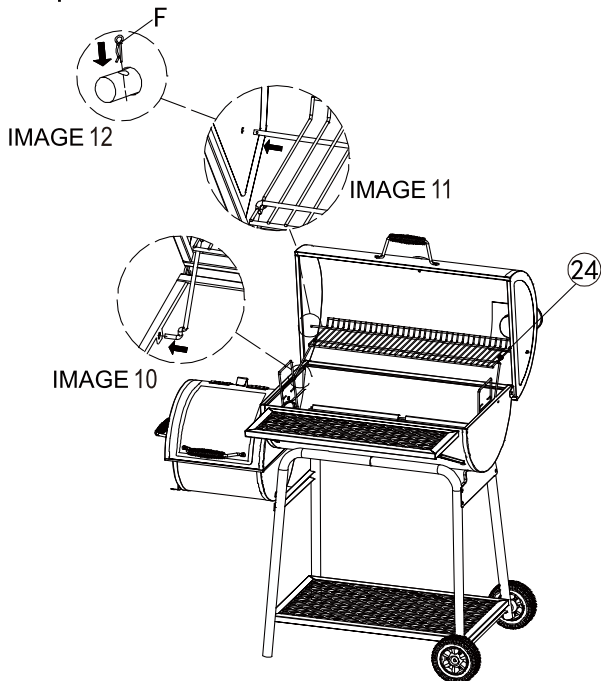

Insert the warming rack (24) by attaching it to the grill chamber and the lid. Secure it with 2 split pins (C) as shown.

Step 16

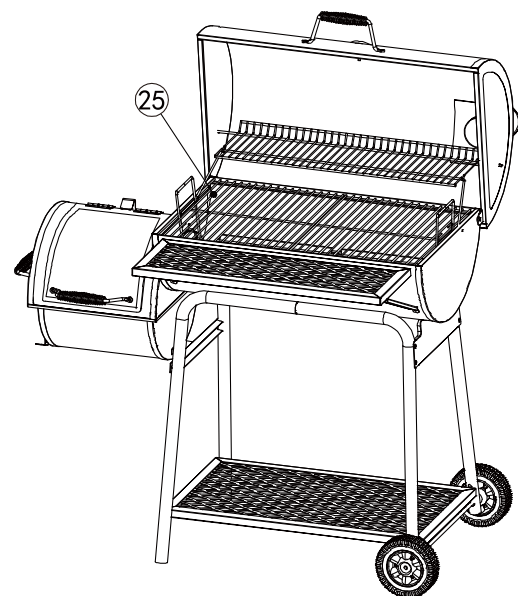

Place the cooking grates (25) into the grill chamber.

## Smoker Preparation

- Prior to first use, wash the cooking grates and the warming rack with warm soapy water.

- **Pre-firing**

Before your first cooking with your smoker, the following steps should be closely followed to both protect the interior and exterior finish and season the interior steel. Failure to properly follow these steps may impart unnatural flavors to your first foods, damage the finish, and result in affecting the overall durability of your smoker.

- Lightly coat interior surfaces including grills and cooking grates with vegetable cooking oil. This will extend the life of the finish, much like waxing a car.
- Build a small fire on the charcoal pan, make sure not to lay coals against the walls.
- Sustain burn for about two hours with lid closed and all dampers to 1/4 of the way open. Allow the smoker to cool down properly.
- Your smoker will then be ready for use.

 **Grill will drip oil during this process and for several uses afterwards. This is normal.**

NEVER EXCEED 400 °F AS THIS WILL DAMAGE THE FINISH AND CONTRIBUTE TO RUST. PAINT IS NOT UNDER WARRANTY AND WILL REQUIRE TOUCH-UP. THE PRODUCT IS NOT WARRANTED AGAINST RUST.

## Types of Charcoal

You can burn either charcoal briquettes or natural lump charcoal, which have different attributes. Charcoal briquettes typically provide longer cooking time and are usually less expensive while lump charcoal burns hotter and produces less ash.

## Smoking with Wood Chips

### Tips for Using Wood Chips

A lot of smoke is produced when using wood chips. Smoke can escape through seams and turn the inside of the smoker black. This is normal. Wood chips must be used to produce smoke and create the smoke flavor. Never use more than 1 box of wood chips at a time.

You can use dry or pre-soaked wood chips in your smoker.

Dry chips burn faster and produce more intense smoke.

Chips pre-soaked in water (for approximately 30 minutes) burn slower and produce a less intense smoke.

Check wood chip box periodically to see if wood has burned down. Add more chips as required.

### Smoking with wood chips/wood chunks

For a more robust smoke flavor while using charcoal briquettes or lump charcoal, try adding wood chips or several wood chunks to the fire. Wood chunks are available in a variety of natural flavors and can be used alone or in addition to charcoal. As a rule, any hardwood that bears a fruit or nut is suitable for cooking. However, different woods have different tastes. Experiment with different woods to determine your personal favorite, and always use well-seasoned wood. Green or fresh-cut wood can turn food black and taste bitter.

### Our Recommendations:

**Chicken** – Alder, Apple, Hickory, Mesquite, Sassafras, Grapevine

**Beef** – Hickory, Mesquite, Oak, Grapevine

**Pork** – Fruitwoods, Hickory, Oak, Sassafras

**Lamb** – Fruitwoods, Mesquite

**Veal** – Fruitwoods, Grapevine

**Seafood** – Alder, Mesquite, Sassafras, Grapevine

**Vegetables** – Mesquite

## Operating Instructions



### Building The Fire

1. Open the lid and remove the cooking grates.
2. To start a charcoal fire, we recommended to stack 2 lb. (approximately 30 briquettes) into a pyramid-shaped pile and saturate with lighter fluid, adding more as needed on the charcoal pan. Allow the coals to ash over before adding more.



Do not use gasoline, kerosene, or alcohol for lighting charcoal. Use of any of these or similar products can cause an explosion possibly leading to severe bodily injury.

3. Light the coals in several places.
4. After the briquettes ash over and produce a red glow, spread them evenly across the charcoal pan. Please use a suitable heat-resistant tool with a long, heat-resistant handle when you do this.
5. Put the cooking grates in place and adjust the charcoal pan to the desired height by using the lifting handle/lever and start cooking.
6. If the charcoal is not burning evenly, please use long-handled tongs to move coals for even heat.
7. Leave the lid open or closed based on the type of BBQ meat. Please close the lid when longer cooking time is needed. The thermometer located on the lid shows the temperature to ensure it is not too high for a particular BBQ meat.



Chimney starters, electric starters, or other types of fire starters may be used instead of lighter fluid to light fire but use only according to manufacturer's instructions.

Never use instant light charcoal or charcoal lighter fluid with any other starting methods.



Allow enough time for grill to heat up before cooking. You can't cook properly when the grill is cold, and you can't build a fire properly when you are busy preparing food.

Once the fire is burning well, it is easy to keep it going with a little attention.



Rising heat will move up and out of the grill, open the dampers to allow more fresh air into the grill.

The more air into the grill, the hotter the internal temperature will be until the fuel has been maximized. During cooking, the dampers can be fully open to ensure a higher internal cooking temperature. Close the dampers as needed to decrease the airflow for a lower cooking temperature. Check the heat indicator to monitor the grill temperature.



The adjustable charcoal pan can also be used to control the temperature.

Use the lifting handles to raise the charcoal pan for quick searing and lower it for slow cooking.

### Always use a flame-retardant insulated grill mitt when adjusting the air vent or the charcoal pan.



**Use extreme caution to avoid injury when opening the lid and removing the cooking grates to add charcoal.**

1. Wear flame-retardant insulated grill mitt, use the lifting handles to lower the charcoal pan to its lowest setting as handles will be extremely hot.
2. Please remove all the food and the cooking grates to add charcoal. Use long-handled tongs to stoke coals, make the ash fall through the slots in the ash tray.
3. Make sure to put back the cooking grates in position after this procedure.
4. Raise the charcoal pan to the desired level as needed.



**Do not use lighter fluid or instant light charcoal when adding additional charcoal to an existing fire. This is dangerous and can cause injury. It will also leave a lighter fluid aftertaste on your food. Only add regular charcoal or wood chunks to an existing fire.**

## Indirect Operation

- For items that take longer to cook, you will want to use indirect grilling. This method is for long, slow cooking in a covered grill.
- For indirect cooking, the coals are piled two or three coals deep on one side of the grill, or divided and piled on two sides. This leaves an empty space next to the coals or between them. Food cooked over indirect heat is often started over direct heat and then moved to the cooler (empty) part of the grill for even, slow cooking. To make the heat as even as possible, construct two piles of coals.
- It is common to place a metal drip pan in the empty space beside or between the coals, which is filled with water, wine, beer, broth, or a combination. Place the food directly over the drip pan. This injects a little extra moisture into the cooking environment and also catches dripping juices, which makes clean-up a little easier and reduces the possibility of flare-ups. (Remember to keep a spray bottle filled with water on hand to extinguish any flare-ups.)
- Once you get used to the indirect method, you may prefer to use it for more grilling tasks. Although it may take a little longer, it is an excellent cooking method and a sure way to prevent the food from burning and to promote even cooking.

### Tips for Indirect Smoking

**Pans are not included, and a disposable bread pan is recommended. Please purchase it separately.**

- If you want to sear certain foods before smoking, please place meat directly above charcoals on the cooking grates with lid open in high (hot) position for several minutes.
- Add flavor-soaked wood chips to the fire and add 1-part marinade, beer, or wine with 3 parts water into the drip pan.
- Open the smoking chamber will extend cooking time.
- Insert the thermometer into the thickest part not touching the bone and allow five minutes to register.
- Check the water level when cooking for more than 4 hours or when you can't hear the water simmering.
- Add water by turning the meat over and pouring water through the grill into the water pan.

IF THE SMOKE IS WHITE, THE FIRE IS PERFECT.

IF THE SMOKE IS BLACK, YOU NEED MORE AIRFLOW.

## Maintenance and Cleaning

Your grill is made of high-quality materials. To clean and maintain the surfaces, please follow the below instructions:

### **Danger: Risk of burning!**



Let the grill cool down completely before cleaning.

- Only tip out the ash when the charcoal has completely burned out.

### **Danger: Health risk!**



Do not use any decolorants or thinners to remove stains. These are harmful to health and must not come into contact with food.

### **Caution: Risk of damage!**



Do not use any strong or grinding solvents or abrasive pads, as they can damage surfaces and leave behind scratch marks.

When you have finished grilling you can shut down your grill by closing both dampers and allowing the fire to extinguish.

Be patient. This may take an hour or more.

### **Empty the Ashes & Ash tray:**



After the fire is completely extinguished you should wait several hours before emptying the ashes to ensure they are not hot, or else there will be risk of burns.

- Knock any ashes that did not fall into the ash tray from the charcoal pan. (If there are pieces of partially burned charcoal on the charcoal pan, you can save them for use the next time. They are still good).
- Tap the sides of the chamber to loosen any ash that is on the sides.
- Lift out the charcoal pan and empty out the cold ash. It is particularly important that you remove the ash before moisture combines with the cold ash. Ash collects moisture, which can cause premature rusting and decay from the inside of the ash collecting tray. Thus, over years the ash collecting tray can get rusted and damaged.
- Give the ash tray a few firm taps to loosen any ash that may be stuck.
- Place the ashes in a metal container and fill with water to ensure there are no lit coals, then you can dispose of the ashes.
- Let the charcoal burn out completely after grilling. This eases the cleaning effort by burning away excess fat and BBQ residue.
- Clean the grill regularly and optimally after every use.
- Remove the cooking grates and clean them thoroughly with soapy water. Then dry them off thoroughly.
- Use a wet sponge to remove loose residue from the grill.
- Use a soft, clean cloth for drying. Do not scratch the surfaces when wipe them dry.
- Clean the internal and external surfaces with warm soapy water.
- Tighten all screws before every use to ensure your grill is stable at all times.
- Protect your grill against weather. Since it is manufactured from steel it will gradually rust. Clean possible rust spots and repair them with fireproof paint. It is important that you remove the ash from the firebox before the cold ash collecting moisture as this can lead to rust damage.  
NEVER PAINT THE INTERIOR OF THE SMOKER.



The grill should always be stored where it is protected from moisture.



Charcoal is porous and holds moisture. **DO NOT** leave charcoal in your grill when you are not using it. Charcoal and ashes left inside the ash pan may reduce the durability of your grill.

## Direct Heat

<b>BEEF INTERNAL TEMPERATURE CHART</b>			
<b>Cooking Degree</b>	<b>Internal Core Temperature</b>	<b>Internal Description</b>	<b>Firmness</b>
Rare	125 °F	Center is bright red, pinkish toward the outer portion, and warm throughout	Soft to the touch
Medium Rare	130-135 °F	Center is very pink, slightly brown toward the outer portion and slightly hot	Yields only slightly to the touch
Medium	140-145 °F	Center is light pink, outer portion is brown and hot throughout	Beginning to firm to the touch
Medium Well	150-155 °F	Mostly brownish gray throughout with a hint of pink in the center	Firm to the touch
Well Done	155 °F and above	Steak is brownish gray throughout	Firm or hard to the touch
<b>POULTRY INTERNAL TEMPERATURE CHART</b>			
Whole Chicken	165 °F	Cook until the juices run clear	Firm to the touch
Dark Meat	165 °F	Cook until white throughout but still moist	Firm to the touch
Breast Meat	165 °F	Cook until white throughout but still moist	Firm to the touch
Thigh, Wings and Legs	165 °F	Mostly brownish gray throughout with a hint of pink in the center	Firm to the touch
<b>PORK INTERNAL TEMPERATURE CHART</b>			
Medium	150 °F	Pink in the center	
Well Done	160 °F and above	Pork is uniformly white/brown throughout	
Pork Ribs	180-200 °F	Pale white. Cook medium to well done	
Raw Sausage	160 °F	No longer pink	
Sausage (Pre-cooked)	140 °F	No longer pink	

---

## STEAK (& ALL MEATS):

- Cook food on the charcoal side of the unit, directly above coals/heat.
- To grill meats, raise the charcoal pan to its highest position (hot) and sear for one minute on each side with the lid open to seal in flavor and juices.
- Then lower the fire grate to the medium position with lid closed and cook to desired degree.
- Control heat with dual dampers and adjustable fire grate.

### Tip:

Place grilled meat back in the marinade for several minutes before serving and it will be tastier and juicier.

### CAUTION:

Boil extra marinade first to kill bacteria remaining from the raw meat.

---

## MARINATED FLANK STEAK:

- Mix marinade ingredients in a nonmetal dish.
  - Let steak stand in marinade for no less than 4 hours in the refrigerator.
  - Brown each side for 5 minutes, but center should remain rare.
  - Cut steak diagonally across the grain into thin slices before serving.
  - Grill with fire grate in high(hot) position with lid open or closed.
- 

### Meat Marinade

- 1/2 cup vegetable or olive oil
  - 1/3 cup soy sauce
  - 1/4 cup red wine vinegar
  - 2 tbsp lemon juice
  - 1 tsp dry mustard
  - 1 minced clove garlic
  - 1 small minced onion
  - 1/4 tsp pepper
- 

## QUAIL OR DOVES:

- Cover the birds with good amount of seasoning and marinate overnight.
  - Pour remaining dressing and cover with Texas Pete Hot Sauce for 6 hours.
  - Wrap birds in thick bacon secured by a toothpick.
  - Place on grill. Keep turning until bacon is black.
  - Grill for 20 minutes. Sear with lid open and fire grate in high (hot) position for 1 minute on each side before lowering the grate and closing the lid.
  - To smoke the birds, place them in the center of the grates with fire in both ends of the fire box.
- 

## HOT DOGS :

- Grill with lid up and cooking grates in high (hot) position for approximately 6 minutes.
  - Turn every few minutes.
- 

## SWEET CORN IN HUSKS:

- Trim excess silk from end and soak in cold salted water 1 hour before grilling.
  - Grill for 25 minutes – turning several times.
- 

---

## KABOBS:

- Alternate any combination of meat, onions, tomatoes, green peppers, mushrooms, zucchini, circular slice of corn-on-the-cob, or pineapple on skewers. Meat could consist of shrimp, scallops, lobster, chicken, sausage, pork, beef, etc.
  - Marinate the meat in refrigerator for several hours.
  - Grill each side for approximately 7 minutes, turning occasionally while basting with marinade.
  - Leave a small amount of room between pieces in order to cook faster.
  - Grill with lid up and the cooking grates in the lowest position.
- 

### Kabob Marinade:

- 1 cup soy sauce
  - 1/2 cup brown sugar
  - 1/2 cup vinegar
  - 1/2 cup pineapple juice
  - 2 tsp salt
  - 1/2 tsp garlic powder
  - Mix all ingredients in a saucepan and bring to boil.
  - Allow marinade to cool before marinating your meat in it.
  - Marinate beef in the mixture a minimum of 4 hours.
- 

## HAMBURGERS:

See meat marinade on prior pages.

You may also marinate by allowing to stand in marinade for 1 or 2 hours at room temperature before cooking or let it stand in a covered dish in the refrigerator for up to 24 hours.

- Bring to room temperature before cooking.
  - Mix in chopped onions, green peppers, salt, sear 3/4 inch patties on each side, with cooking grates in high position for a few minutes.
  - Lower fire grate to medium position and grill with lid down to avoid flare-ups.
  - Cook each side 3 to 7 minutes according to desired degree.
  - Cook ground meat to 150 °F internal temperature or until juice runs clear (free of blood) to prevent E-coli infections.
  - Burgers can be basted with marinade when turning and/or other ingredients can be mixed in with the ground beef such as chili sauce or powder.
- 

## SHRIMP (Peeled) & CRAYFISH:

- Place on skewers.
  - Coat with melted butter and garlic salt.
  - Grill for 4 minutes on each side or until pink. Cocktail sauce optional.
- 

## BAKED POTATOES:

- Rub with butter and wrap in foil and cook on grill with lid down for 50 minutes.
  - Turn after 25 minutes (no need to turn if smoked).
  - Squeeze to check if it is cooked.
-

# Indirect Heat

## Smoking Time

Food	Weight			Temperature in meat thermometer
Beef Roasts, Beef Brisket	3-4 lb.	1-1½ hours	4-5 hours	140 °F rare
Lamb Roasts, Venison	5-7 lb.	1¾-2½ hours	5-6 hours	160 °F medium
Large cuts of Game	7-9 lb.	2½-3½ hours	7-10 hours	170 °F well done
Pork Roasts	3-4 lb. 5-8 lb.	1¾-2½ hours 2½-3 hours	5-6 hours 7-8 hours	170 °F 170 °F
Pork/Beef Ribs	Full grill	1½-2 hours	4-6 hours	Meat pulls from bone
Pork Chops	Full grill	¾-1¼ hour	4-6 hours	Meat pulls from bone
Sausage Links	Full grill	2-2¾ hours	4-5 hours	170 °F for fresh sausage
Ham, Fresh	10 lb.	3-4 hours	7-8 hours	170 °F
Ham, Cooked	All sizes	1½-2 hours	3-4 hours	130 °F
Chicken (Cut up or split)	1-4 fryers, cut-up or split	1-1¼ hours	4-5 hours	180 °F/leg moves easily in joint
Chicken (Whole)	1-4 fryers	1¼-1½ hour	5-6 hours	180 °F/leg moves easily in joint
Turkey (Unstuffed)	8-12 lb.	1¾-2½ hours	7-8 hours	180 °F/leg moves easily in joint
Fish, small whole	Full grill	½-¾ hours	2-3 hours	Flakes with fork
Fish, filets, steak	Full grill	¼-½ hours	1-3 hours	Flakes with fork
Duck	3-5 lb.	1-1¾ hours	5-6 hours	180 °F/leg moves easily in joint
Small game birds	Full grill	¾-1 hour	4-5 hours	180 °F/leg moves easily in joint

### SMOKED TURKEY:

- Empty cavity, rinse and pat dry with paper towel.
- Tuck wing tips under the back and tie the legs together.
- Place in center of cooking grate directly above the foil drip pan of water.
- Smoke for 12 minutes per pound. Allow several extra minutes per pound if stuffed, to allow for expansion.
- Use a meat thermometer for best results (190 °F internal).

### SMOKED BAKED HAM:

You can smoke fully cooked canned ham or smoked and cured whole ham or shank or butt portion.

#### Glaze

1 cup of light brown sugar, firmly packed

½ cup orange juice

½ cup honey

- Mix sugar, juice, and honey. Let the glaze sit for at least 4 hours.
- Place fire grate in the lowest position and a drip pan under the meat.
- Remove rind and score fat diagonally to create a diamond pattern.
- Insert a whole clove into the center of every diamond.
- Place ham with fat side up in the center of the cooking grid directly above drip pan. Close lid.
- Cooking for about 9 minutes per pound is suggested for fully cooked ham. Smoked or cured ham, which is not fully cooked, should be cooked to an internal temperature of 160 °F.
- Baste with ham glaze 3 or 4 times during last 30 minutes of cooking time.
- Garnish with pineapple rings for about 15 minutes before end of cooking time.

### STUFFED SMOKED HOT DOGS:

- Slit hot dogs lengthwise, within ¼ inch of each end.
- Stuff hot dogs with cheese and relish and wrap in bacon.
- Place on cooking grid over drip pan and smoke for 15-20 minutes or until bacon is crisp.

### SMOKED PIECES:

- Rinse pieces in cold water and pat dry with paper towels.
- Brush each piece with vegetable oil and season with salt and pepper to taste.
- Brown pieces directly above coals with lid open and grate in high or medium position for several minutes.
- Then, place pieces on cooking grate directly above drip pan.
- With the grate in the low position, cook with lid down for 55 to 60 minutes or until done. Do not use vegetable oil or salt and pepper if using marinade.

### SMOKED VENISON:

Venison Marinade:  
1 cup balsamic or wine vinegar  
1 cup olive oil  
2 oz. Worcestershire  
1/2 oz. Tabasco  
2 tbsp. Season-All  
1–2 chopped jalapenos  
3 oz. soy sauce

Bacon Marinade  
2 oz. wine vinegar  
2 oz. Worcestershire  
4 dashes tabasco sauce

- Place leg of venison in a container or “hefty bag” and marinate for 2–4 days, turning daily. Marinate bacon overnight in its marinade.
- Remove roast from refrigerator at least an hour before cooking.
- Season generously with seasoned salt and coarse ground black pepper.
- Wrap 1 lb. bacon over the top of the roast, and smoke for 20/25 minutes per pound, or until tender. Do not overcook.

---

### SMOKED SHRIMP & CRAYFISH:

- Mix 1/2 cup butter, two cloves of crushed garlic, tabasco sauce, sliced green pepper, 1 tablespoon each of minced onions, salt, and juice from one lemon in a foil pan.
- Add shrimp and/ or crayfish and smoke for 45 minutes.

---

### SMOKED VEGETABLES:

- Turnips, potatoes, carrots, okra, mushrooms, peeled onions, zucchini, squash, etc.
- Put in pan and cover with water and cook for several hours while cooking the meat, or place vegetables on grill and smoke for 50 minutes directly or wrapped in foil.

---

### SMOKED FISH:

- Marinate in brine (1/4 cup dissolved in 1 qt. of water) or marinate fish in 1 cup white wine, 1 cup soy sauce mixed with 1 cup lemon juice.
- Marinate overnight in covered dish in refrigerator.
- Let it air on rack 20 minutes before placing on Pam-sprayed grill.
- Smoke for 25 minutes.

---

### SMOKED SPARE/BACK RIBS:

- Peel off tough layer of skin on back side.
- Rub all surfaces with seasoning.
- Place ribs in the center of the cooking grid above the drip pan and smoke approximately 1½ hours or until meat pulls away from bone.
- Baste with barbecue sauce during last 30 minutes.

### CHICKEN MARINADE:

Mix  
1/2 cup soy sauce  
1/4 cup vegetable oil  
1/4 cup red wine vinegar  
1 teaspoon oregano  
1/2 teaspoon sweet basil  
1/2 teaspoon garlic powder with parsley  
1/4 teaspoon pepper

- Pour over chicken pieces in a non-metal dish.
- Cover and refrigerate overnight, turning occasionally. Use marinade to baste chicken while cooking.

---

### MEAT MARINADE: (For steaks, chops, and burgers)

Mix  
¼ cup soy sauce  
2 coarsely chopped large onions  
2 cloves garlic (halved)

- Mix ingredients in an electric blender, cover, and process at high speed 1 minute or until mixture is smooth.
- Stir in 1/4 cup bottle gravy coloring (Kitchen Bouquet and Gravy Master) and 2 teaspoons Beau Monde seasoning (or substitute 1 teaspoon MSG and 1 teaspoon seasoned salt).
- Allow meat to stand in marinade at room temperature for 2 hours or refrigerate up to 24 hours in a covered dish.
- Bring meat to room temperature before cooking.

---

### SHISH KABOB MARINADE:

Mix  
1 cup soy sauce  
1/2 cup brown sugar  
1/2 cup vinegar  
1/2 cup pineapple juice  
2 teaspoon salt  
1/2 teaspoon garlic powder

- Mix ingredients and bring to a boil.
- Marinate beef in mixture a minimum of 4 hours.

## Disposal



The packaging is made from environmentally friendly materials, which you can dispose at your local recycling points.



Do not dispose of the grill in normal household waste under any circumstance! Dispose it at an approved disposal site or at your community disposal facility.

Respect the current valid regulations. If in doubt, get in touch with your disposal facility.

## Declaration of Conformity

This product is in compliance with the applicable America and national directives.

## Technical Details

Model:	Royal Gourmet® CC1830F
Net Weight:	49.8 lb.
Overall Dimensions (Grill Assembled):	41.54 x 27.56 x 48.62 inches (L x W x H)
Cooking Area:	823.45 square inches
Max. Amount of Fuel:	4.4 lb. charcoal for main chamber 3.3 lb. charcoal for offset smoker

## Warranty and Customer Service

Thanks for purchasing this Royal Gourmet® Charcoal Grill. We are here to help you maximize your enjoyment and appreciation of your new grill. We provide a warranty for your product within the framework warranty condition under normal use of one year from the date purchase for all components covering defects and manufacturing errors.

Royal Gourmet's obligations are limited to the following:

- This warranty does not cover grills that have been altered or damaged due to normal wear, rust, abuse, improper maintenance, improper use, or modifications to the product. Repair labor is not covered.
- This warranty does not cover surface scratches or heat damage to the finish which is considered as normal wear.
- All warranty claims apply only to the original purchaser and require a proof of purchase verifying date of purchase.
- All parts that meet the warranty requirements will be shipped at no-charge via the discretion of the customer service department.
- Do not return parts without prior to obtain return authorization from our customer service department.

Except as stated above, Royal Gourmet Corp. makes no other express warranty.

This warranty may give you specific legal rights that vary by state.

Please do not hesitate to contact our customer service when you have any questions regarding assembly, warranty, or accessories. We will be happy to offer any replacement parts you need during the time of warranty period.



1-800-618-6798



[service@royalgourmetusa.com](mailto:service@royalgourmetusa.com)



Mon-Fri, 8:30 AM-5:30 PM, EST