

**30" Oven Modules Parts List
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	808579	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
5	800950	Transformer, Light
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	807053	Board, Relay"
10	807046	Controller, Oven, Single, 30"
	807045	Controller, Oven, Double, 30"
11	808583	Bracket-Z, Latch, Top Oven
12	808586	Bracket, Support, Top Module
13	808581	Bracket, Cord, Power
14	804537	Switch, Thermostat, Lower (PTS #16064458)
	811669	Switch, Auto Thermostat, Lower (SWS #16064458)
15	800263	Latch, Motorized
16	807542	Pan, Module, 30"
17	800386	Pan, Middle, DO
18	808588	Bracket, Air Diverter, DO
19	820129	Bracket-Z, Latch, Bottom Oven, DO

**36" Oven Modules Parts List
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	801224	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
5	800950	Transformer, Light
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	807053	Board, Relay
10	807047	Oven controller, Single 36"
11	820130	Bracket-Z, Latch
12	808586	Bracket, Support, Top Module
13	808581	Bracket, Cord, Power
14	804554	Switch, Thermostat, 36"
15	800263	Latch, Motorized
16	807543	Pan, Module, 36"

Not Shown

809449	Cable, Relay to Controller, 28"
809450	Cable, Relay to Controller, 21"
801714	Power Cord Conduit, Single
812348	Power Cord Conduit, Double

**Oven Modules Exploded View
Single and Double Oven**

