

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Farberware FAC100B Owner's Manual

[Shop genuine replacement parts for Farberware
FAC100B](#)



[Find Your Farberware Blender Parts - Select From 9 Models](#)

----- Manual continues below -----

A NEW GENERATION OF FARBERWARE
FARBERWARE[®]
FOR A NEW GENERATION OF COOKS

ACCENTS



USE & CARE INSTRUCTIONS 3 SPEED BLENDER

FAC100B

61454

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Consumer Service for examination, repair or electrical or mechanical adjustment.
7. The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Keep hands and utensils out of the Glass Blending Jar while blending to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the Blender is not running.
12. Blades are sharp. Handle carefully.
13. To reduce the risk of injury, never place Blade Assembly on Motor Housing without Blending Jar properly attached.
14. Always operate Blender with Blending Jar Lid in place.
15. When blending hot liquids, remove center piece of two-piece Lid.

SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this Owner's Manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. Do not leave this appliance unattended during use.
4. If this appliance begins to malfunction during use, immediately turn the Control Dial to the (O) OFF position and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
5. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. **Do not reach into the water!** Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.
8. Do not use if the Glass Blending Jar is cracked or chipped.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating from the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top.

 
Failure to do so may cause the finish to darken, permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR **FARBERWARE**[®] 3 SPEED BLENDER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

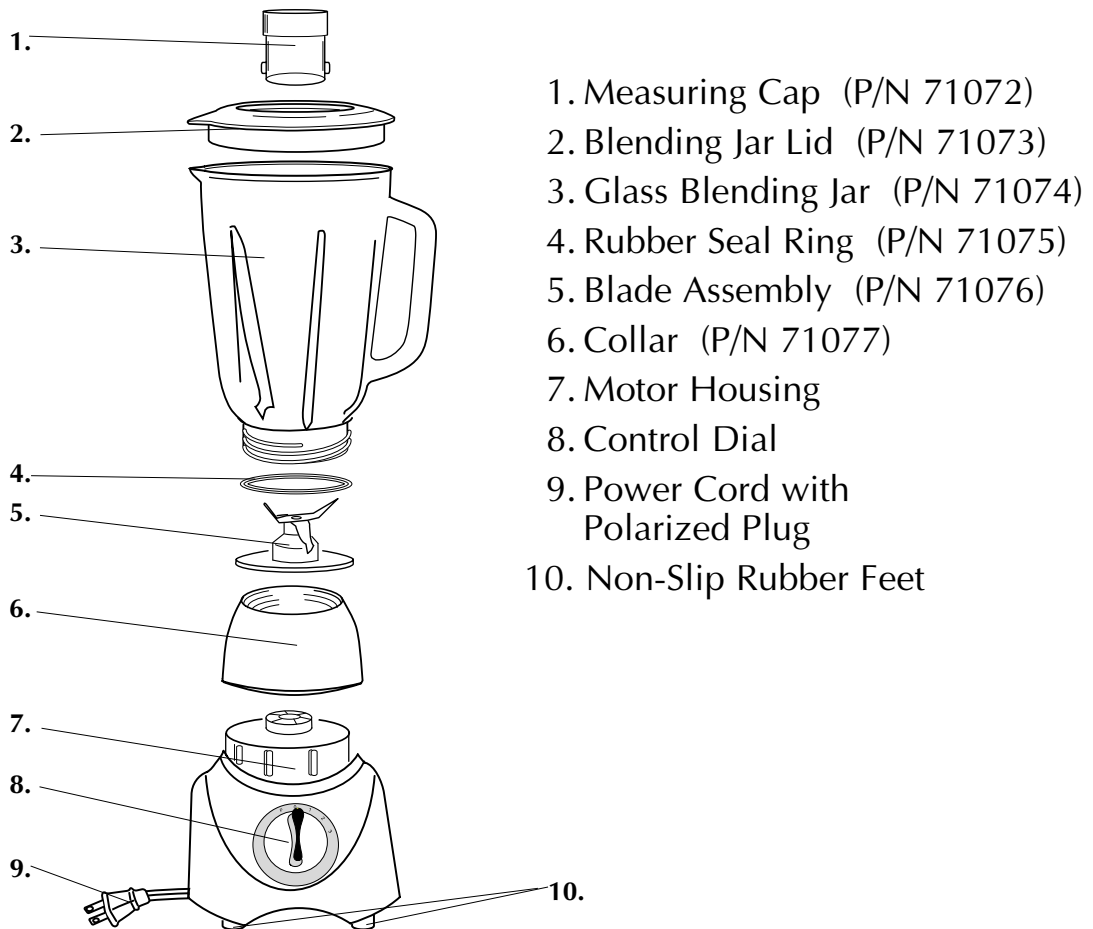

BEFORE USING FOR THE FIRST TIME

CAUTION: Use extreme care when handling the Blade Assembly. Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.

1. Carefully unpack the Blender, Glass Blending Jar, and all parts.
2. Wash the Measuring Cap, Rubber Seal Ring, Glass Blending Jar, Blending Jar Lid, and Blade Assembly in warm soapy water. Rinse and dry thoroughly.
3. Make sure the cord is unplugged and the Control Dial is in the (O) OFF position.

CAUTION: To protect against risk of electrical shock, do not place Motor Housing, plug or cord in water or any other liquid.

4. Wipe the Motor Housing clean with a moistened cloth. Dry thoroughly.

BLENDER ASSEMBLY INSTRUCTIONS

NOTE: Before assembling, make sure the cord is unplugged and the Control Dial is in (O) OFF position.

CAUTION: Use extreme care when handling the Blade Assembly. Do not touch Blades with your fingers. The Blades are very sharp and can cause injury if touched.

1. Carefully place the Rubber Seal Ring over the Blade Assembly.
2. Place the Blade Assembly in the Glass Blending Jar.
3. Place the Collar over the Blade Assembly. Hold the Glass Blending Jar and turn the Collar clockwise to firmly secure it into position on the Glass Blending Jar.

NOTE: The Collar and Blade must be firmly attached to the Blending Jar before putting any foods or liquids into the Blending Jar.

OPERATING INSTRUCTIONS

CAUTION: Keep hands and utensils out of the Blending Jar while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must only be used when the unit is not running.

CAUTION: Use extreme care when handling the Blender Blade. Do not touch Blades with your fingers. The Blades are very sharp and can cause injury if touched.

1. Before starting, make sure power cord is unplugged and the Control Dial is in (O) OFF position.
2. Make sure that the Blade Assembly, Rubber Seal Ring, and Collar are properly assembled and securely fastened to the Blending Jar. See Assembly Instructions for details.
3. Place the Blending Jar on top of the Motor Housing making sure it is firmly seated and not tilting to one side.

CAUTION: Never place the Blade Assembly on the Motor Housing without the Blending Jar being completely assembled and securely tightened.

4. Add ingredients to the Glass Blending Jar and secure the Blending Jar Lid.

NOTE: Do not fill the Glass Blending Jar more than 3/4 full, 4.5 cups (36-oz.). Never operate when the Blending Jar is empty.

5. Place Glass Blending Jar Lid with Measuring Cap on Blending Jar. **Remember: Always hold Lid in place during processing.**

OPERATING INSTRUCTIONS (CONTINUED)

6. Plug the power cord into a 120V AC electrical outlet. Turn the Control Dial to the desired speed setting: 1 is the lowest speed; 3 is the highest. Blend until ingredients have reached desired consistency.

CAUTION: If Glass Blending Jar rotates during blending, immediately turn Control Dial to (O) OFF, then secure by tightening the Collar and Blade Assembly on Blending Jar.

- Do not touch Blades
 - Do not interfere with the Blade movement
 - Do not remove Blending Jar Lid
7. When blending is completed, turn the Control Dial to (O) OFF to stop the Blender and unplug the unit.

PULSE SETTING

1. For short bursts of power, use the PULSE setting. Turn the Control Dial to (P) PULSE.
2. When pulsing is completed, turn the Control Dial to (O) OFF to stop the Blender. Unplug the unit.

CRUSHING ICE

Add 1 cup of ice cubes, about 9, to the Glass Blending Jar. Place the Lid on Glass Blending Jar then repeatedly turn the Control Dial to (P) PULSE until the cubes are reduced.

HOT INGREDIENTS

CAUTION: Use extreme caution when blending hot liquids to avoid accidental scalding or burns. Do not use your hand to cover opening!

NOTE: When processing hot foods, always remove the Measuring Cap from the Lid before beginning.

- DO NOT put more than one cup of hot ingredients into the Glass Blending Jar before beginning to blend.
- After the blending process has begun, you may slowly add up to an additional 1 cup of hot ingredients through the center hole in the Lid.
- Always use a vessel with a pouring spout when adding hot ingredients.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

CAUTION: Never immerse the Motor Housing, plug or cord in water or any other liquid.

1. Always unplug the unit before cleaning.
2. Whenever possible, rinse parts immediately after processing to make cleanup easier.

CAUTION: Use extreme care when handling the Blade Assembly. Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.

3. Wash the Glass Blending Jar, Lid, Measuring Cap and Blade Assembly in warm soapy water. Rinse and dry thoroughly. Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged. Do not wash the Lid, Measuring Cap and Blade Assembly in the dishwasher.
4. If necessary, wipe exterior surface with a moist cloth or sponge and dry thoroughly.
5. Do not fill the Glass Blending Jar with boiling water or place any of the parts in boiling water.
6. Do not allow the Blade Assembly to soak in water for long periods of time.
7. For quick clean-ups, the interior of the Glass Blending Jar can be cleaned by using the PULSE setting. Plug the Blender into an electrical outlet and simply pour some warm water and a small amount of detergent into the Glass Blending Jar. Turn the Control Dial to (P) PULSE. Repeat for several short bursts. The unit will clean itself, without you having to handle the sharp blades. Unplug the Blender, rinse and dry thoroughly, being careful as the blades are sharp.
8. Properly reassemble all parts before storing.

STORAGE

CAUTION: Always assemble clean and dry Blender parts correctly before storing on the Motor Housing. Severe injury can result if Blender is accidentally turned ON when not properly assembled.

Unplug and clean unit. Store in original box or in a clean, dry place. Never store Blender while it is hot or plugged in. Never wrap cord tightly around the appliance. Never place any stress on cord, especially where the cord enters the unit, as this could cause the cord to fray and break.

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

Warranty: This Farberware® product is warranted by Salton, Inc. to be free from defects in materials or workmanship for a period of (1) year from the original purchase date. This product warranty covers only the original consumer purchaser of the product.

Warranty Coverage: This warranty is void if the product has been damaged by accident in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel, normal wear and tear, improper assembly, installation or maintenance abuse or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished with the product or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Implied Warranties: ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to the Repair Center, or the purchase price refunded. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Service and Repair: Should the appliance malfunction, you should first call toll-free 1 (888) 881-8101 between the hours of 9:00 am and 5:00 pm Central Standard Time and ask for CONSUMER SERVICE stating that you are a consumer with a problem. Please refer to model number FAC100B when you call.

In-Warranty Service (USA): For an appliance covered under the warranty period, no charge is made for service or postage. Call for return authorization 1 (888) 881-8101.

Out-of-Warranty Service: A flat rate charge by model is made for out-of-warranty service. Include \$8.00 (U.S.) for return shipping and handling. We will notify you by mail of the amount of the charge for service and require you to pay in advance for the repair or replacement.

For Products Purchased in the USA, but Used in Canada: You may return the product insured, packaged with sufficient protection, and postage and insurance prepaid to the USA address listed below. Please note that all customs duty / brokerage fees, if any, must be paid by you and we will require you to pay the cost of customs duty / brokerage fees to us in advance of our performing any service.

Risk During Shipment: We cannot assume responsibility for loss or damage during incoming shipment. For your protection, carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your appliance: any accessories related to your problem, your full return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

To return the appliance, ship to:

ATTN: Repair Center
Salton, Inc.
708 South Missouri Street
Macon, MO 63552

To contact us, please write to, call, or email:

Salton, Inc.
P.O. Box 7366
Columbia, MO 65205-7366
1-888-881-8101
E-mail: Farberware-electric@Saltonusa.com

Limitation of Remedies: No representative or person is authorized to assume for Salton, Inc. any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract. Repair, replacement or refund shall be the sole remedy of the purchaser under this warranty, and **in no event shall Salton be liable for any incidental or consequential damages, losses or expenses.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Legal Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For more information on Salton products, visit our website: www.eSalton.com

©2004 Salton, Inc. All rights reserved.

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

1/04 PRINTED IN CHINA

P/N 61454