

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Farberware 103743 Owner's Manual

[Shop genuine replacement parts for Farberware 103743](#)



[Find Your Farberware Coffee Maker Parts - Select From 20 Models](#)

----- Manual continues below -----



FARBERWARE®

5 CUP COFFEE MAKER

Model Number: 103743

UPC: 681131037433

Customer Assistance

1-855-451-2897 (US)




Please consider the option to recycle the packaging material and donate any appliance you are no longer using.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock do not immerse cord or plugs or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments, not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn the appliance off by pressing  button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean the carafe with cleansers, steel wool pads, or other abrasive material.
- Scalding may occur if either lid is opened during the brewing cycles.
- Do not touch the keep warm plate while the appliance is switched on.
- Do not leave an empty carafe on the keep warm plate while the appliance is switched on. This may cause the carafe to crack.
- TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT REMOVE THE BOTTOM COVER ON THE APPLIANCE. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.
- Do not operate the appliance with an empty water tank.
- Keep the area above the appliance clear during use, as hot steam will escape the appliance.
- When opening the lid after use, be careful as hot steam can be trapped beneath.
- Do not use hot water for brewing.
- Do not add water immediately after brewing. Hot steam will generate and scalding may occur.

SAVE THESE INSTRUCTIONS



ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

Extension cords

- A short detachable power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If long detachable power-supply cord or extension is used:
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and
 - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

Polarized plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



PARTS



- | | | |
|---------------------------|--------------------|----------------------|
| 1. Charcoal filter holder | 7. Anti-slip feet | 14. Filter housing |
| 2. Charcoal filter | 8. Control panel | 15. Permanent filter |
| 3. Lid | 9. Keep warm plate | 16. Measuring scoop |
| 4. Drip head | 10. Carafe | |
| 5. Water tank | 11. Carafe handle | |
| 5a. Water-level indicator | 12. Carafe lid | |
| 6. Power cord with plug | 13. Drip stop | |



PARTS



	Name	Function
17.	AUTO button	Starts programmed operation / extend keep warm
18.	MIN button	Sets minutes (time/program)
19.	Display	Shows time/program time
20.	HOUR button	Sets hours (time/program)
21.	⏻ button	On/Off, starts manual brewing cycle

 


ILLUSTRATIONS





ILLUSTRATIONS

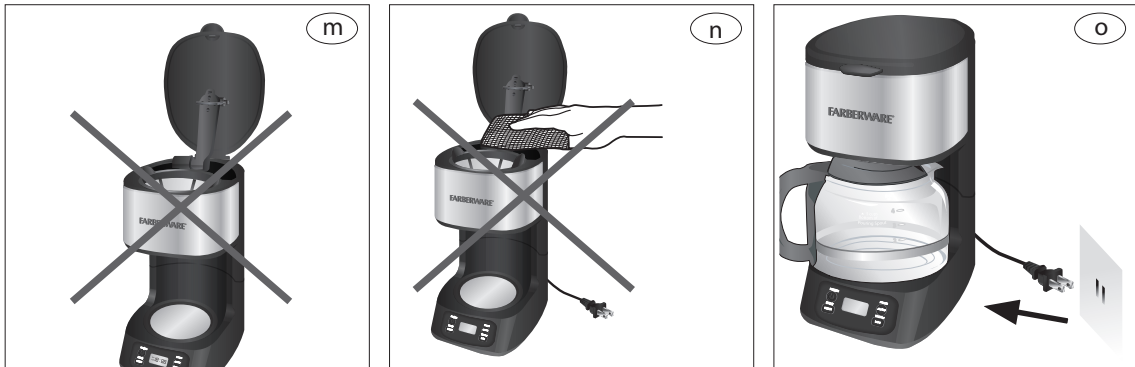

OPERATION

Before first use

- Remove all packaging materials, labels and/or stickers from your appliance.
- Check package contents for completeness and damage. Do not operate the appliance if package content is incomplete or appear damaged. Return it immediately to the dealer.

CAUTION: Danger of suffocation! Packaging materials are not toys. Always keep plastic bags, foils and Styrofoam parts away from babies and children. Packaging material could block nose and mouth and prevent breathing.

NOTE: Always use the appliance fully assembled (↳ Assembly).

- Place the appliance on a clean, flat and stable surface.
- Connect the plug (6) to a suitable wall outlet (ill. (i)) (↳ Using the appliance).

NOTE: The appliance may produce an odor and emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.

- When using the appliance for the first time, it is recommended to operate it for at least 2 full cycles, without ground coffee, using any program. (↳ Operation).



OPERATION

CAUTION: During operation, the appliance produces hot steam. Keep clear of the top of the appliance.

CAUTION: Never touch the keep warm plate **(9)** during use (ill. **(l)**) or remove accessories when the appliance is plugged in and switched on.

CAUTION: Never use the appliance with the lid **(3)** open (ill. **(m)**).

- Let the appliance cool completely.
- Clean the appliance (↳ Cleaning).

Assembly

- Place the appliance on a clean, flat and stable surface.
- Open the lid **(3)** and place the filter housing **(14)** in the appliance (ill. **(a)**).

NOTE: Ensure to align the filter housing **(14)** correctly (ill. **(a)**).

- Place the permanent filter **(15)** in the filter housing **(14)** (ill. **(b)**).
- Assemble the charcoal filter holder **(1)** and filter **(2)** (ill. **(d)**).
- Place the charcoal filter holder **(1)** in the water tank **(5)**. Ensure it is placed in the mounts (ill. **(e)**).
- Close the lid **(3)** (ill. **(h)**).
- To disassemble, follow the above steps in reverse order.

Using the appliance

Use the appliance for brewing and keeping coffee warm.

NOTE: The appliance has a rated power of 650W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 120V ~ 60Hz wall outlet.

CAUTION: Always ensure there is water in the water tank **(5)** before using the appliance. Do not use the appliance without water. Do not use hot water for brewing. Do not overfill the water tank **(5)**. Do not use the appliance without the carafe **(10)**, filter housing **(14)** or the permanent filter **(15)**.

- Assemble the appliance (↳ Assembly).
- Add the required amount of ground coffee into the permanent filter **(15)** using the measuring scoop **(16)** (ill. **(c)**).
- Place the charcoal filter holder **(1)** in the water tank **(5)** (ill. **(e)**).



OPERATION

- Fill the required amount of water into the carafe (10). Pour the water into the water tank (5) (ill. (f)). Check the water-level indicator (5a) in the inside of the water tank (5) (ill. (g)).
- Close the lid (3) (ill. (h)).
- Place the carafe (10) on the keep warm plate (9) (ill. (h)).

NOTE: Ensure the appliance is assembled correctly and completely.

NOTE: It is possible to place a paper filter into the filter housing (14) instead of the permanent filter (15). Only use a filter of the cone type 1x2 (for 4-6 cups).

NOTE: Do not place a paper filter in the permanent filter (15), as water will not flow freely through the permanent filter (15).

- Connect the plug (6) to a wall outlet (ill. (i)).
- The appliance is now in stand-by mode. On the display (19), "12:00" will flash for about 5 seconds and then change to be displayed constantly. The display backlight will be fully illuminated for about 30 seconds before dimming.

NOTE: Pressing any button at any stage will cause the display backlight to switch to full illumination for about 30 seconds before returning to being dimmed.

Setting the clock

NOTE: Setting the clock is required to be able to use the **AUTO** function.

NOTE: The appliance has a 12-hour display (-/PM).

- Press and hold **HOUR (20)** or **MIN (18)** button for about 1 second to enter the clock setting mode.
- Press the **HOUR** button (20) to set the hours on the clock. Each press will advance the clock by one hour.
- Press the **MIN** button (18) to set the minutes on the clock. Each press will advance the clock by one minute.

NOTE: Press and hold either the **HOUR (20)** or **MIN (18)** button, to advance through hours/minutes rapidly.

NOTE: The clock will be reset if the appliance is unplugged from the wall outlet and not reconnected within 15 seconds. The clock needs to be set again.

NOTE: If no button is pressed for about 5 seconds, the set time will be saved and the appliance returns to stand-by mode.



OPERATION

Brewing

NOTE: Depending on the number of cups required to be brewed, the amount of ground coffee has to be adjusted. As a general rule, one measuring scoop (16) of ground coffee equals one cup.

NOTE: The appliance will run until no water is left in the water tank (5).

NOTE: During operation, the keep warm plate (9) will start to warm up and remain on until the appliance is returned to stand-by mode.

NOTE: After the brewing has finished, the appliance switches to the keep warm function automatically (↳ Keep warm function).

- Add the required amount of ground coffee in the permanent filter (15) (ill. (c)).
- Press the ⏻ button (21) to start the brewing process (ill. (j)). The button will illuminate.
- Once the brewing process has finished a signal tone is emitted and the appliance switches to the keep warm function, by default for 2 hours or until switched off via the ⏻ button (21).

NOTE: During the brewing process, pressing any button, apart from the ⏻ button (21), has no effect. Only the display backlight will be fully illuminated.

NOTE: It is possible to remove the carafe (10) from the keep warm plate (9) during the brewing process for a short time, about 30 seconds, to pour coffee. The flow of coffee is stopped by the drip stop (13) (ill. (k)).

- To stop the brewing process prematurely, press the ⏻ button (21). The appliance will return to stand-by mode. The keep warm plate (9) will stop heating.

Keep warm function

The appliance is equipped with a keep warm function, which is switched on automatically after any brewing program has finished. The default keep warm time is 2 hours.

- Pressing the **AUTO** button (17) during the first hour has no effect.
- Pressing the **AUTO** button (17) after 1hr, the keep warm function will be extended by 1 hour, indicated by a signal tone.
- Pressing the **AUTO** button (17) again after a further hour, has no effect. The keep warm function is not extended again. The maximum keep warm time for the appliance is 3 hours.
- After the keep warm time has run out, a signal tone sounds, the appliance returns to stand-by mode and the display (19) shows the current time.





OPERATION

AUTO function


The appliance is equipped with an automatic brewing function, allowing you to set the time you would like freshly brewed coffee.

NOTE: Using this function is only possible if the clock has been set.

NOTE: The time set, is the time the coffee will be ready.

- Add the required amount of ground coffee in the permanent filter **(15)** (ill. .
- Fill the water tank **(5)** with the required amount of water (ill. .
- Place the carafe **(10)** on the keep warm plate **(9)**.
- Press and hold the **AUTO** button **(17)** for about 1 - 3 seconds. **AUTO** starts flashing in the display **(19)**.
- Set the time by pressing the buttons **HOUR (20)** and **MIN (18)**.
- Press the **AUTO** button **(17)** to set and confirm the time. **AUTO** is shown in the display **(19)**.

NOTE: To cancel the **AUTO** function, press and hold the **AUTO** button **(17)** for about 3 seconds. **AUTO** is no longer shown in the display **(19)**.

- The **AUTO** function is now set and the appliance will start the brewing process in time to finish at the set time.
- Once the brewing process starts, **AUTO** is no longer shown in the display **(19)** and the  button **(21)** will illuminate.

NOTE: The set **AUTO** time will remain set until changed or the appliance is unplugged. To use the **AUTO** function again, first press and hold the **AUTO** button **(17)** for about 1 - 3 seconds. Adjust the time if required and confirm by pressing the **AUTO** button **(17)** again.

HINTS AND TIPS

- As a general rule, one measuring scoop **(16)** of ground coffee equals one cup.
- It is recommended not to place appliance under wall units, as rising steam can cause damage to wooden furniture.
- It is recommended using the charcoal filter although it is optional.



CLEANING

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

CAUTION: Disconnect the plug (6) from the wall outlet. Allow all parts of the appliance to cool down completely.

NOTE: Do not immerse the power cord with plug (6) and appliance into water or any other liquid. Do not use abrasive cleaners, steel wool or scouring pads (ill. (n)). Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.

- Clean the appliance and keep warm plate (9) with a clean, slightly damp cloth.
- Clean the carafe (10), permanent filter (15), filter housing (14) and measuring scoop (16) in hot, soapy water. The carafe is dishwasher safe.
- To remove stains from the carafe (10), fill with hot water and add baking soda or mild cleaning agent. For stubborn stains, leave to soak overnight.
- Clean all part of the appliance after each use.

NOTE: Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet. Do not dry the inside of the water tank (5) with a cloth, as lint may remain.

- Remove the charcoal filter holder (1) from the water tank (5).
- Replace the charcoal filter (2) and insert in charcoal filter holder (1) (ill. (d)).
- Place charcoal filter holder (1) in the water tank (5) (ill. (e)).


NOTE: It is recommended to replace the filter every 60 cycles following the steps above. Replace more frequently, if the water hardness level in your area is high.

Storage

- Before storage, always make sure the appliance is completely cool, clean and dry.
- It is recommended to store the appliance in a dry place.
- Store the power cord in the cord storage (6) of the appliance.
- Store the appliance on a stable shelf or in a cupboard, preferably in its original packaging. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance is not working	Appliance not plugged in	Insert the plug (6) into the wall outlet
	Wall outlet not energized	Check fuses and circuit breaker
	Appliance not switched on	Switch the appliance on by pressing the  button (21)
Water does not pass through the appliance	Water tank (5) is empty	Refill water into the water tank (5)
	Water intake under charcoal filter holder (1) is clogged	Clean the water intake
	The permanent filter (15) is blocked	Clean the permanent filter (15) and try a coarser ground coffee
The coffee is too strong	Too much ground coffee in the permanent filter (15)	Empty the permanent filter (15) and reduce the amount of ground coffee used
The coffee is too weak	Ground coffee too coarse	Try a finer ground coffee
AUTO function not working/ not working correctly	The clock has not been set	Set the clock (↳ Setting the clock)
	The clock has been set incorrectly	Reset the clock to the correct time
	The AUTO time has been set incorrectly	The AUTO time shows the brewing time will be started, set the time accordingly
	AUTO mode is not activated	Make sure AUTO is shown in display



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Coffee leaks around the filter housing (14)	Filter housing (14) not aligned correctly	Align filter housing (14) correctly (ill. (a))
	Ground coffee too fine, blocking the permanent filter (15)	Clean the permanent filter (15) and use a different type of coffee
	Carafe (10) not placed on keep warm plate (9) correctly	Ensure the carafe (10) is seated correctly on the keep warm plate (9)

If additional assistance is needed, please contact our Customer Assistance at 1-855-451-2897(US).

TECHNICAL DATA

Rated voltage:	120V ~ 60Hz	Rated power input:	650W
Rated current:	5.4A	Capacity:	max. 5 cups



CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

Model Number: _____ Product Name: _____

Customer Assistance Number 1-855-451-2897 (US)

Keep these numbers for future reference!

Two-year limited warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar FARBERWARE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-855-451-2897 (US).

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, FARBERWARE and the product manufacturer expressly disclaim all responsibility for special, incidental, and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.

FARBERWARE[®]

© 2012 Farberware Licensing Company, LLC. All Rights Reserved. Copyrights and Trademarks of Farberware Licensing Company, LLC, including FARBERWARE[®], are used under license from Farberware Licensing Company, LLC.