

This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# Farberware FPC512S Owner's Manual

[Shop genuine replacement parts for Farberware  
FPC512S](#)



[Find Your Farberware Small Appliance Parts - Select From 14 Models](#)

----- Manual continues below -----

# FARBERWARE® MILLENNIUM®



## USE & CARE INSTRUCTIONS 12 CUP CORDLESS PROGRAMMABLE PERCOLATOR FCP512S

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest **FARBERWARE®** authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended or sold by **FARBERWARE®** may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always fill the Percolator first, then set the appliance onto the Power Base, and then plug cord into wall outlet. To disconnect, remove Percolator Body from Power Base, then remove plug from wall outlet.
12. Do not operate without adding water first.
13. Be sure to unplug the appliance once the Percolator has been emptied and has been removed from the Power Base.
14. Do not use appliance for other than intended household use.
15. In replacing the Cover, make sure that it is seated all around the rim of the Body. To remove, grasp Knob and lift off.
16. Scalding may occur if the Lid is removed during the Brewing cycle.
17. **WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIRS SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**

**FOR HOUSEHOLD USE ONLY**  
**SAVE THESE INSTRUCTIONS**

## POLARIZED PLUG

This appliance has a **polarized plug** (one blade is wider than the other): To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

Longer extension cords are available and may be used if care is exercised in their use.

 
If a longer extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

## INTRODUCTION


Congratulations on your purchase of the **FARBERWARE®** 12 Cup Cordless Programmable Percolator. Now you can have the same great tasting coffee you've come to love from a **FARBERWARE®** Percolator with the added feature of programmability as well as the convenience of serving without a cord! And with our See-Thru Knob, you can watch your coffee perking!

You can set your **FARBERWARE®** Programmable Percolator to start brewing any time of the day you like — even the night before, so you can have fresh coffee ready when you wake up. So easy to do — just set it, and forget it (until you smell the great coffee aroma)!

# GETTING TO KNOW YOUR FARBERWARE® FCP512S CORDLESS PROGRAMMABLE PERCOLATOR

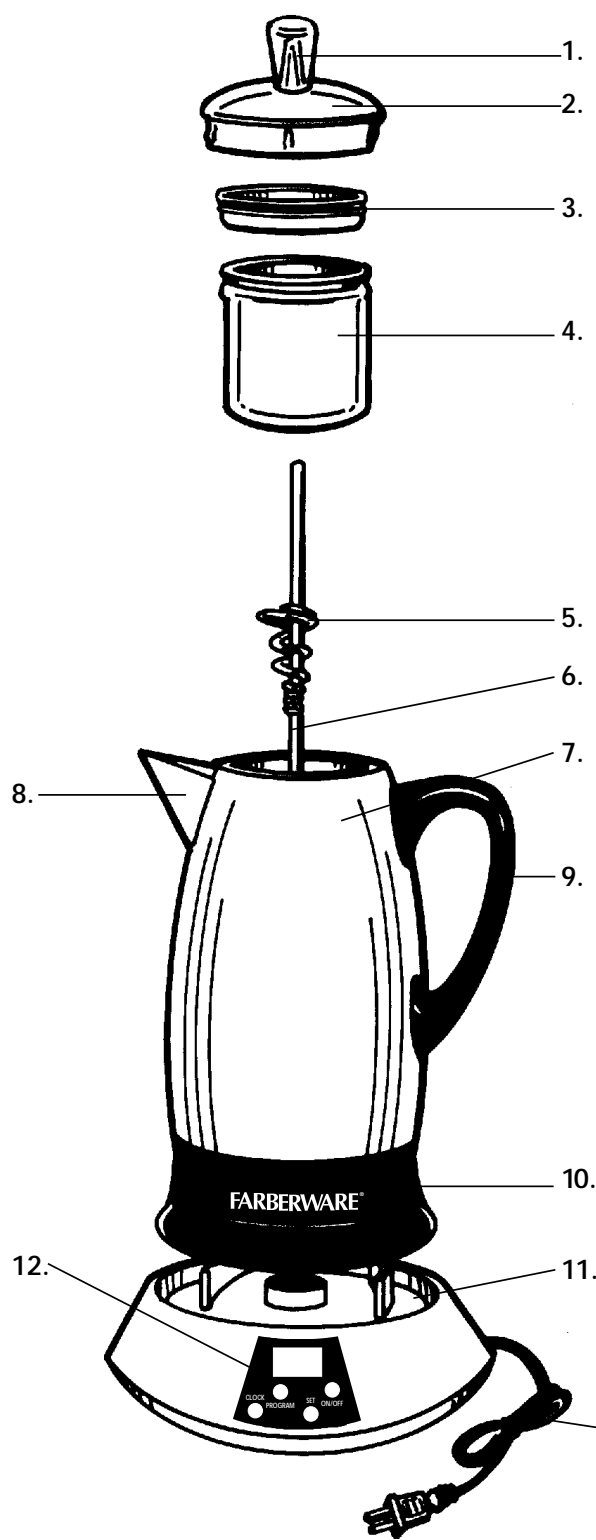

 1. See-Thru Knob
2. Stainless Steel Cover
3. Coffee Basket Lid
4. Coffee Basket
5. Spring
6. Pump Tube
7. Stainless Steel Body
8. Pouring Spout
9. Handle
10. Stay-Cool Base
11. Power Base
12. Programmable Clock/Timer
13. Power Cord
14. Clock Button
15. Program Button
16. Set Button
17. On /Off Button

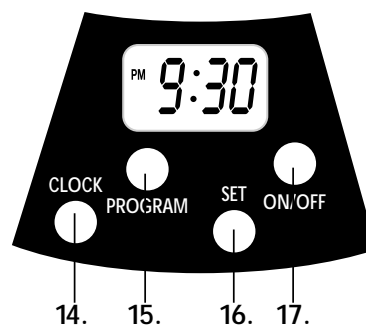

## INSTRUCTIONS FOR USE

1. Wash the Percolator thoroughly before using for the first time. (See "Cleaning Instructions" section in this manual.)
2. Remove Cover, Basket, Basket Lid and Pump Tube. Use cold, fresh tap water to fill Percolator. Fill according to markings on inside of Percolator for number of cups desired. Use cold tap water — the automatic brewing cycle is timed to begin with a cold water start.

**NOTE: The bottom of the Pump Tube Spring marks the maximum capacity of the Percolator.**

3. Wet Coffee Basket to help keep small particles of coffee from sifting through. Place Basket on Pump Tube. Add desired amount of regular or percolator grind coffee to Basket.

The following chart suggests amount of coffee for different brew strengths; amounts can be varied to suit personal taste and particular coffees.

CUPS TO BE BREWED	STANDARD COFFEE MEASURES TO USE		
	MILD	MEDIUM	STRONG
12	6	8	10
10	5	7	9
8	4	6	8
6	3	4	6
5	2-3/4	3-1/2	5
4	2-1/4	3	4
3	1-3/4	2-3/4	3-1/2
2	1-1/2	2	2-1/2

1 cup brewed coffee = 5 fluid ounces

1 standard coffee measure = 2 level tablespoons

4. Place Pump Tube with Basket into Percolator so bottom of Tube is set into Center Well. Place Coffee Basket Lid on top of Basket and snap Cover onto Percolator. Attach Cord to Percolator and plug into standard household 120 volt AC wall outlet.
5. Place Percolator on top of Power Base.

## HOW TO SET TIME

1. Plug the unit into a standard 120V AC wall outlet.
2. Wait until the hour on the LCD starts blinking.
3. Press the **CLOCK** Button to set the correct *hour* setting.
4. Press the **SET** Button to switch to the *minute* setting.
5. Press the **CLOCK** Button to set the correct *minute* setting.
6. Press the **SET** Button to leave the clock in the setting mode.

**Please Note:** There is no icon for AM, only the PM icon will be present. (See Figure A.)



Figure A

## HOW TO PROGRAM FOR BREWING COFFEE

1. Press and Hold the **SET** Button until the **HOUR** on the LCD Display begins to blink.
2. Press the **PROGRAM** Button until the **BELL** icon is shown. (See Figure B.)
3. Press the **CLOCK** Button until you reach the desired brewing *hour*.
4. Press the **SET** Button to switch to the *minute* setting.
5. Press the **CLOCK** Button until you reach the desired brewing *minute*.
6. Press the **SET** Button to enter/finalize the desired brewing time.
7. Press the **PROGRAM** Button to activate the **PROGRAM** setting. The **BELL** icon will blink, indicating the **PROGRAM** time has been set.



Figure B

The Percolator will begin brewing at the time you set. The Percolator will beep to indicate that the brewing has begun. The LCD Display will show the following to indicate it has begun brewing. (Figure C.) Brewing will take approximately 1 minute per cup.

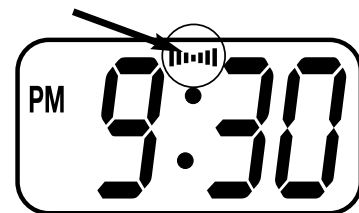 


Figure C

After that, the coffee will be kept hot for 2 hours. After 2 hours, the Percolator will beep 3 times and automatically shut off.

You can check the **PROGRAM** time at any time by pressing the **SET** Button once. If there is no programmed brew time set, the LCD will show 4 lines . (See Figure D.)

## BREWING COFFEE *(Continued)*

If you do not wish to set the **PROGRAM** time, and you wish to begin brewing your coffee immediately, simply press the **ON/OFF** Button. Your coffee will begin brewing instantly. The LCD Display will show the following to indicate it has begun brewing. (Figure D.)

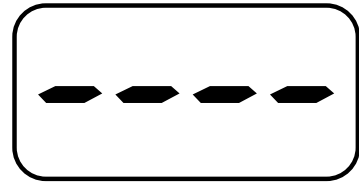 


Figure D

When the coffee brewing is complete, percolating will stop. (Check the See-Thru Knob to see if coffee has stopped perking.) For best flavor, remove the Coffee Basket, Coffee Lid, and the Pump Tube when brewing is completed.


### **CAUTION! REMOVE PARTS CAREFULLY — PERCOLATOR BODY AND PARTS WILL BE HOT!**

 When you are ready to serve the coffee, simply lift the Percolator off the Power Base and take it directly to the table for convenient, cordless serving.

Place the Percolator back on the Power Base to keep it warm.

## CLEANING AND MAINTENANCE

Always remove the Percolator Body from the Power Base for cleaning. Let Percolator cool. Wash Percolator Body with water and detergent. **NEVER IMMEDIATELY IMMERGE BASE OF PERCOLATOR OR POWER BASE IN WATER.** The Cover, Basket, Basket Lid and Pump Tube may be placed in the dishwasher. **NEVER WASH PERCOLATOR BODY OR POWER BASE IN DISHWASHER.**

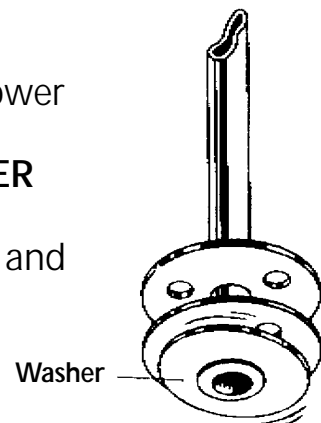

Do not use any abrasive on polished stainless steel Percolator or Power Base as you will scratch the surface.

Rinse all parts thoroughly and dry. Place Percolator back on Power Base.

Make sure the Washer at bottom of Pump Tube remains loose. If coffee grounds lodge in this area, remove under running water or with a wooden pick.

Washer must remain loose — remove coffee grounds if caught.

**After Repeated Use:** Remove accumulation of oil and coffee stains that may cause a bitter taste with a coffeemaker cleaner. Follow package directions, filling with water to 1-1/2 inches from top. Be sure to rinse well.

# FARBERWARE®

## ONE-YEAR LIMITED WARRANTY

This FARBERWARE® product warranty extends to the original consumer purchaser of the product.

**Warranty Duration:** This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

**Warranty Coverage:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**Warranty Disclaimers:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at Salton/MAXIM's option) when the product is returned. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

### Important Notice

If any parts are missing or defective, return this product to the place of purchase or contact our Consumer Service Department for assistance.

### Consumer Service

This FARBERWARE® product is distributed by:

Salton/MAXIM Housewares, Inc.  
708 South Missouri St.  
Macon, MO 63552  
E-mail: farberware-electric@saltonusa.com

Any questions or comments can be directed to Salton/MAXIM's address or call the Consumer Service Department:

**TOLL FREE: 1-888-881-8101, Mon. - Fri., 7:30 a.m. - 6:00 p.m. CST**

**Please refer to: Model No. FCP512S when you call.**

FARBERWARE® and MILLENNIUM® are registered trademarks of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

10/98

Printed in China