

FARBERWARE®

CLASSIC "FOUNTAIN" MIXER

MIXES SHAKES, FROSTIES, SMOOTHIES, FLOATS AND COCKTAILS



USE AND CARE INSTRUCTIONS

MODEL FDM300

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. READ ALL INSTRUCTIONS.
2. To protect against electrical hazards, do not immerse cord, plug or the appliance in water or other liquids.
3. Close supervision is necessary when an appliance is used by or near children.
4. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the authorized service center for examination, repair or adjustment. See Warranty.
5. Do not operate the Drink Mixer without the cup. Do not use any cup other than the one provided with the Drink Mixer.
6. The use of accessory attachments not recommended by the manufacturer may cause fire, electric shock or injury.
7. Unplug the Drink Mixer before cleaning or when not in use.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Avoid contacting moving parts.
12. Keep hands and utensils out of the container to reduce the risk of injury to persons or damage to the Mixer.
13. Never add to container while appliance is operating.
14. Container must be properly in place before operating appliance.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

YOUR FARBERWARE CLASSIC "FOUNTAIN" MIXER

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATION

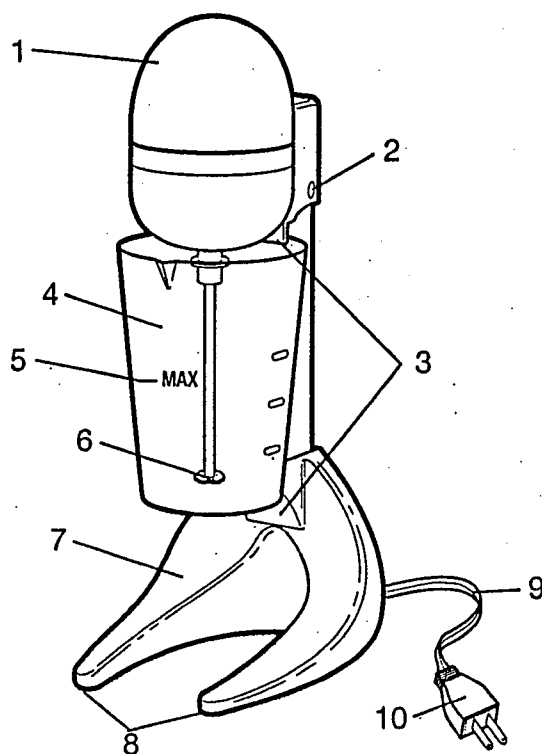

1. Motor Housing
2. Micro Switch (automatic On/Off activator system)
3. Cup Bracket
4. Stainless Steel Mixing Cup
5. Maximum Fill Line
6. Stainless Steel Mixing Blade
7. Weighted Base
8. Anti-slip Feet
9. Power Supply Cord
10. Polarized Plug

Your Mixer is for **HOUSEHOLD USE ONLY**. Place it on a level surface, and insert plug into any 120V AC electrical outlet. Do not use any other type of outlet.

This appliance has a **polarized plug** (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter top or table where it can be pulled on by children or tripped over unintentionally.

OPERATING INSTRUCTIONS

IMPORTANT: To ensure continued efficient performance, keep the mixer clean. Do not operate for more than one minute at a time.

BEFORE USING:

1. Carefully unpack mixer.
2. Wash mixing cup in warm, soapy water. Rinse well and dry thoroughly.
3. Wipe all other parts with a soft, clean cloth or sponge.

TO USE:

1. Set mixer on a flat, dry countertop surface and plug into electrical wall outlet.
2. Combine ingredients for shake, drink or other beverage in the stainless steel mixing cup. **NEVER fill beyond the maximum fill line.**
3. Place the mixing cup on the mixer so that it rests securely on the cup bracket, and so that the top of the mixing cup makes contact with the micro switch, which will automatically activate the mixer. **For best results, do not blend your shake or drink for more than one minute.**
4. When ingredients are completely mixed, remove the mixing cup from the mixer; this will automatically disengage the micro switch and turn off the appliance.

CAUTION: NEVER touch the micro switch or blade. DO NOT use without mixing cup in place.

CARE AND MAINTENANCE

USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed, or return it to the manufacturer. See warranty for details.

Always unplug Mixer from the electrical outlet when not in use and before cleaning. NEVER immerse unit or cord in water or any other liquid.

CLEANING INSTRUCTIONS

Mixer should be kept clean to avoid food contamination.

Cleaning the mixer is easy. Unplug from electrical outlet. Wash the mixing cup in warm, soapy water. Rinse well and dry thoroughly. To clean the mixing blade, fill the mixing cup with 1 cup of warm water and operate the mixer as previously described under the operating instructions in this manual. **Exercise caution when cleaning; blade is sharp and can cause injury.** Wipe all other parts clean with a soft, slightly damp cloth. **Do not allow water or any other liquid to get into the unit.**

CAUTION: DO NOT use scouring pads or any type of harsh cleanser that may damage the surfaces or dull the cutting blade.

STORING INSTRUCTIONS

Unplug the unit from the wall outlet and clean all parts. Be sure all parts are dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is still plugged in. Never wrap cord tightly around the appliance; keep it loosely coiled.

RECIPES

INTRODUCTION

For lighter, healthier shakes use skim or 2% milk. Whole milk does not froth as much as skim or low fat milk. It is important to follow the recipe amounts to avoid spills caused by overfilling the cup.

Remember that solids such as ice cream or fruit will increase the volume of a milk shake.

When using ice cream, frozen yogurt or fruit with other ingredients for a milk shake, use only 3/4 cup of skim, whole, coconut milk or 1 cup of fruit juice. Chilling the ingredients will result in extra volume.

Cream is very heavy and doesn't aerate well.

POWDERED DRINKS/PROTEIN MIXES/DIET DRINKS:

Follow the directions on the powder package for making a single serving.

Use ice cold water and/or milk.

DO NOT USE ICE IN THE MIXER!

SHAKES AND MALTS (without ice cream)

PEANUT CRUNCH

1 cup cold milk

1 tsp. honey

1 tbsp. peanut butter

1 egg

BUTTERMILK STRAWBERRY SHAKE

2/3-cup cold buttermilk

2 tsp. honey

1/3-cup strawberry syrup

cinnamon to taste

SKINNY MOCHA

3/4-cup cold skim milk

1 packet of Equal®

1 tsp. instant coffee

1 tbsp. chocolate syrup

SHAKES AND FLOATS (with ice cream)

Experiment with other ingredients and variations to suit your personal taste.

STRAWBERRY FLOAT

3/4-cup cold milk

1/2-cup strawberry syrup

1 tbsp. honey

After mixing ingredients, pour into a tall glass and top with a spoon of vanilla frozen yogurt or strawberry ice cream.

SMOOTHIE

3/4-cup cold milk

1 tsp. honey

1 small banana, mashed, semi-frozen

pinch of cinnamon

1/4-cup frozen yogurt

CHOCOLATE MALT

3/4 cup cold milk

1 tbsp. chocolate syrup

2 heaping tsp chocolate malted milk powder

1 scoop chocolate ice cream

VANILLA MALT

3/4-cup cold milk

1 scoop ice cream

1/2-tsp. vanilla extract

2 tbsp. malt powder

JUST NUTTY™

3/4-cup cold milk

1 tbsp. drinking chocolate

2 tbsp. ground nuts

1 scoop ice cream

CARAMEL KISS

3/4-cup cold milk

2 scoops vanilla ice cream

2 tbsp. caramel topping

2 tbsp. malt

GONE BANANAS

1/2-cup coconut cream

1/2-3/4 ripe banana, mashed well

1/2-cup cold milk

1 scoop coconut or vanilla ice cream

FARBERWARE®

ONE-YEAR LIMITED WARRANTY

This FARBERWARE® product warranty extends to the original consumer purchaser of the product.

Warranty Duration: This product is warranted to the original consumer purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA, and does not extend to any units which have been used in violation of written instructions furnished, or to units which have been altered or modified or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Warranty Disclaimers: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one-year warranty period, a product with a defect will be either repaired or replaced with a comparable model (at Salton, Inc.'s option) when the product is returned. The repaired or replacement product will be in warranty for the balance of the one-year warranty period and an additional one-month period. No charge will be made for such repair or replacement.

Important Notice

If any parts are missing or defective, return this product to the place of purchase or contact our Consumer Service Department for assistance.

Consumer Service

This FARBERWARE® product is distributed by:

Salton, Inc.

708 SOUTH MISSOURI ST.

MACON, MO 63552

E-mail: farberware-electric@saltonusa.com

Any questions or comments can be directed to Salton, Inc.'s address or call the Consumer Service Department:

1-800-233-9054, Monday - Friday, 9 a.m. - 5 p.m. CST

FARBERWARE® is a registered trademark of Farberware Inc.®

Manufactured and sold pursuant to a license from Farberware Inc.®

Printed in China

