

This Owner's Manual is provided and hosted by Appliance Factory Parts.



 
Farberware FFSGDW Owner's Manual

[Shop genuine replacement parts for Farberware
FFSGDW](#)

PARTS & ASSEMBLY

Your ELECTRIC BED & BLANKET comes partly assembled. Before using, remove all packing materials from the box. Check the steamer for any damage. If there is any damage, DO NOT operate the steamer. Return damaged items to the store where it was purchased.

PARTS

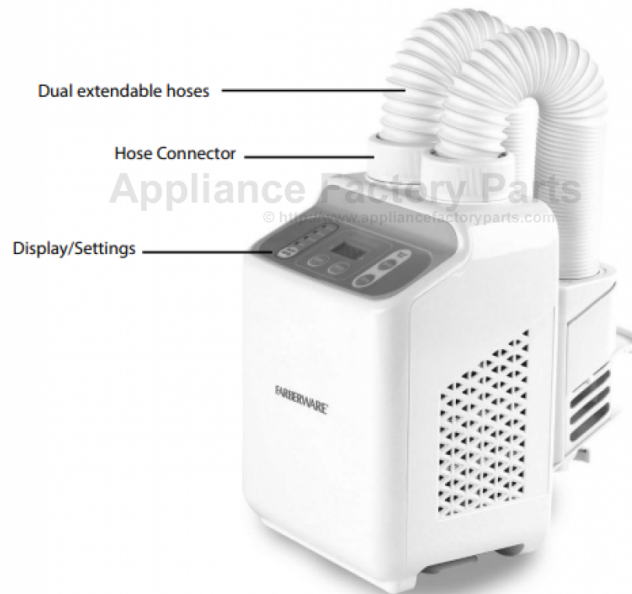

[Find Your Farberware Small Appliance Parts - Select From 14 Models](#)

----- Manual continues below -----

FARBERWARE®

Farberware is a registered trademark of Farberware Licensing Company, LLC
Manufactured and sold pursuant to a license from Farberware Licensing Company,
LLC © 2020 Farberware Licensing Company, LLC. All rights reserved.

(rev. 12/07/20 TK)



FFSGDW

Electric Bed & Blanket Warmer

Instruction Manual

CONTENTS

SAFETY	2
IMPORTANT SAFEGUARDS	3
ADDITIONAL IMPORTANT SAFEGUARDS	3
INTRODUCTION	5
PARTS & ASSEMBLY	6
HOW TO OPERATE	7
CLEANING & MAINTENANCE	8
RETURNS & WARRANTY	9

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hertz

Rated Output: 760 Watts

THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.



IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

ADDITIONAL IMPORTANT SAFEGUARDS

Operating Safety Precautions

1. **WARNING:** Do not eject heat directly towards people or animal, or scald may be caused.
2. Conduct the installation in accordance with the instructions. Do not dismantle without authorization.
3. Do not operate the machine unless you read this manual thoroughly. The machine can only be used indoors.
4. The machine can only be used for the purposes described in this manual. Utilization for other purposes is prohibited.
5. The machine shall be put on a flat and stable place.

6. Keep power cords and steam pipes from metals or other heating elements.
7. The machine shall not be operated by these people (including children): the physically, tactilely or mentally disabled or those who lack of experience and knowledge, unless they are supervised or guided by someone who is responsible for their safety in respect of the application of the machine.
8. Children shall be monitored to be prevented from playing with the machine.
9. Keep the machine away from flammable or explosive objects.
10. Please clean the filter sieve at regular intervals to keep it available. The machine shall be cleaned or maintained from time to time (every 1 month or 20L water is consumed). (See the following sections for the cleaning and maintenance)
11. Push the support pole to move the machine. Do not move the machine by force when it is tough to be moved. Discharge the water before checking the wheels. Turn off the power supply and pull out the plug before moving the machine.
12. Turn off the power supply and pull out the plug before discharging water from or filling water in the tank. Avoid water leakage. Do not open or take down the tank in use.
13. If find any damage on the accessories especially the safe protection and power cord, stop using the machine and inform our professional personnel of service center for repair. Do not repair at your own discretion.
14. Before cleaning or repairing the machine, turn off the power supply, pull out the plug, release the pressure inside the heating element of the base and let the machine cool down.

Instructions for the Electrical Cord and Plug

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**
2. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
3. If a long detachable power-supply cord or extension cord is used:
 - Extension cords can be used if care is exercised in their use.
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
4. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the ELECTRIC BED & BLANKET WARMER from Farberware! With 760 watts of power, this is perfect for warming your blankets, mattresses, pillows & more so you can sleep better! This can also be used as a shoe dryer!

Features include:

- Perfect for warming your blankets, mattresses, pillows & more
- 4 different heating/cooling options with 3 temperature settings
- Dual extendable hose system with retractable nozzle for maximum air flow
- Eliminates dust mites for a comfortable and healthy environment
- 8 timer settings up to 180 minutes
- Can also be used as a garment and shoe dryer

 


PARTS & ASSEMBLY

Your ELECTRIC BED & BLANKET comes partly assembled. Before using, remove all packing materials from the box. Check the steamer for any damage. If there is any damage, DO NOT operate the steamer. Return damaged items to the store where it was purchased.

PARTS

ENGLISH

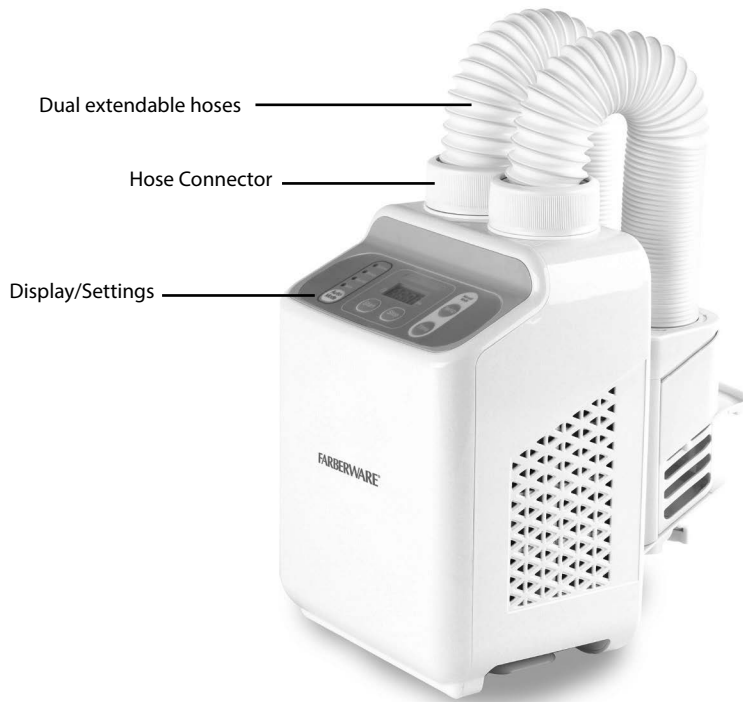 


DISPLAY



ASSEMBLY

1. Unpack the unit.
2. Take each extendable hose and place it on the hose connector and twist counterclockwise until tight.

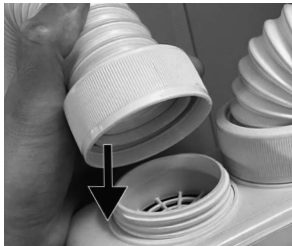**HOW TO OPERATE**

The ELECTRIC BED & BLANKET warmer is perfect for warming your blankets, mattresses, pillows & can be used as a shoe and garment dryer.

1. Make sure unit is assembled. Plug in the unit to enter standby state. All lights will flash once.

AUTO MODES: On the left side of the display screen there are four Auto Mode options.

- **Summer:** This will blow 60 minutes of hot air (149 degrees F) and then 20 minutes of room temperature air.
- **Winter:** This will blow 60 minutes of hot air (149 degrees F) for 60 minutes.
- **Warmth:** This will blow 20 minutes of hot air (149 degrees F) for 20 minutes.
- **Mite:** This will blow 100 minutes of hot air (149 degrees F). At this temperature for this long, it will eliminate any dust mites.

MANUAL MODE:

1. Press the temperature button to adjust the temperature. Colors below each have its own temperature:
 - **GREEN:** Room temperature
 - **RED:** 149 degrees F
 - **ORANGE:** 122 degrees F
2. Press the time button to adjust the time (15, 30, 45, 60, 75, 90, 120, 180 minutes).
3. Press START. Once cycle starts, time will count down on display.

NOTE: If for any reason you want to stop or start a new/ different cycle, click STOP at any time.

CLEANING & MAINTENANCE

HELPFUL TIPS

- For maximum air flow, the ends of the hoses are retractable and can be pushed back to allow for more airflow.
- If you stop a cycle in the middle of a cycle, please wait 5 seconds before unit enters standby mode. Then you can select a new cycle.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

ELECTRIC BED & BLANKET WARMER/ FFSGDW

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 9:00 AM and 4:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: 844-918-0509
Email: CustomerService@emllc-USA.com

One-Year Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only expressed warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

IMPORTANT: This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alternation, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Englewood Marketing LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number
Englewood Marketing LLC
In the US 844-918-0509
Email: CustomerService@emllc-USA.com

This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.