

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Russell Hobbs RHF2363B Owner's Manual

[Shop genuine replacement parts for Russell Hobbs
RHF2363B](#)



[Find Your Russell Hobbs Microwave Parts - Select From 40 Models](#)


----- Manual continues below -----



Russell Hobbs

Microwave

23 Litre Touch Flatbed Microwave User Guide

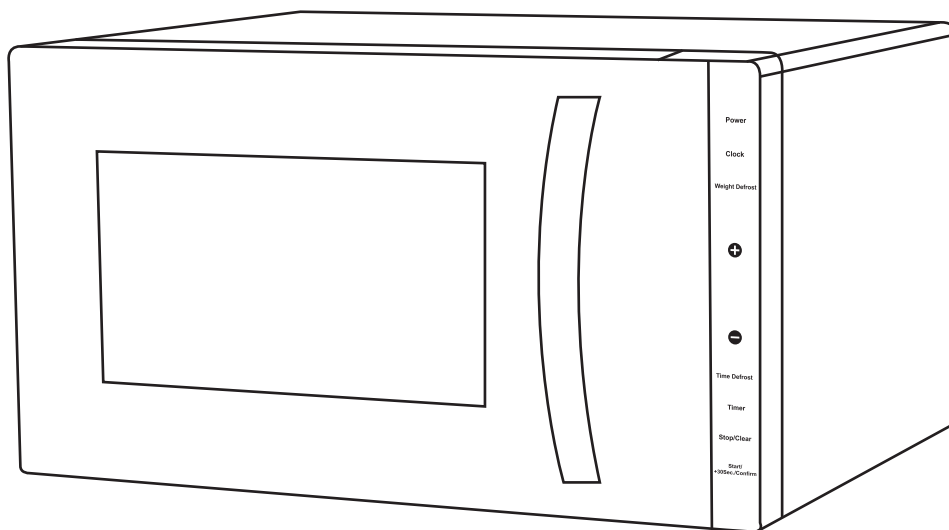

Model Number: RHFM2363B/RHFM2363S

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at www.productcareuk.com

**IMPORTANT: RETAIN FOR FUTURE
REFERENCE**

Contents

	Page
Safety instructions	3-11
Product Overview	12
About this microwave oven	13
Unpacking the microwave	14
Microwave oven installation	15
Control panel	16-17
Using the microwave oven	18-25
Cleaning and care	26
Important utensil information	27
Connection to the mains supply	28-29
Problem solving & plug	30
Guarantee	31
Technical specification	32
Notes	33-35

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit
us at **www.productcareuk.com**

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

WARNING: Do not use the microwave when it is empty. This could damage the oven.

For Grill and combination models

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Do not use the microwave when it is empty. This could damage the oven.

Safety instructions

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

Only use utensils that are suitable for use in microwave ovens.

You should clean the outside of the oven with a damp cloth. Do not allow water to seep into the ventilation openings.

Do not allow the control panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control panel.

If steam builds up inside or around the outside of the oven door, wipe with a soft cloth. This may happen when the microwave oven is used in humid conditions.

Regularly remove the glass turntable to clean it, and wash it in warm soapy water. Regularly clean the turntable support and oven floor. Simply wipe the bottom surface of the oven with mild detergent and water, then dry. You can wash the turntable support in mild soapy water.

Safety instructions

The rear surface of appliance may be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

The microwave oven should be used freestanding only and must not be built-in or used in a cabinet.

If smoke is emitted , switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

Safety instructions

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.


The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Before you clean the oven, turn it off and unplug it. Keep the inside of the oven clean. When food or liquids stick to the oven walls, wipe with a damp cloth. We recommend that you do not use harsh detergent or abrasives.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.

Safety instructions

Do Not obstruct the ventilation
from the microwave

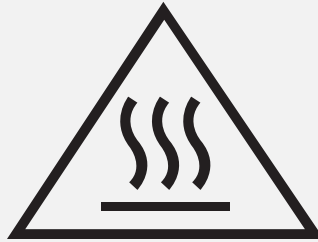

Only use thermometers that are approved for microwave ovens.

Safety instructions

- Food containing a mixture of fat and water (for example, stock) should stand for 30 to 60 seconds in the oven after it has been turned off. This is to allow the mixture to settle and to prevent it from bubbling when a spoon is placed in it, or a stock cube is added.
- When heating or cooking food or liquid, remember that there are certain foods (such as, jam, Christmas puddings and mincemeat) which heat up very quickly.
- When heating or cooking foods that contain a lot of fat or sugar, do not use plastic containers.
- Always have the glass tray and turntable support in place when using the oven.
- Never remove parts from the oven such as the feet, screws and so on.
- Do not cook food directly on the glass tray. Put food on a suitable plate or in a bowl before putting it in the oven.

To reduce the risk of fire in the oven cavity:

- Do not overcook food.
- Do not leave the microwave oven unattended while you are using it and if using paper or plastic containers check regularly to ensure they do not ignite.
- Remove wire twist-ties from bags before putting the bag in the oven.
- If materials inside the oven smoke or catch fire, keep the oven door closed to stifle the flames, turn the oven off at the wall switch, or shut the power off at the fuse or circuit-breaker panel.

Safety instructions

- The microwave is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, wheat bags, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Heat from the contents of a container may be transmitted to the container itself, so please be careful when removing it from the oven. Please remember that the food or liquid inside may be releasing some steam or may be spitting. Never cover any container fully, always leave a gap for steam to escape.
- Cooking utensils may become hot because of heat transferred from the heated food. This is especially true if plastic wrap has been covering the top and handles of the utensil. You may need oven gloves to handle the utensil.
- Ensure you do not use any corrosive chemicals or vapours in the appliance. It is not designed for industrial or laboratory use.
- Never put any objects into the openings on the outer case.
- On the right hand side wall of the cavity is the wave guide cover, microwaves are passed through this to enable your food to cook. It is important that this wave guide cover is kept clean at all times. To do this wipe with mild detergent and water, then dry.
- When removing the turntable support of the oven, make sure you put it back properly.
- If the inside of the oven smells, put a cup of water with the juice and skin of one lemon in a deep microwave bowl. Microwave it for three minutes, wipe thoroughly and then dry with a soft cloth.
- Do not try to deep-fry foods in this oven.


Safety instructions

- Do not use metal pans or dishes with metal handles.
- Do not use anything with a metal trim.
- Do not use paper covered wire twist-ties on plastic bags.
- Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or burn, and will slow down the cooking speed.
- Use only cookware that is approved to be used in a microwave oven.
- Do not cook using containers with restricted openings, such as bottles, as they may explode.
- Do not heat baby bottles with the teat left on. Remove it if replacing the bottle back into the oven.
- Do not use the microwave oven for heating utensils.
- Do not use the oven for any reason other than preparing food, such as for drying clothes, paper or any other non-food items, or for sterilising purposes.
- Do not store anything in the oven, such as paper, or cook books .
- Do not cook any food surrounded by a membrane, such as egg yolks, potatoes, chicken livers, sausages, ready meals and so on without piercing them several times with a fork.
- Never put any objects into the openings on the outer case.
- You should use microwave utensils only in line with these instructions.
- Only use the accessories supplied by the manufacturer.

This appliance is intended to be used in the household and similar applications. It is not intended to be used in the following:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Product overview

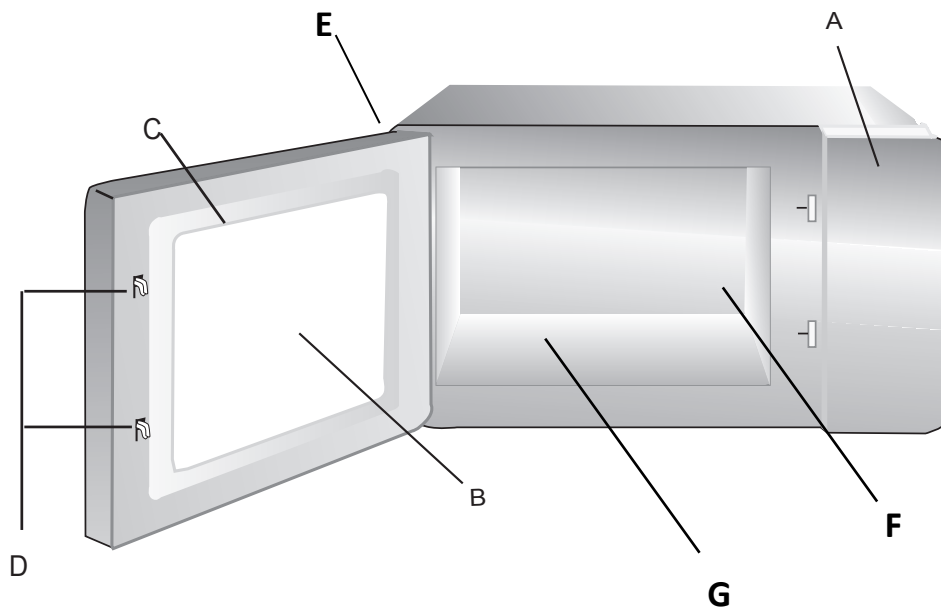

- A. Control panel (including door release button)
- B. Window
- C. Door assembly
- D. Safety interlock latches
- E. Ventilation slots
- F. Oven cavity
- G. Flatbed cooking area

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

About this microwave oven

Microwaves are high-frequency electromagnetic waves similar to radio waves. While radio waves may vary in length from one metre to many kilometres, microwaves are very short (less than 12.5 centimetres). Microwaves do not make any heat themselves but only cause water molecules in food to vibrate. This vibration produces heat that cooks the food. This is why your food will come out of the microwave piping hot, when your utensils inside the oven stay much cooler. The microwaves do not stay in the air or in the food when you open the microwave oven door.

The microwave oven will work using an ordinary household electrical socket. Inside the microwave oven is the magnetron, which turns the electrical energy into microwaves.

Microwaves cannot go through metal, so the inside of the oven is lined with metal. The door is lined with a fine metal mesh which stops microwaves getting through. This means that when the microwave oven door is shut, there is no possibility that microwaves can be released. This is why the microwave oven has been made so that it will not work when the door is open.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Unpacking the microwave

Before you use your microwave oven

1. Remove all the packaging. **Do not** remove the small piece of card from the right hand side of the cavity wall. This is called a wave-guide cover and allows the microwaves to pass through to cook the food.

Please ensure you keep this cover clean at all times.

2. Check the oven after unpacking for any visual damage such as:

- A misaligned door
- Damage to the door
- Dents or holes in the door window and screen
- Dents in the inside
- If you can see any damage **do not use the oven**

This microwave oven weighs approximately 13.76kg so you must put it on a horizontal surface that is strong enough to support this weight.

The oven must be placed away from high temperatures and steam.


Do not put anything on the top of the microwave oven.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Microwave oven installation

- Select a level surface that provides enough space for the outlet vents.
- The minimum installation height is 85cm.
A minimum clearance of 20cm is required between the oven and any adjacent walls. Leave a minimum clearance of 30cm above the oven.
- Place the oven as far away from radios and TV's as possible. Using the oven may cause interference with the reception.
- Plug the oven into a suitable 13 amp mains socket, make sure the voltage is the same as on the rating label (do not use extension cables or mains socket adaptors).
- The microwave oven should be used freestanding only and must not be built-in or used in a cabinet.

Warning: do not install the oven over a cooker or other heat producing appliance. This will damage the oven.

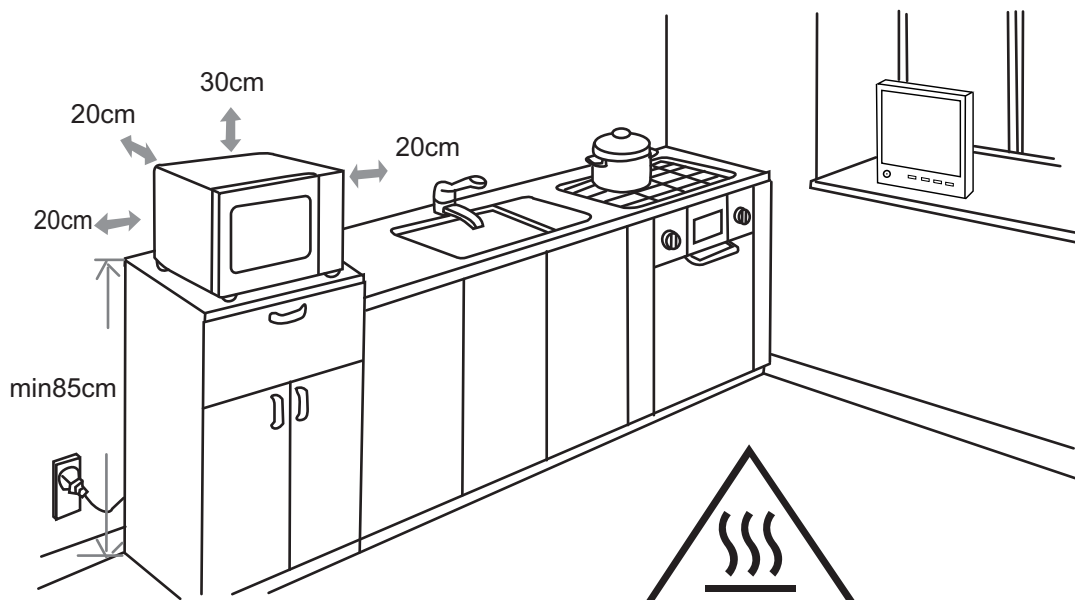

Do Not obstruct
The ventilation
From the microwave

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Control panel



MENU ACTION SCREEN Cooking time, power, action indicators, and clock time are displayed.

POWER Touch to select the power level for microwave cooking.

CLOCK Touch this button to set the clock.

WEIGHT DEFROST Touch this button for the weight defrost.

TIME DEFROST Touch this button for the time defrost.

+/- These buttons are used to scroll through menus, weights, etc.

TIMER Touch this button to use the kitchen timer function.

STOP/CLEAR Touch the button to clear everything.









START/+30 SEC/CONFIRM Touch this button to start the cooking process and confirm when programming.

DOOR OPEN Pull the handle to open the door.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Menu Action Screen






 
-  Indicates that the safety lock is engaged
- g** Indicates that grams are shown on the display
-  Indicates microwave cooking is taking place
-  Indicates that time defrosting is taking place
-  Indicates that weight defrosting is taking place
-  Indicates that a power level is selected
-  Indicates that the time of day is shown on the display
-  Indicates that kitchen time is being used place
-  Indicates that the auto menu function has been selected

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Clock Setting

When the microwave oven is first turned on, the oven will display "0:00", the buzzer will ring once.

- 1) Touch the ' **CLOCK** ' button and the hour digits will flash
- 2) Touch the "  " and "  " buttons to adjust the hour digits. The input time should be within 0 - 23(24-hour).
- 3) Touch " **CLOCK** " button again and the minute figures will flash.
- 4) Touch the "  " or "  " buttons to adjust the minute digits. The input time should be within 0 - 59 (60-minutes).
- 5) Touch " **CLOCK** " button again to complete the clock setting. The ":" will flash.



Note:

- 1) If the clock is not set, the clock will not function when powered.
- 2) During the process of clock setting, if you touch " **STOP/CLEAR** ", button the oven will go back to the previous status.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Kitchen Timer (no microwave function)

- 1) Touch the **TIMER** " button and the menu screen will display 00:00 (not flashing)
- 2) Touch "  " or "  " buttons to enter the desired time. (The maximum time is 95 minutes.)
- 3) Touch "**START/+30SEC/CONFIRM**" to confirm setting.
- 4) When the countdown is complete, the buzzer will ring 5 times.

Note: The kitchen Timer is for use alongside other kitchen appliances. It's an additional function to the cooking.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Microwave Cooking

- 1) Touch the "**POWER**" button once, " P100" will display and flash.
- 2) Touch the "**POWER**" button several times or touch "**+**" or "**-**" buttons to select the microwave power from 100% to 10%.
- 3) Touch the "**START/+30SEC/CONFIRM**" button to confirm the power level.
- 4) Touch the "**+**" or "**-**" buttons to adjust the cooking time.
(The time setting should be 0:05- 95:00.)
- 5) Touch "**START/+30SEC/CONFIRM**" button to start cooking.



Touch power button	Cooking power
P100	100%
P80	80%
P50	50%
P30	30%
P10	10%

To stop the cooking process at anytime touch the "**STOP/CLEAR**" button.



For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Defrosting by Weight

- 1) Touch the "**WEIGHT DEFROST**" button once, the oven will display "dEF1".
- 2) Touch "  " or "  " to select the weight of the food in grams. The weight should be set between 100-2000g
- 3) Touch "**START/+30SEC/CONFIRM**" button to start defrosting.

Defrosting by Time

- 1) Touch the "**TIME DEFROST**" button once, the oven will display "dEF2".
- 2) Touch the "  " or "  " to select the defrosting time. The maximum setting time is 95 minutes.
- 3) Touch the "**START/+30SEC/CONFIRM**" button to start defrosting. The defrosting power is 30% and cannot be changed.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Speedy Cooking

- 1) Touch the "**START/+30SEC/CONFIRM**" button to microwave cook at 100% power level for 30 seconds. The microwave will start to cook immediately.
- 2) Each touch of the same button will increase the cooking time by 30 seconds. The maximum cooking time is 95 minutes.
- 3) An additional 30 seconds can be added at any point during the cooking process/countdown of the time.

Note: this function cannot work under weight defrost and auto menu cooking.

or

Touch the "**−**" button and 95:00 will displayed on the screen, you can then touch the "**+**" or "**−**" button to adjust to the desired cooking time, then touch "**START/+30SEC/CONFIRM**". The oven will start cooking for the selected length of time at 100% power.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Multi-Stage Cooking

This function can set a maximum of two different stages. For instance, to defrost an item and then follow it with the cooking cycle.

Note: The auto menu cannot be set as one of the multi-stage cooking functions.






Example: if you want to defrost 500g of food, then cook it at 80% microwave for 7 minutes. The steps are as following:

- 1) Touch the "**WEIGHT DEFROST**", the screen will display "dEF1".
- 2) Touch the "**+**" or "**-**" to adjust the defrost weight of 500g:
- 3) Touch the "**POWER**" twice to choose 80% microwave power.
- 4) Touch "**START/+30SEC/CONFIRM**" to confirm.
- 5) Touch the "**+**" or "**-**" to adjust the cooking time to 7 minutes.
- 6) Touch the "**START/+30SEC/CONFIRM**" to start cooking process.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Using the microwave oven

Auto Menu

- 1) Touch the "  " button and "A-1" will display on the screen.
- 2) Touch the " " or " " button to choose the menu you need.
- 3) Touch the " **START/+30SEC/CONFIRM** " button to confirm the menu you require.
- 4) Touch the " " or " " button to choose the food weight, these are pre-set and listed below.
- 5) Touch the " **START/+30SEC/CONFIRM** " button to start cooking.

Please see the table below for the various settings.

Display	Auto Menu	Weight (g) on the Display	Power
A-1	Pizza	200	100%
		400	
A-2	Meat	250	100%
		350	
		450	
A-3	Vegetable	200	100%
		300	
		400	
A-4	Pasta	50(add 450ml water)	80%
		100(add 800ml water)	
A-5	Potato	200	100%
		400	
		600	
A-6	Fish	250	80%
		350	
		450	
A-7	Beverage	1(120ml)	100%
		2(240ml)	
		3(360ml)	
A-8	Popcorn	50	80%
		85	
		100	

Using the microwave oven

Checking Functions

- 1) During the cooking cycle, touch the "**POWER**" button and the current power will be displayed for 2-3 seconds.
- 2) During the cooking cycle, touch the "**CLOCK**" button to check the current time. It will be displayed for 2-3 seconds.

Child lock

Lock on: In standby, touch and hold the "**STOP/CLEAR**" button for 3 seconds, there will be a long "beep" as the lock activates a lock symbol will illuminate in the display.

Lock off: In locked state, touch and hold the "**STOP/CLEAR**" button for 3 seconds, there will be a long "beep" denoting that the lock is released, the lock symbol will disappear.

General information

- (1) The buzzer will sound once when touch the buttons at the beginning;
- (2) The "**START/ +30 SEC./CONFIRM**" button must be touched again to continue cooking if the door is opened during a cooking cycle.
- (3) Once the cooking programme has been set ,if the "**START/ +30 SEC./CONFIRM**" button is not touched in 1 minutes. The current time will be displayed and the setting will be cancelled.
- (4) The buttons will beep if they are pressed correctly, they will not beep if not.
- (5) The buzzer will sound five times to remind you when cooking is finished.

Cleaning and care

- Before you clean the oven, turn it off and unplug it.
- Keep the inside of the oven clean. When food or liquids stick to the oven walls, wipe with a damp cloth. We recommend that you do not use harsh detergent or abrasives.
- On the right hand side wall of the cavity is the wave guide cover, microwaves are passed through this to enable your food to cook. It is important that this wave guide cover is kept clean at all times. To do this wipe with mild detergent and water, then dry.
- You should clean the outside of the oven with a damp cloth. Don't allow water to seep into the ventilation openings.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control panel.
- If steam builds up inside or around the outside of the oven door, wipe with a soft cloth. This may happen when the microwave oven is used in humid conditions.
- Simply wipe the bottom surface of the oven with mild detergent and water, then dry. The oven must have cooled before cleaning.
- If the inside of the oven smells, put a cup of water with the juice and skin of one lemon in a deep microwave bowl. Microwave it for three minutes, wipe thoroughly and then dry with a soft cloth.
- Failure to maintain the oven in a clean condition, could lead to deterioration of the surface that will adversely affect the life of the appliance that may result in a hazardous condition.

Important utensil information

- Do not use metal pans or dishes with metal handles.
- Do not use anything with a metal trim.
- Do not use paper covered wire twist-ties on plastic bags.
- Do not use melamine dishes as they contain a material which will absorb microwave energy. This may cause the dishes to crack or burn, and will slow down the cooking speed.
- Use only cookware that is approved to be used in a microwave oven.
- Do not cook using a container with a restricted opening, such as bottles, as they may explode.
- Do not heat baby bottles with the teat left on. Remove it if replacing the bottle back into the oven.
- Only use thermometers that are approved for microwave ovens.
- Do not use the microwave oven for heating utensils.

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Connection to the mains supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of 230-240V~50Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.


If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW-EARTH

BLUE-NEUTRAL

BROWN-LIVE

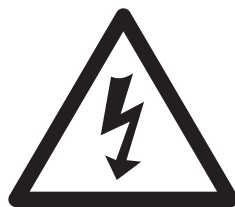

DANGER
Electric
Shock Risk

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Connection to the mains supply

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which


is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

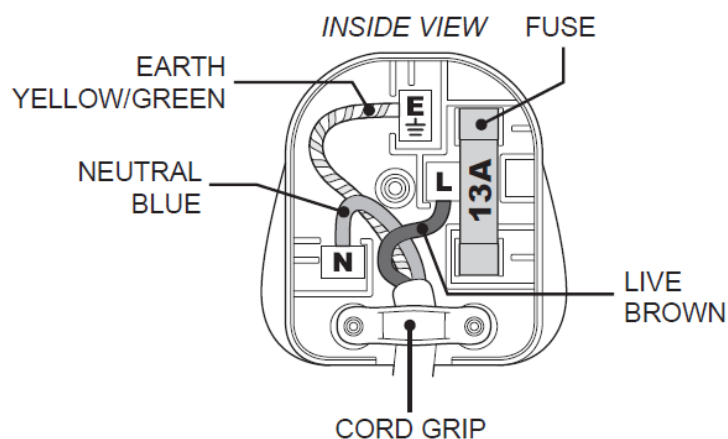

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Problems solving & plug

Problem solving

The microwave oven may cause interference to your radio, TV or similar equipment. If it does, you can get rid of the interference by moving the radio, TV or equipment as far away from your microwave oven as possible.

If the oven doesn't work -

- Make sure the mains plug is plugged in securely. If it is not, remove the plug from the socket, wait 10 seconds and plug it in again securely.
- Check the premises for a blown circuit fuse or a tripped main circuit breaker. If these seem to be working properly, test the socket with another appliance that you know works.

If the microwave power will not work –

- Check to see whether the timer is set, or the child lock is on.
- Make sure the door is securely closed. Otherwise, the microwave energy will not flow into the oven

Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier.

Should the fuse need replacing, you must use an ASTA approved fuse (conforming to BS1362) of the same rating.

If the fuse cover is lost the plug must not be used until a replacement is obtained from an electrical supplier.

If you need to remove the plug, cut it from the mains lead and dispose of it. Never attempt to re-use this plug or insert it into a socket outlet, as there is a very great risk of an electric shock.

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Produced for;

G2S Ltd.

Hindley

WN2 4EZ

For Customer Services & Spare Parts please call **0345 209 7461**

Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at

www.productcareuk.com

Technical Specification

Rated Voltage	230V – 240V ~ 50Hz
Rated Input Power(Microwave)	1270 W
Rated Output Power(Microwave)	800W
Oven Capacity	23 L
External Dimensions(HxWxD)	303.5mm x502mm x 420mm
Net Weight	13.76 kg
Model number	RHFM2363B & S

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Notes

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Notes

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

Notes

For Customer Services & Spare Parts please call **0345 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm or visit us at
www.productcareuk.com

For Customer Services &
Spare Parts please call

0345 209 7461

Opening times: Monday -
Friday

8am – 6pm & Saturday 9am –
1pm or visit us at

www.productcareuk.com

Revision 1



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.