

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility or call the appropriate toll-free number on the front of this manual for examination, repair or electrical or mechanical adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of attachments, including canning jars, not recommended by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used, but must be used only when the blender is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- When blending hot liquids, remove center piece of two-piece cover.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (220V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the center cover. To reduce the risk of fire or electric shock, do not attempt to remove the cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used, 1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - If the longer cord should be arranged so that it will not drag over the counter top or tabletop where it can be pulled on by children or tripped over.
- Note: If the power supply cord is damaged, it should be replaced by qualified personnel in Latin America, by an authorized service center.

HOW TO USE

This product is for household use only.

GETTING STARTED

- Wash all removable parts as instructed in CARE AND CLEANING section of this manual.
- Wipe outside of appliance with a damp cloth; dry thoroughly.

BLENDER JAR ASSEMBLY

- Turn blending jar upside down and place flat bottom on work surface.
- Put gasket on top of blade assembly. Place blade assembly with gasket into bottom of blending jar with blades facing down.
- Place jar base onto jar and rotate clockwise until it is tight (B).
- Turn assembled jar right side up.
- Place lid with lid cap onto blending jar.
- Insert power cord from storage area under the base.

- Note: Do not plug in the cord.
- Place jar assembly on base, making sure it is pressed firmly into place. (Jar base should not extend more than 1/4-inch above the rim at the top of the base.)
 - Blender is now ready for use.

USING YOUR BLENDER

- Make sure appliance is OFF.
 - Place foods to be blended in jar.
 - Place lid on jar, make sure lid cap is in place.
 - Plug power cord into outlet.
- Note: When in use, do not leave blender unattended. When using hard foods, such as ice, cheese, nuts and coffee beans, keep one hand on the lid to keep blender in place.
- Press the High or Low button; then select the speed that best suits your desired task. To switch speeds, press the High or Low button and the new speed desired.
 - When blending thick mixtures, such as smoothies, power drinks and milkshakes press the Pulse button several times to begin the blending process. Press the Pulse button for no more than 3 seconds at a time. This helps break up the ice and distribute the ingredients.
 - Open the lid cap to add ingredients while the blender is running and drop ingredients through the opening.
- Important: Do not remove the lid while the blender is running.
- When finished, press the Pulse/Off button. Make sure the jar is completely stopped before attempting to remove the blending jar from the base.
 - To remove the jar, grasp the handle and lift straight up. Do not twist the jar.

- Remove lid by pulling it straight up.
- Always unplug the appliance when not in use.

BLENDING TIPS AND TECHNIQUES

- Do not food into pieces no larger than 1/4-inch for use in the blender.
- When preparing foods that have several different kinds of ingredients, always add liquid ingredients first.
- When ingredients splatter onto the sides of the jar or the mixture is very thick, press the OFF button to turn appliance off. Remove the lid and use a rubber spatula to scrape down the sides of the jar and to redistribute the food pushing food toward the blades. Replace the lid and continue blending.

- Important: Blender should always have lid in place when in use. Caution: Do not place blending jar on base when motor is running.
- The lid cap holds up to 1 oz. liquid and can be used as a measure and when adding ingredients such as juices, milk, cream and liquid.
 - When making bread crumbs, chopping nuts or grinding coffee beans make sure blending jar is completely dry.
 - When using PULSE function use short bursts. Allow the blades to stop rotating between pulses. Do not use pulse for more than 2 minutes.
 - Use the PULSE button to begin the blending process when preparing beverages that include ice cubes; this helps to produce a smoother texture.
 - The PULSE function is helpful when short bursts of power are needed, such as when preparing thick smoothies or milkshakes, chopping nuts or grinding coffee beans.
 - It is helpful to begin the blending process on the lowest speed and then increase to a higher speed, if necessary.
 - To stop blending, press the OFF button at any time.
 - When blending hot liquids always let them cool at least 5 minutes before blending. Before beginning to blend, remove the lid cap and put it back with the opened side tilted away from you. Cover lid with a cloth to avoid splattering and only use lowest speed. Do not blend with more than 2 to 3 cups at a time.
 - DO NOT place any of the following in the blender:
 - Large pieces of frozen foods
 - Tough foods such as raw turnips, sweet potatoes and potatoes
 - Bones
 - Hard salami, pepperoni and hard sausages
 - Hard salami, pepperoni and hard sausages
 - Blind liquids (cool for 5 minutes before placing in blending jar)

- Several other do's:
 - Do not operate blender without the lid on the blending jar.
 - Do not store foods in the blending jar.
 - Do not overfill the blender. (The blender is more efficient with less rather than more.)
 - Do not use pulse for more than 10 seconds at a time. Release the PULSE button; allow the blender to rest briefly, then continue.
 - Do not run blender for longer than 30 seconds when using dry foods and 2 minutes when blending liquids. Scrape down sides blending jar, if necessary and continue blending.
 - Do not use if blender jar is chipped or cracked.
- Tasks not recommended for the blender:
 - Whipping cream
 - Beating egg whites
 - Mixing dough
 - Mashing potatoes
 - Grinding meats
 - Extracting juice from fruits and vegetables

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

- Before cleaning, turn off and unplug appliance.
 - Lift blending jar by handle off power base.
 - Remove jar base by turning counterclockwise until loose.
 - Remove gasket and blade assembly.
- Caution: Blades are sharp, handle carefully.
- Remove lid and lid cap.
 - Wash removable parts by hand or in your dishwasher. Place jar on dishwasher rack and rest of parts on top-rack only.

- Important:
- Do not place jar parts in boiling liquids.
 - Do not immerse base in liquid. Wipe base with damp cloth and dry thoroughly.
 - Remove stubborn spots by rubbing with damp cloth and nonabrasive cleaner.

- Remove stubborn spots by rubbing with damp cloth and nonabrasive cleaner.

Note: If liquids spill onto base, wipe with damp cloth and dry thoroughly. Do not use rough scouring pads or cleansers on parts or finish.

QUICK CLEANING

For quick cleanup, combine 1 cup hot water and a drop of liquid dish soap in the blending jar. Cover and blend for about 30 seconds. Discard liquid and use jar thoroughly.

STORAGE

For convenient storage, wrap the cord around the feet on the bottom of the blender base.

SPEED CHART

Pulse/Off	Use for thick mixtures
Stir	Liquefy frozen juices, drink mixes and condensed soups Prepare salad dressings Blend puddings Puree hot liquids
Mix	Aerate soups and beverages
Blend	Blend salsas Prepare sauces Remove lumps from gravies
Crumb	Make cookie, cereal and bread crumbs
Chop	Chop fruits and vegetables Chop cooked meats
Clean	Blend drop of dishwashing liquid and hot water to clean blender.
Grate	Grate hard cheeses and vegetables Make superfine sugar

Beat	Chop nuts, coarse-to-fine Grind coffee beans, spices and chocolate Grind hard cheeses, cooked meats and coconut
Puree	Puree baby foods – fruits and vegetables
Liquefy	Blend protein drinks Liquefy frozen drinks; smoothies
Whip	Liquid pancake and waffle batter or mixes Beat eggs for omelets and custards
Smoothie	Blend milk, shakes and malts Prepare smoothies
HI/LO	Select a change between High and Low Hi – the button is out Lo – the button is in

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate toll-free number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Appliance's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.
- One year from the date of purchase with proof of such purchase.
- One year from a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of purchase.
- Visit the online service website at www.prodproctel.com/applca, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use.
 - Damage from misuse, abuse or neglect.
 - Products that have been modified in any way.
 - Products used or serviced outside the country of purchase.
 - Gas parts and other accessory items that are packed with the unit.
 - Shipping and handling costs associated with the replacement of the unit.
 - Consequential or incidental damages. (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)
- How does state law relate to this warranty?**
- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto. NO devuelva el producto al fabricante. Lleve el producto al centro de servicio autorizado.

DOS AÑOS DE GARANTÍA LIMITADA

(Aplica solamente en Estados Unidos y Canadá)

¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

¿Por cuánto tiempo es válida la garantía?

- Por dos años a partir de la fecha original de compra mientras que tenga una prueba de la compra.

¿Cómo se obtiene el servicio necesario?

- Conservare el recibo original como comprobante de la fecha de compra. Comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

¿Cómo se puede obtener servicio?

- Conservare el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

¿Qué aspectos no cubre esta garantía?

- Los productos que han sido utilizados en condiciones distintas a las normales.
- Los daños ocasionados por el mal uso, el abuso o negligencia.
- Los productos que no han sido alterados de alguna manera.
- Los daños ocasionados por el uso comercial del producto.
- Los productos utilizados o reparados fuera del país original de compra.
- Las piezas de vidrio y demás accesorios empacados con el aparato.
- Los gases de tramitación y embarque asociados al reemplazo del producto.

Sello del Distribuidor: Código de fecha / Date Code

Fecha de compra: 475 W 120 V – 60 Hz

Modelo:

Importado por / Imported by:
RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Píspor 3
C.I.125FUG (C.A.B.A. Argentina.
C.U.I.T. No. 30-70706168-1

Importado por / Imported by:
Rayovac de México SA de CV
KM. 14.5 Carretera Puente de Vigas.
Col. Lechería, Tullitlán.
Estado de México.
C.P. 56440
México
Tel: (55) 5831-7070

Del interior marque sin costo
01 800 714 2503



DESIGN PAI'DE

Para comunicarse con los servicios de atención o de reparación, o por cualquier otra razón, comuníquese con el número de teléfono que aparece en el presente manual. No envíe el producto al fabricante ni lo lleve a un centro de servicio. No puede garantizar el sitio web incluido en la página de cobertura.

GARANTÍA LIMITADA DE DOS AÑOS

(Válida solamente en Estados Unidos y Canadá)

¿Qué le cubre la cobertura?

- Tout défaut de main-d'œuvre ou de matériel; toutefois, la responsabilité de la société Applca se limite au prix d'achat du produit.

¿Qué le cubre la durée?

- Deux années à compter de la date d'achat initiale, avec une preuve d'achat.

¿Qué le cubre el servicio?

- Reemplazamiento por un producto razonablemente similar nuevo o refurbished.

Comment se prévaut-on du service?

- Conservar son reçu de caisse comme preuve de la date d'achat.
- Visiter notre site web au www.prodproctel.com/applca, ou composer sans frais le 1 800 231-9786, pour obtenir des renseignements généraux relatifs à la garantie.
- On peut également communiquer avec le service des pièces et des accessoires au 1 800 738-0245.

Uršet-če que la garantie ne couvre pas?

- Des dommages dus à une utilisation commerciale.
 - Des dommages causés par une mauvaise utilisation ou de la négligence.
 - Des produits qui ont été modifiés.
 - Des produits utilisés ou entretenus hors du pays où ils ont été achetés.
 - Des pièces en verre et tout autre accessoire emballés avec le produit.
 - Les frais de transport et de manutention reliés au remplacement du produit.
 - Des dommages indirects (il faut toutefois prendre note que certaines états ne permettent pas l'exclusion ni la limitation des dommages indirects).
- ¿Qué le cubre la garantía?**
- Las modalidades de la presente garantía donnen des droits légaux spécifiques. L'utilisateur peut également se prévaloir d'autres droits selon l'état ou la province qu'il habite.

Por favor llame al número correspondiente que aparece en la lista a continuación para solicitar que se haga efectiva la garantía y donde Ud. puede solicitar servicio, reparaciones o partes en el país donde el producto fue comprado.

Argentina
Servicio Técnico
Monroe 3351
CABA Argentina
Tel: 0800 - 444 - 7296
servicios@rayovac.com.ar

Chile
SERVICIO DE MAQUINAS Y
HERRAMIENTAS LTDA.
Portugal N° 644
Santiago - Chile
Fonos: 02-6352508 / 02-6341169
Email: servicio@spectumbrands.cl
Call center: 800-177-051

Colombia
PULINARES
Avenida Ouito # 88A-09
Bogotá, Colombia
Tel. sin costo 01 800 7001070

Costa Rica
Adilaciones Electromecánicas,
S.A.
Calle 26 Bis y Av. 3
San José, Costa Rica
Tel.: (506) 237-5716 / 223-0136

Ecuador
Servicio Maquin de Ecuador
Av. 6 de Diciembre 9276r y los
Alamos
Tel. (593) 2281-3882

El Salvador
Calle San Antonio Abad 2936
San Salvador, El Salvador
Tel. (503) 2294-9374

Guatemala
Macías S.A.
3^{ra} Calle 414 Zona 9
Frente a Tecun
Tel. (502) 2331-5200 / 2332-2101

Honduras
Servifotal
Corintigua a Telecentro
Tegucigalpa, Honduras.
Tel. (504) 235-6271

México
Artículo 123 RS Local 109 y 112
Col. Centro, Cuauhtémoc,
México, D.F.
Tel. 01 800 714 2503

Nicaragua
Servifotal
De semáforo de portezuelo
500 metros al sur.
Managua, Nicaragua,
Tel. (505) 248-7001

Perú
Servicio Central Fast Service
Av. Angamos Este 2431
San Borja, Lima Perú
Tel. (51) 1251 398

Panamá
Servicios Técnicos Coperul
Tumburroto Boulevard
El Dorado Panamá
500 metros al sur.
Tel. 3020-480-800 sin costo
(505) 2360-236 / 159


Puerto Rico
Buckeye Service
Jesus P. Pifero #1013
Puerto Nuevo, SJ PR 00920
Tel.: (787) 782-6175

República Dominicana
Piza Lama, S.A.
Av. Duarte
San Domingo,
República Dominicana
Tel.: (809) 687-9171

Venezuela
Inversiones BDR CA
Av. Casanova C.C.
City Market Nivel Plaza Local 153
Diagonal Hotel Mella,
Caracas.
Tel. (583) 234-0969
www.applcaservice.com
servicio@applcamail.com

Comercializado por:
Rayovac de México SA de CV
KM. 14.5 Carretera Puente de Vigas.
Col. Lechería, Tullitlán.
Estado de México.
C.P. 56440
México
Tel: (55) 5831-7070

Servicio y Reparación
Art. 123 No. 95
Col. Centro, C.P. 06650
Delég. Cuauhtémoc,
Ciudad de México
Tel. 01 800 714 2503

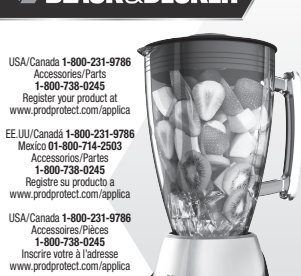

Model/Modelo/Modèle
● BLZ505 ● BLZ505C



700 PEAK WATT BLENDER

- | | |
|--|--------------------------------------|
| 1. Measuring cup lid insert (Part # Y-950-01) | 16. Blade assembly (Part # Y-951-09) |
| 2. Lid (Part # Y-951-07) | 17. Jar base (Part # Y-951-05) |
| 3. Perfect Pour™ glass blending jar (6-cup / 48 oz.) (Part # Y-951-13) | 8. Stability interlock system |
| 4. Handle | 9. Blender base |
| 5. Gasket (Part # Y-951-33) | 10. Control panel |
- Note: † indicates consumer replaceable/removable parts

LIQUADORA DE 700 VÁTIOS

- | | |
|---|---|
| 1. Tapa con taza medidora (Pieza No Y-950-01) | 16. Cuchillas (Pieza No Y-951-09) |
| 2. Tapa (Pieza No Y-951-07) | 17. Base de la Jara (Pieza No Y-951-05) |
| 3. Jarra de vidrio Perfect Pour™ (48-oz./1.4 l) (Pieza No Y-951-13) | 8. Sistema de estabilización |
| 4. Asa | 9. Base de la Licuadora |
| 5. Junta (Pieza No Y-951-33) | 10. Panel de control |
- Note: † indica las piezas extraíbles o reemplazables por parte del consumidor

MÉLANGEUR D'UNE PUISSANCE DE POINTE DE 700 W

- | | |
|---|--|
| 1. Tasse à mesurer intégrée au couvercle (pièce n° Y-951-01) | 15. Joint d'étanchéité (pièce n° Y-951-33) |
| 2. Couvercle (pièce n° Y-951-07) | 16. Lames (pièce n° Y-951-09) |
| 3. Récipient en verre gradué Perfect Pour™ (6 tasses / 48 oz) (pièce n° Y-951-13) | 7. Base du récipient (pièce n° Y-951-05) |
| 4. Poignée | 8. Système de serrage pour la stabilité |
| | 9. Base de la licuadora |
| | 10. Panneau de commande |

Remarque: Le symbole « † » indique une pièce amovible/replaçable par l'utilisateur.

