

Replacement Parts 9941A Series Stove

- | | | |
|---|------------|---|
| 1 | 9941-5021 | Lid and Handle Assembly (Black) |
| | 9941-5071 | Lid and Handle Assembly (Stainless Steel) |
| | 9941-5081 | Lid and Handle Assembly (Blue) |
| 2 | 9941-3311 | Water Pan |
| 3 | 9941-5471 | Burner Assembly – left |
| 4 | 9941-5461 | Burner Assembly – right |
| 5 | 5010000743 | Regulator Assembly |
| 6 | 9942-5851 | Igniter/Electrode |
| 7 | 9942-3811 | Side Handle Assembly w/boots and screws |
| 8 | 9941-1711 | Fascia Kit (includes igniter button) |

