

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



 
VIKING VGIB151 Owner's Manual

[Shop genuine replacement parts for VIKING VGIB151](#)




[Find Your VIKING Grill Parts - Select From 210 Models](#)

----- Manual continues below -----

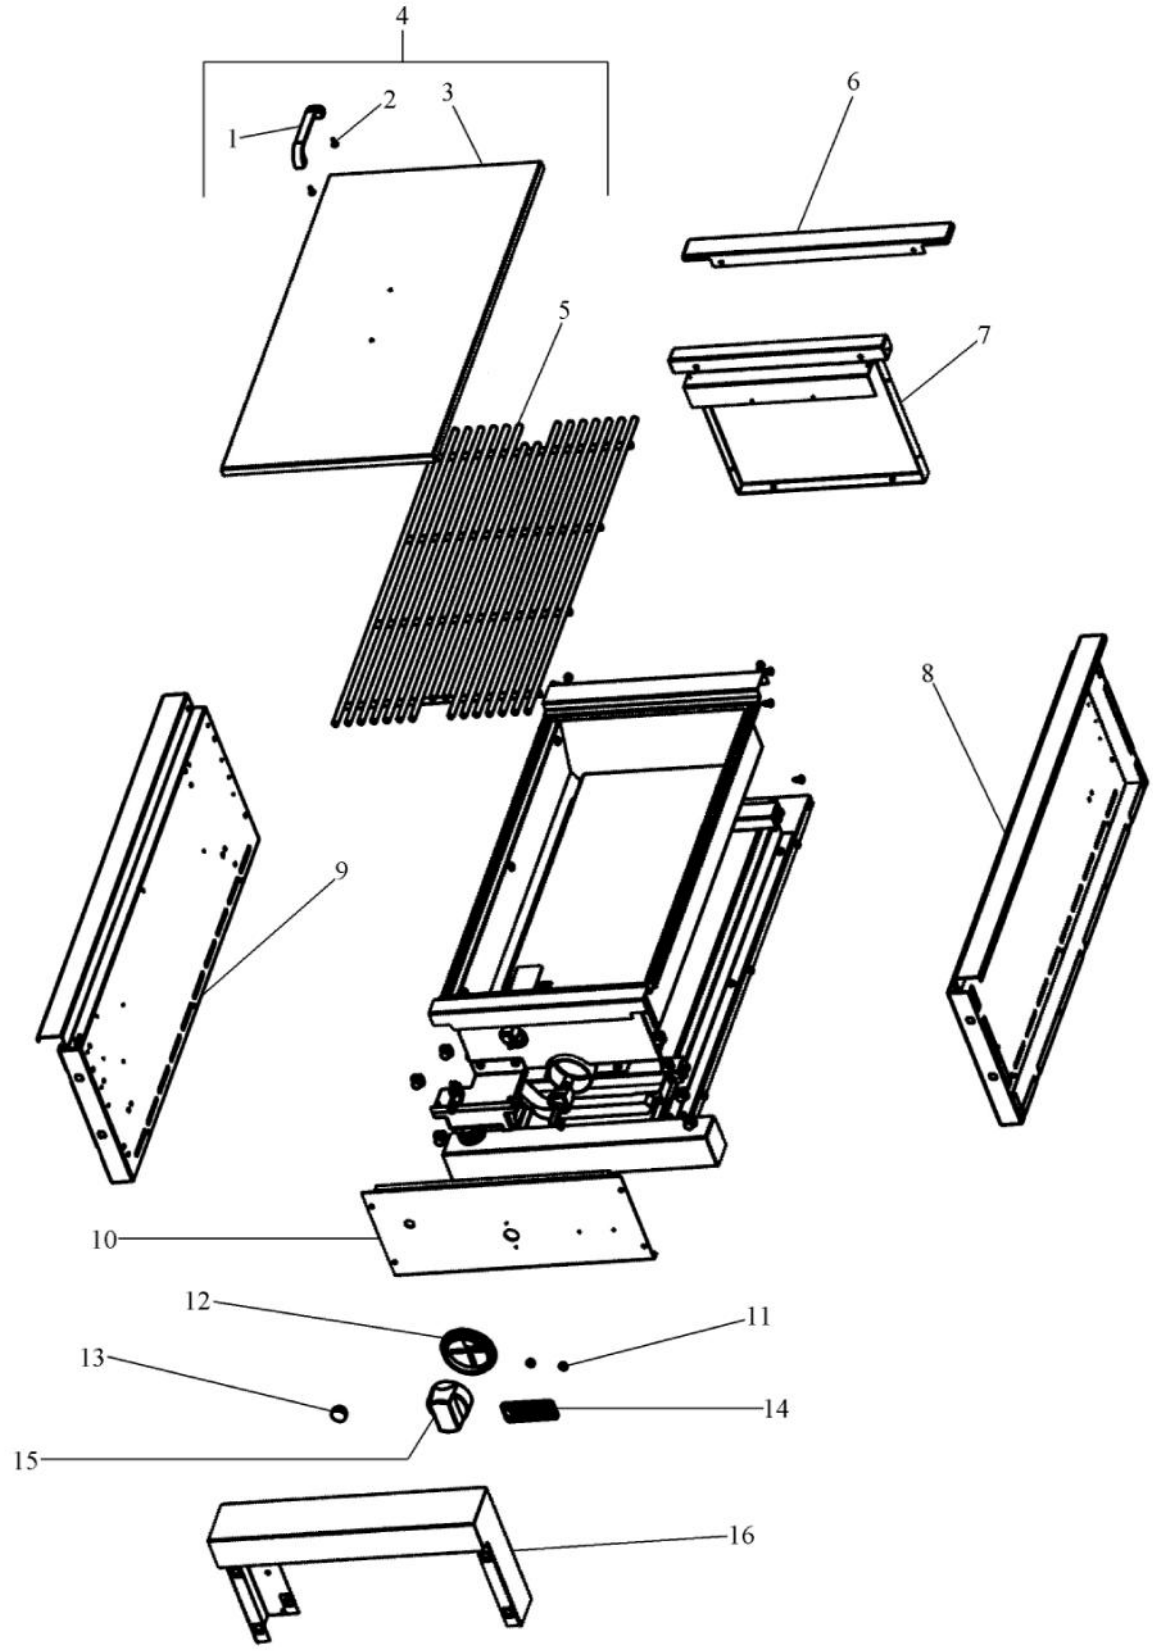

Ref #	Part Number	Qty.	Description
1	PE030042		BURNR COVER HANDL.BBQ48/CHNO.P44-1010
2	PD020058		8-32 X 3/8 PAN PH MS SS
3	B20012236		GRATE COVER
4	G32012224		GRATE COVER ASSY, VGIB
5	PA060068		FULL GRATE XSSX
6	B2005339		SIDE BURNER REAR TRIM
7	B2005332		SIDE BURNER BOX BACK PHASE 2
8	B2006306		GRILL BOX SIDE RH NON-ROTIS
9	B2005204		PANEL, GRL, LH
10	B92012241		CONTROL PANEL, VGIB151
11	PD030006		CAPPED WASHER PAL NUT
12	PB010208		BEZEL, CHROME PLATE
	PB010209		BEZEL BRASS
13	PB010163		OVEN LIGHT SWITCH KNOB BK
14	PE010142		3 LOGO XBKXXCHROME
	PE010143		3 LOGO BK/BR
15	PA010140		OUTDOOR IR GRILL KNOB
16	G3005335		LANDING LEDGE ASSY- S/BURNER (PH2)

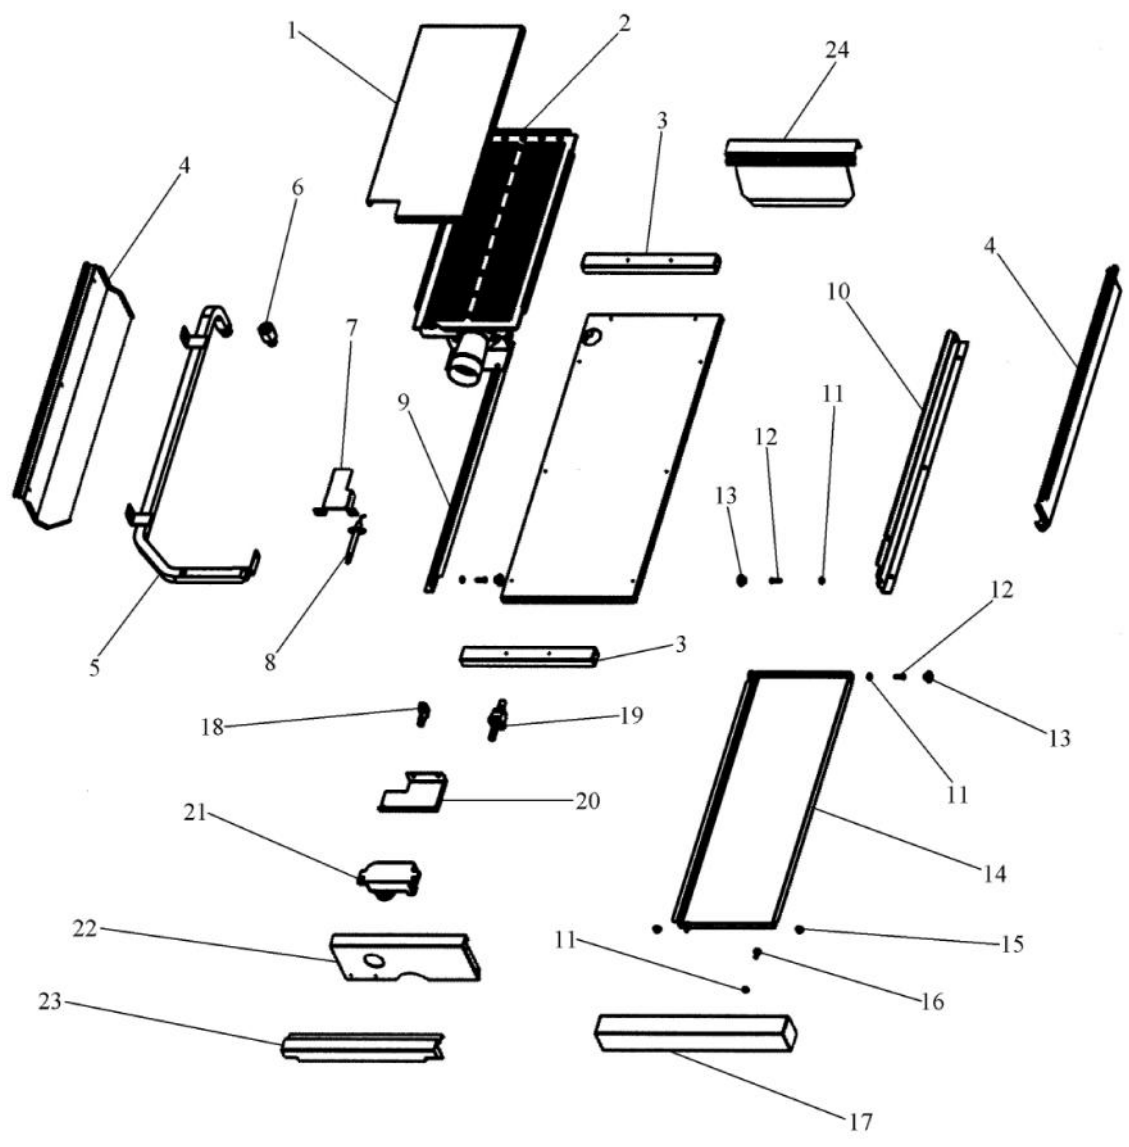 

Ref #	Part Number	Qty.	Description
1	B2008943		GREASE SCREEN
2	G32012223		IR BURNER ASSY, VGIB
3	B20012235		BURNER SUPPORT BRACKET
4	B20012237		GREASE DIVERTER
5	PA050111		MANIFOLD, VGIB
6	PB040167		MALE COUPLER (PHASE 1 GRILL)
7	B2008939		IR SPARK IGNITOR COVER
8	PB040176		IGNITER
9	G3005214		DRIP TRAY SLIDE - LH
10	G3005215		DRIP TRAY SLIDE - RH
11	PD030044		10-24 KEPS NUT SS
12	PD020082		10 X 24 COUNTERSUNK S.S. SCREW
13	PC020025		DRIP TRAY WHEEL
14	B2005336		SIDE BURNER DRIP TRAY
15	PD040004		GROMMET BUMPER
16	PD020056		NO.10-24 X 1/2 PH.TR. M.S. SS
17	B3005337		SIDE BURNER DRIP TRAY HANDLE
18	PE050063		SPARKER SWITCH
19	PA010141		SUB TO 003554-000 - I/R BURNER VALVE (NAT)
20	B20012222		BRACKET, SPARK MODULE
21	PA020036		SPARK MODULE
22	B20012239		GRILL BOX FRONT, IR SB
23	B20012240		FRONT GRATE SUPPORT
24	B20012238		REAR GRATE SUPPORT
No.	G3004936		REGULATOR ASSY - NAT (P1 GRILL)
No.	G3004937		REGULATOR ASSY - L.P. W/HOSE