

**CAUTION**  
 This grill is designed for outdoor use only. Do not use indoors. Use only in well-ventilated areas. Always use proper grill safety practices. Always use proper grill safety practices.




**CAUTION**  
 This grill is designed for outdoor use only. Do not use indoors. Use only in well-ventilated areas. Always use proper grill safety practices. Always use proper grill safety practices.

**Parts List - Model 451642304**

Part No.	Description	Part No.	Description
A	Handle	1	Handle Bag, Top
B	Igniter Bar	2	Handle Bag, Bottom
C	Cooking Grate	3	UT-500 Cover
D	Warming Rack		
E	Side Shelf		
F	Wheel		
G	Back Support Braces		
H	Leg Assembly		
I	Side Support Braces		
J	Back Support Brackets		
K	Front Feet		
L	40x12" Full-Size Top Cover		
M	Side Clip		
N	Support/Control Assembly		
O	Control Panel Assembly		
P	Control Knob		
Q	On/Off Switch		
R	On/Off Switch		
S	Back Support Braces		
T	Leg Feet		
U	Control Knob		
V	Control Knob		
W	Control Knob		

**Optional Assembly Hardware**  
 See the online customer guide for an up-to-date list of optional assembly hardware for this grill.

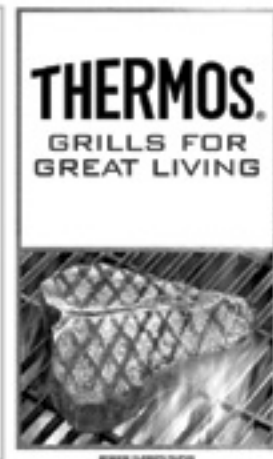

**12000**  
 451642304  
**ASSEMBLY MANUAL**

**THIS GRILL IS FOR OUTDOOR USE ONLY**

**CAUTION:** Read instruction on safety warnings, assembly instructions, and use and care information before attempting to assemble or use.

**NEVER LEAVE UNATTENDED.** Leave from the grill when not in use.

**CAUTION:** Never touch the grill when it is hot.

**WARNING:** Failure to follow instructions or warnings could result in personal injury or property damage.

**CAUTION:** Never touch the grill when it is hot. Always use proper grill safety practices.

If you have any questions or need assistance, please call 1-800-888-7888.

**THERMOS**