


Parts List - Model 461837603		
Key Qty.	Description	Part #
A 1	Condiment Wire	4151005
B 3	Tent Supports	4151014
C 1	Grate, 12"	4152048
D 1	Grate, 15"	4152049
E 1	Handle	4154074
F 1	Condiment Tray	4154518
G 2	Hub Caps	4154530
H 2	Wheels	4154531
I 1	LP Tank	4158015
J 3	Burner Tents	4500226
K 1	Tank Retainer	4503158
L 1	Tank Support	4503160
M 1	Upper Panel	4503160
N 1	Lower Panel	4503160
O 1	Storage Shelf	4503176
P 2	Self-tap Screws, #10x12"	4080043
Q 2	Rivet Pins	4080066
R 3	3/16" Flat Nuts	4153096
S 1	Ignitor Wires	4153184
T 2	Leg Extenders	4154516
U 2	Hitch Pins	4156515
V 2	Carry-over Tubes	4500228
W 1	Right Leg	4503160
X 1	Left Leg	4503167
Y 1	Console Assembly	4530112
Z 1	Ignitor Knob	4154208

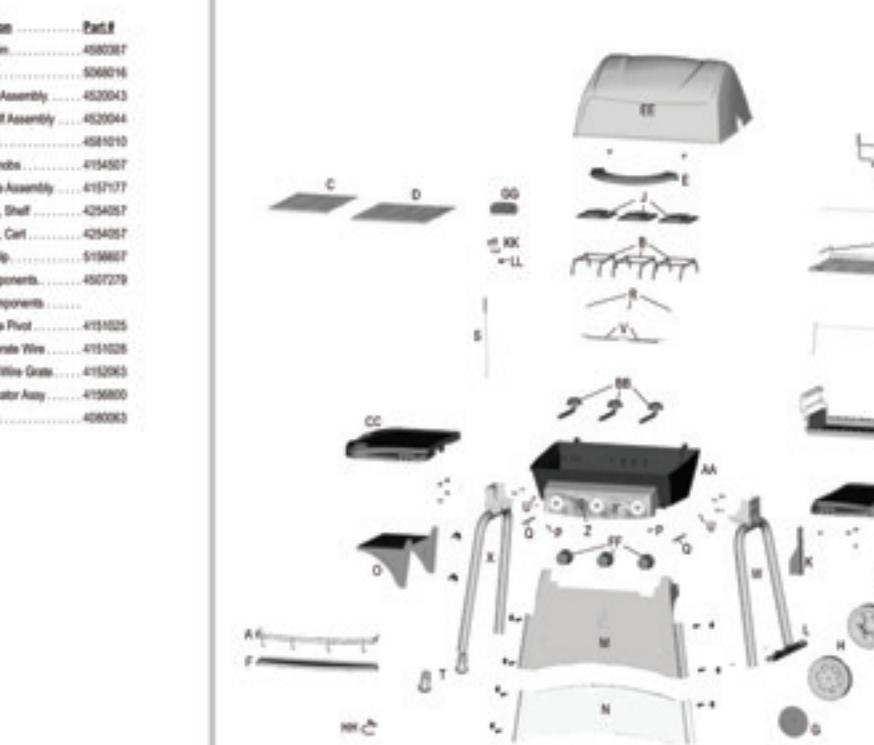

# NO LIGHTER FLUID REQUIRED



461837603  
ASSEMBLY MANUAL



THIS GRILL IS FOR  
OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

**WARNING**  
Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

**CAUTION**  
Some parts may contain sharp edges – especially as noted in the manual. Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call 1-800-245-7548.

# NO CHARCOAL MESS

