


Key	Qty.	Description	Part #	Key	Qty.	Description	Part #
Α	1	Bottom Shelf	4151007	W	1	Back Panel	4500251
В	1	Warming Rack	4152124	Χ	4	#10x1-1/4" Self-Tap Screw	4080041
С	1	Cooking Grate	4152739	Υ	1	Side Shelf	4154453
D	1	Leg Extender Assembly	4154466	Z	2	Shelf Arm	4502121
E	1	Handle	4154488	AA	1	Sideburner Shelf Assembly	4520029
F	1	Condiment Basket	4154498	BB	1	Grill Lid	4581019
G	1	Bottom Shelf Panel Set	4154499	CC	1	Sideburner Knob	4154471
Н	1	Tank Wire	4156152	DD	1	Logo Plate Assembly	4157147
I	1	Sideburner Grate	4156179	EE	1	Sideburner	5068017
J	1	Drip VapoRISER Bar	4156417	FF	1	Grease Clip	5156607
K	1	Wheel Assembly	4158098		1	Hardware Bag	4253990
L		Briquets (1 bag)	4158125	Repl	acem	ent Ignition Module Bag	4506710
М	1	Front Panel	4502118				
N	6	#10x1/2", T-20, Self-Tap Screw	4080043				
0	2	Valve Clip	4156172				
Р	1	Briquet Grate	4157101				
Q	2	Casting Seat Bracket	4500222				
R	2	Leg Assembly	4502119				
S	1	Burner/Collector Assembly	4505065				
T	1	Control Panel Assembly	4530080				
U	2	Control Knob	4154470				
٧	1	Grill Bottom	4580148				

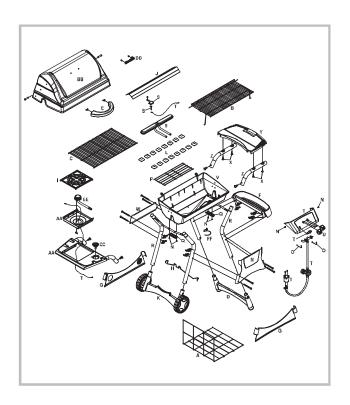



QUICKSET® 4667274 ASSEMBLY MANUAL



THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

A WARNING

Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

A CAUTION

Some parts may contain sharp edges

- especially as noted in the manual!

Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call 1-800-387-6057.

Visit us on the web at:



4667274-E / 1-4165058 (02-13-02)