



For prices and to order, please search for the item number on
<https://www.appliancefactoryparts.com>
Spark Generators

03100

Push-button, self-grounding piezo.

03120

Push-button piezo with external prong usable as a ground or for a secondary electrode.

03136

Push-button piezo with external prong usable as a ground or for a secondary electrode; Weber.

03140

Alternate push-button for spark generator 03321, used with Weber Q series.

03152

Trigger switch for switch-actuated spark generators.

03153

Trigger switch for switch-actuated spark generators; does not include wires.

03200

1-outlet rotary piezo.

03220

2-outlet rotary piezo.

03230

3-outlet rotary piezo.

03300

AA spark generator. Replaces a piezo plunger. Fits most grills that use a plunger-type spark generator.

03310

1-outlet AAA.

03320

2-outlet AAA.

03321

2-outlet AAA. Weber.

03322

2-outlet AA; accepts remote switch.

03330

3-outlet AAA.

03332

3-outlet AA; accepts remote switch.

03333

3-outlet AA.

03335

5-outlet AAA.

03340

4-outlet AA.

03341

4-outlet AA for Weber.

03342

Small 2-outlet AA. Brinkmann

03344

4-outlet AA; accepts remote switch.

03350

6-outlet AA.

03352

5-outlet AA; accepts remote switch.

03356

6-outlet AA; accepts remote switch.

03360

6-outlet 9v; DCS.

03370

4-outlet 9v; DCS. Use jumper wire 03197 for 2-outlet applications.

03371

4-outlet AA; Viking.

03372

2-outlet AA; Viking.

03373

4-outlet AA; accepts remote switch; Weber.

03377

7-outlet AA.

03380

5-outlet AA.

03387

7-outlet AA; accepts remote switch.

03388

8-outlet AA; accepts remote switch.