


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# MASTERCool FAD242W8 Owner's Manual

[Shop genuine replacement parts for MASTERCool  
FAD242W8](#)

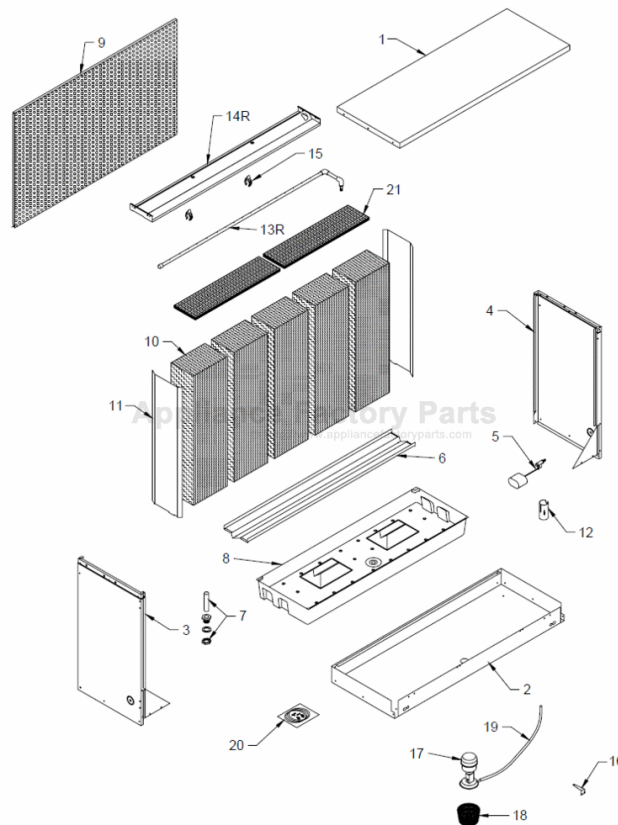

[Find Your MASTERCool Evaporative Cooler Parts - Select From 136 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for MASTERCOOL FAD242W8

|                            |  |
|----------------------------|--|
| <a href="#">281001-001</a> | PUMP BASKET FOR: ALL MODELS - RESIDENTIA |
| <a href="#">FL-3/8</a>     | FLOAT VALVE ASSEMBLY FOR: COMMERCIAL ASP |
| <a href="#">30A-2</a>      | OVERFLOW DRAIN (1" x 4 1/4") FOR: ALL CO |
| <a href="#">218122-004</a> | PUMP MOUNT FOR: AD/AS/SAD/SAS100/10012/1 |
| <a href="#">110717</a>     | WATER DELIVERY TUBE - MUST SPECIFY MODEL |
| <a href="#">310587</a>     | BLEED OFF KIT - (5/8" W/ 25 FT HOSE) FOR |
| <a href="#">3D-28R</a>     | WATER DISTRIBUTOR ASSEMBLY - RIGHT - FOR |
| <a href="#">281036</a>     | WATER RESERVOIR FAD242W8B & FAD248W8B    |
| <a href="#">3D-28L</a>     | WATER DISTRIBUTOR ASSEMBLY - LEFT - FOR: |
| <a href="#">322140-043</a> | WATER DISTRIBUTOR HSG., RT, FAD242/248W  |
| <a href="#">322140-039</a> | WATER DISTRIBUTOR HSG. LEFT FAD242/248W  |
| <a href="#">110467</a>     | PUMP - 115V INDUSTRIAL - FOR: 10/12 SD/D |
| <a href="#">310115</a>     | PAD SET (RIGID MEDIA) FOR: FAD242W8 - ON |
| <a href="#">381006</a>     | FLOAT SHIELD/SPLASH GUARD FOR: ALL MASTE |

# High Capacity Axial Fan Evaporative Cooler

Model Series

**FAD242**

**FAD248**



Circle the model of your cooler and record the serial number below.

*Encierre con un circulo el modelo de su enfriador y escribe el número de serie abajo.*

Serial #  
Número de Serie \_\_\_\_\_

**Read Carefully All Of This Manual Before Installing The Unit**

*Lea Con Cuidado Todo Este Manual Antes De Instalar La Unidad*

## Table Of Contents

|                                  |     |  |      |
|----------------------------------|-----|--|------|
| Safety Instructions .....        | 1   | Warranty .....   | 4    |
| Operation .....                  | 1   | General Specifications ( <i>Especificaciones Generales</i> ) ..... | 5    |
| Installation Instructions .....  | 2   | Motor Specifications ( <i>Especificaciones Del Motor</i> ) .....   | 5    |
| Maintenance Section .....        | 2-3 | Parts List - Blower Section ( <i>Lista De Piezas</i> ) .....       | 6-7  |
| Electrical Wiring Diagrams ..... | 3   | Parts List - Wet Section ( <i>Lista De Piezas</i> ) .....          | 8-9  |
| Troubleshooting .....            | 4   | Spanish ( <i>Instrucciones en Español</i> ) .....                  | 9-12 |

## Read And Save These Instructions

### Safety Rules

1. Read instructions carefully.
2. Disconnect all electrical service that will be used for the unit before you begin the installation.
3. Electrical hook up should be done by a qualified electrician, so that all electrical wiring will conform to your local standards.
4. For a maximum safety precaution, make sure cooler cabinet is properly grounded to a suitable ground connection.
5. Cooler must be connected to proper line current, voltage and cycle, as stamped on cooler motor and pump motor specification plate.

6. This unit must be installed at a height of 10 feet or greater from the floor.
7. Always **Disconnect Power** before performing any maintenance.

### Operation

To eliminate delivery of hot air when starting cooler, Start the pump without the blower for the first few minutes, then turn on the blower motor.

These coolers may be used without water for ventilation purposes. When outside air is cool (for example, at night) or when humidity is high the water pump can be turned off.

## Installation

**⚠CAUTION:** Make sure that the mounting surface is strong enough to support the operating weight of the cooler when in use. (For operating weight, see Specification Table.)

**⚠CAUTION:** Never start cooler until installation is complete and unit has been tested for rigidity.

**⚠CAUTION:** This unit must be installed at a height of 10 feet or greater from the floor.

### Electrical Installation

**NOTE:** Local building code regulations must be observed.

**⚠WARNING:** Disconnect all electrical service that will be used for this unit before you begin the installation.

• **Connect electrical.** Cooler must be connected to the proper line current, voltage and cycle, as indicated on the decal located at the electrical service entrance. Connecting improper voltage to motor will void motor warranty. See the wiring diagrams (figures 8 & 9) on page 3 for wiring electrical connections.

**NOTE:** A separate 120 Volt, 60 Hz, 1 phase pump electrical circuit is required to maintain the integrity of the GFCI pump protection and to maintain the U.L. Listing of the evaporative cooler.

• **Wire gage.** The horse power, voltage, cycle, phase, current, and length of wire required from switch to motor will determine the gage of wire to be used.

• **Switches.** Larger horsepower and three phase applications require switches (not supplied) of proper current capacity and should be installed by a competent electrician.

• **Power Supply box.** The power supply box is located in the upper inside of the divider channel. Remove the cover to access wiring. (Fig. 1). Connect wiring in box to power supply wiring as per wiring diagrams.

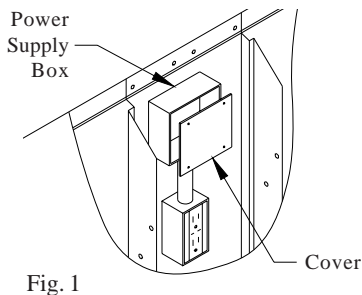


Fig. 1

**⚠WARNING:** Make sure that cooler cabinet is properly grounded to a suitable ground connection for maximum safety.

### Water Connection

• **Pumps.** Plug the pumps into the pump receptacles. There are metal cord retaining clips on the corner post and motor cross braces for retaining the pump cords.

**⚠CAUTION:** The pump cord must be secured to prevent it from dropping into water reservoirs or contacting moving components.

• **Install overflow assembly.** Remove nut and place nipple through the hole in the pan, with the rubber washer between the pan and the head of the drain nipple (Fig. 2). Screw on nut and draw up tight against bottom of pan. Insert overflow pipe in nipple to retain water. Overflow pipe may be removed to drain pan when necessary. A garden hose may be screwed on the drain nipple to drain water away from your unit.

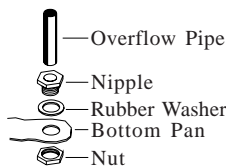


Fig. 2

• **Connect water supply line.** A water supply line should be run to the cooler to supply an adequate amount of cold water to the unit. The amount of water each cooler uses will depend on the weather conditions in your area and the size of your unit. The hotter and dryer your climate and the higher the capacity of your unit, the more water will evaporate. For example: An FAD248 unit with a 2 hp motor will use approximately 85 gallons per hour in a hot and dry climate like Las Vegas on a 105°F day with 10% humidity. The same unit in a cooler climate with 95°F and 20% humidity would use approximately 63 gph.

**NOTE:** Do not connect the water supply line to any soft water applications.

• **Install float valve and fill pan.** Refer to Fig. 3. Remove items 1, 2, 3, and 4. Insert float body (5) through hole in back post panel as shown. Install washer (1) and nut (2). Tighten to keep float from turning. Place nut (4) and ferrule (3) on water supply line. Connect to float fitting and tighten until water tight. Loosen screw (6) and adjust rod (7) until water level is within 1" of top of reservoir. Tighten screw (6). Slide float shield (8) up over float body (5) until it snaps into place.

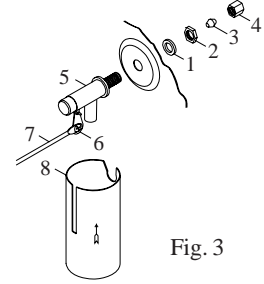


Fig. 3

• **Bleed-Off.** Use of the bleed-off kit is recommended to prevent scale build up by bleeding off small amounts of circulating water during operation. Do not add any type of water treatment chemicals to the water.

## Maintenance

**⚠WARNING:** Before doing any maintenance be sure to disconnect from power source. This is for your safety.

### Spring Start-Up

• **Check belt tension.** A 3 lb. force should deflect the belt 3/4 inches (see Fig. 4). Readjust belt if needed.

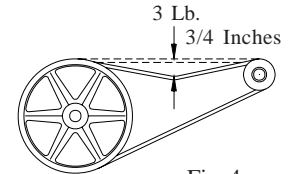


Fig. 4

To adjust belt, loosen the two hinge nuts and the locking nut on the adjusting bolt as shown in figure 5. Loosen or tighten the adjustment nut until the belt is at the right tension. Lock the motor plate in place by tightening the locking nut and then tighten the 2 hinge nuts.

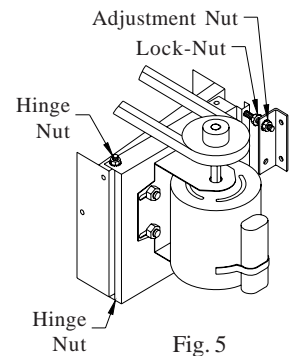


Fig. 5

• **Grease bearings.** The shaft bearings in this unit should be greased once a year with a good grade of ball bearing grease.

• **Clean pads.** A clean pad is more absorbent, efficient and will give more cool air. Annually, or when required, using a garden hose with nozzle, back wash to clean out the openings, then clean off the inlet face any scale or other obstruction to the passages. Slight scraping may be required to remove hardened scale.

- **Pad replacement.** The pads should be replaced after 5 years or before if necessary. To change pads, remove top access panel, remove grill, and disconnect water delivery tube. Remove water distributor holder and lift out media sections. Replace with the same type media. You can purchase them from your dealer.

**IMPORTANT:** In order to get the best performance from your cooling pads, they must be installed properly. If you have purchased a pad with two equal angles, the following instructions can be disregarded. Pads must always be installed with the steeper flute angle sloping down towards the air entering side (Fig. 6). The reason is simple. The steeper angle puts more water on the hot, dry, dirty side of the pad where it is needed most. It also counteracts the tendency of the air to push the water toward the back of the pad.

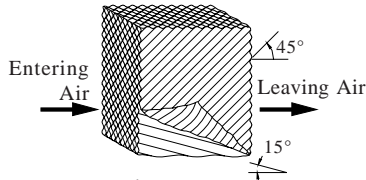


Fig. 6

- **Cleaning pumps.** Cleaning the pumps is necessary once a year at start-up. For your safety, disconnect from power source and unplug pump. Remove the pump from the mount bracket. Remove the base of the pump (Fig. 7). Clean the pump and turn the impeller to ensure free operation. Remove the

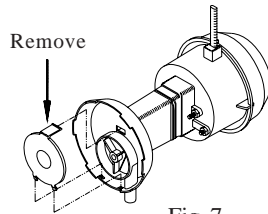


Fig. 7

pump spout and check for any blockage. After cleaning, reinstall the base onto the pump. Reattach the pump to the mount in the cooler to ensure that the pump will not overturn. Do not forget to replace the spout and water delivery tube onto the pump outlet.

**NOTE:** The pump has automatic reset thermal protection. The pump motor will stop if it overheats. The pump will operate normal again after obstruction is cleared.

- **Check bleed-off valve to be sure it is not clogged.**

### Winter Shut Down

- **Drain water.** Always drain all of the water out of the cooler and water supply line when not in use for prolonged periods, and particularly at the end of the season. Keep the water line disconnected from both the unit and water supply so that water will not seep into the line and freeze.

- **Disconnect from power supply when not in use for extended periods of time.**

- **Cover unit.** To protect the life of the finish, a cover for the unit is suggested in extended periods of non use.

By following the operating, installation, and maintenance suggestions as outlined, you can get many years of efficient and satisfactory service from your cooler. In the event additional information is desired, your dealer will be more than glad to assist you in every possible way.

## Wiring Diagrams

### For 1 or 2 HP, 1 Phase Motor

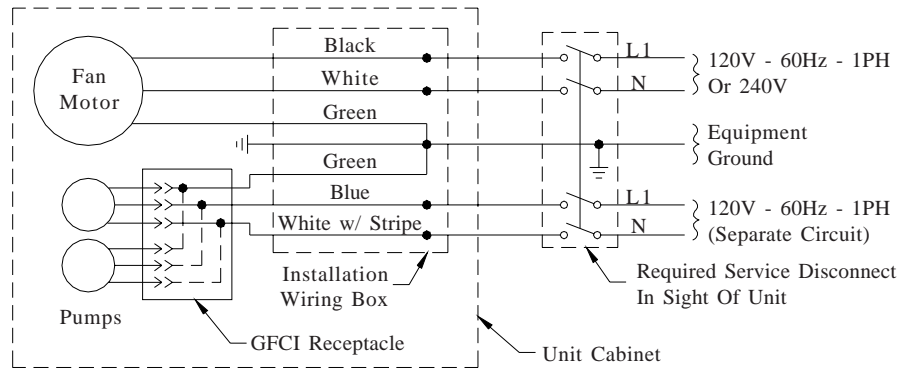


Fig. 8

### For 1 or 2 HP, 3 Phase Motor

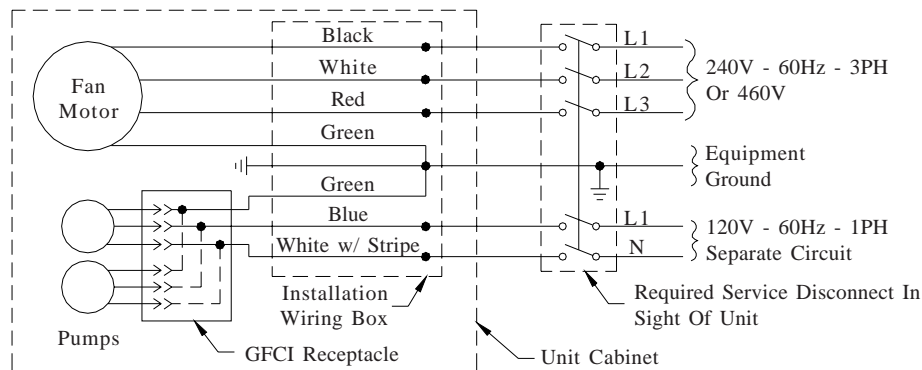


Fig. 9

# Troubleshooting Guide

| <u>Problem</u>                              | <u>Possible Cause</u>  | <u>Remedy</u>   |
|---|--|---|
| Failure to start or no air delivery         | 1. No electrical power to unit <ul style="list-style-type: none"> <li>• Fuse blown</li> <li>• Circuit breaker tripped</li> </ul> | 1. Check power <ul style="list-style-type: none"> <li>• Replace fuse</li> <li>• Reset breaker</li> </ul>                                    |
|   | 2. Belt too loose or tight   | 2. Adjust belt tension  |
|   | 3. Motor overheated <ul style="list-style-type: none"> <li>• Belt too tight</li> <li>• Blower bearings dry</li> </ul>            | 3. Determine cause of overheating <ul style="list-style-type: none"> <li>• Adjust belt tension</li> <li>• Grease blower bearings</li> </ul> |
|   | 4. Motor locked  | 4. Replace motor  |
| Inadequate air delivery with cooler running | 1. Insufficient air exhaust  | 1. Open windows or doors to increase air flow   |
|   | 2. Belt too loose  | 2. Adjust belt tension or replace if needed   |
|   | 3. Pads plugged  | 3. Clean pads   |
|   | 4. Insufficient water flow over pads   | 4. Clean distribution system  |
| Motor cycles on and off                     | 1. Low voltage   | 1. Check voltage  |
|   | 2. Excessive belt tension  | 2. Adjust belt tension  |
|   | 3. Fan shaft tight or locked   | 3. Grease or replace bearings (Disconnect unit)   |
|   | 4. Bearings dry  | 4. Grease bearings  |
|   | 5. Faulty motor  | 5. Replace motor  |

| <u>Problem</u>           | <u>Possible Cause</u>   | <u>Remedy</u>   |
|--------------------------|---|---|
| Musty or unpleasant odor | 1. Stale or stagnate water in cooler  | 1. Drain pan and clean pads   |
|                          | 2. Pads not wetting properly <ul style="list-style-type: none"> <li>• Dist. tube holes clogged</li> <li>• Pump not working properly</li> <li>• Insufficient water flow over pads</li> </ul> | 2. Check water distribution system <ul style="list-style-type: none"> <li>• Clean</li> <li>• Replace or clean pump (Unplug)</li> <li>• Clean water distribution system</li> </ul> |
|                          | 1. Bearings dry   | 1. Grease bearings  |
|                          | 2. Loose parts  | 2. Tighten loose parts  |
| Inadequate cooling       | 1. Inadequate exhaust in building   | 1. Open windows or doors to increase air flow   |
|                          | 2. Pads not wet <ul style="list-style-type: none"> <li>• Pads plugged</li> <li>• Dist. tube holes clogged</li> <li>• Pump not working properly</li> </ul>                                   | 2. Check water distribution system <ul style="list-style-type: none"> <li>• Clean pads</li> <li>• Clean</li> <li>• Replace or clean pump (Unplug)</li> </ul>                      |
|                          | 1. Inadequate exhaust   | 1. Open doors or windows  |
|                          | Excessive humidity in building  |   |

## Limited Warranty

This warranty is extended to the original purchaser of an evaporative cooler installed and used under normal conditions. It does not cover damages incurred through accident, neglect, or abuse by the owner. We do not authorize any person or representative to assume for us any other or different liability in connection with this product.

### Terms And Conditions Of Warranty

Lifetime Limited Coverage on water reservoir against any leakage due to defects in material. From date of purchase, if any original component part fails due to defect in material or factory workmanship only, we will provide the replacement part as follows:

- One year on the cabinet components.
- Two years on the evaporative media.

### Exclusions From The Warranty

We are not responsible for any incidental or consequential damage resulting from any malfunction.

We are not responsible for any damage received from the use of water softeners, chemicals, descale material, plastic wrap, or if a motor of a higher horsepower than what is shown on the serial plate is used in the unit.

We are not responsible for the cost of service calls to diagnose cause of trouble, or labor charge to repair and/or replace parts.

### How To Obtain Service Under This Warranty

Contact the Dealer where you purchased the evaporative cooler. If for any reason you are not satisfied with the response from the dealer, contact the Customer Service Department: 5800 Murray Street, Little Rock, Arkansas 72209. 1-800-643-8341. E-mail: info@championcooler.com, Web: www.championcooler.com.

**This limited warranty applies to original purchaser only**

## General Specifications / Especificaciones Generales

| Model Series<br><i>Serie de Modelo</i> | *Weight (lbs.)<br><i>Peso (libras)</i> |                           | Cabinet Dimensions (in.)<br><i>Dimensiones De La Caja (pulgadas)</i> |                                |                                | Duct Opening (in.)<br><i>Abertura De Ducto (pulgadas)</i> |                         |
|--|--|---------------------------|--|--------------------------------|--------------------------------|---|-------------------------|
|  | Dry<br><i>Seco</i>                     | Operating<br><i>Lleno</i> | Height<br><i>Altura</i>  | Width<br><i>Anchura</i>        | Depth<br><i>Profundidad</i>    | Width<br><i>Anchura</i>                                   | Height<br><i>Altura</i> |
| FAD242                                 | 761                                    | 1041                      | 42 <sup>1</sup> / <sub>8</sub>                                       | 97 <sup>1</sup> / <sub>4</sub> | 60 <sup>1</sup> / <sub>4</sub> | 46  | 46                      |
| FAD248                                 | 789                                    | 1069                      | 52 <sup>1</sup> / <sub>8</sub>                                       | 97 <sup>1</sup> / <sub>4</sub> | 60 <sup>1</sup> / <sub>4</sub> | 52  | 52                      |

\*The weight includes a 2 HP motor. / *El peso total incluye el peso de un motor de 2 C.V.*

## Motor Specifications / Especificaciones Del Motor

| Model<br><i>Modelo</i> | Motor<br><i>Motor</i> | HP<br><i>C.V.</i> | Phase<br><i>Fase</i> | Volts<br><i>Voltios</i> | Shaft (in.)<br><i>Eje (pulgadas)</i> | Motor Pulley<br><i>Polea De Motor</i> | Drive Belt<br><i>Correa</i> |
|------------------------|-----------------------|-------------------|----------------------|-------------------------|--------------------------------------|---------------------------------------|-----------------------------|
| FAD242B111             | 110457                | 1                 | 1                    | 115                     | 5/8                                  | 110316                                | 110212 (4L570)              |
| FAD242B112             | 110457                | 1                 | 1                    | 208-230                 | 5/8                                  | 110316                                | 110212 (4L570)              |
| FAD242B132             | 110462-1              | 1                 | 3                    | 208-230                 | 5/8                                  | 110316                                | 110212 (4L570)              |
| FAD242B134             | 110462-1              | 1                 | 3                    | 460                     | 5/8                                  | 110316                                | 110212 (4L570)              |
| FAD242B211             | 110483                | 2                 | 1                    | 115                     | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD242B212             | 110483                | 2                 | 1                    | 208-230                 | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD242B232             | 110464-1              | 2                 | 3                    | 208-230                 | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD242B234             | 110464-1              | 2                 | 3                    | 460                     | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD248B211             | 110483                | 2                 | 1                    | 115                     | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD248B212             | 110483                | 2                 | 1                    | 208-230                 | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD248B232             | 110464-1              | 2                 | 3                    | 208-230                 | 5/8                                  | 110317                                | 110227 (4L580)              |
| FAD248B234             | 110464-1              | 2                 | 3                    | 460                     | 5/8                                  | 110317                                | 110227 (4L580)              |


NOTE: All motors are single speed. For more information on motors contact your dealer. /

NOTA: Todos los motores son de una velocidad. Si desea más información establece contacto con su comerciante.



# Replacement Parts Drawing / Dibujo De Piezas De Repuesto

FAD242B, FAD248B

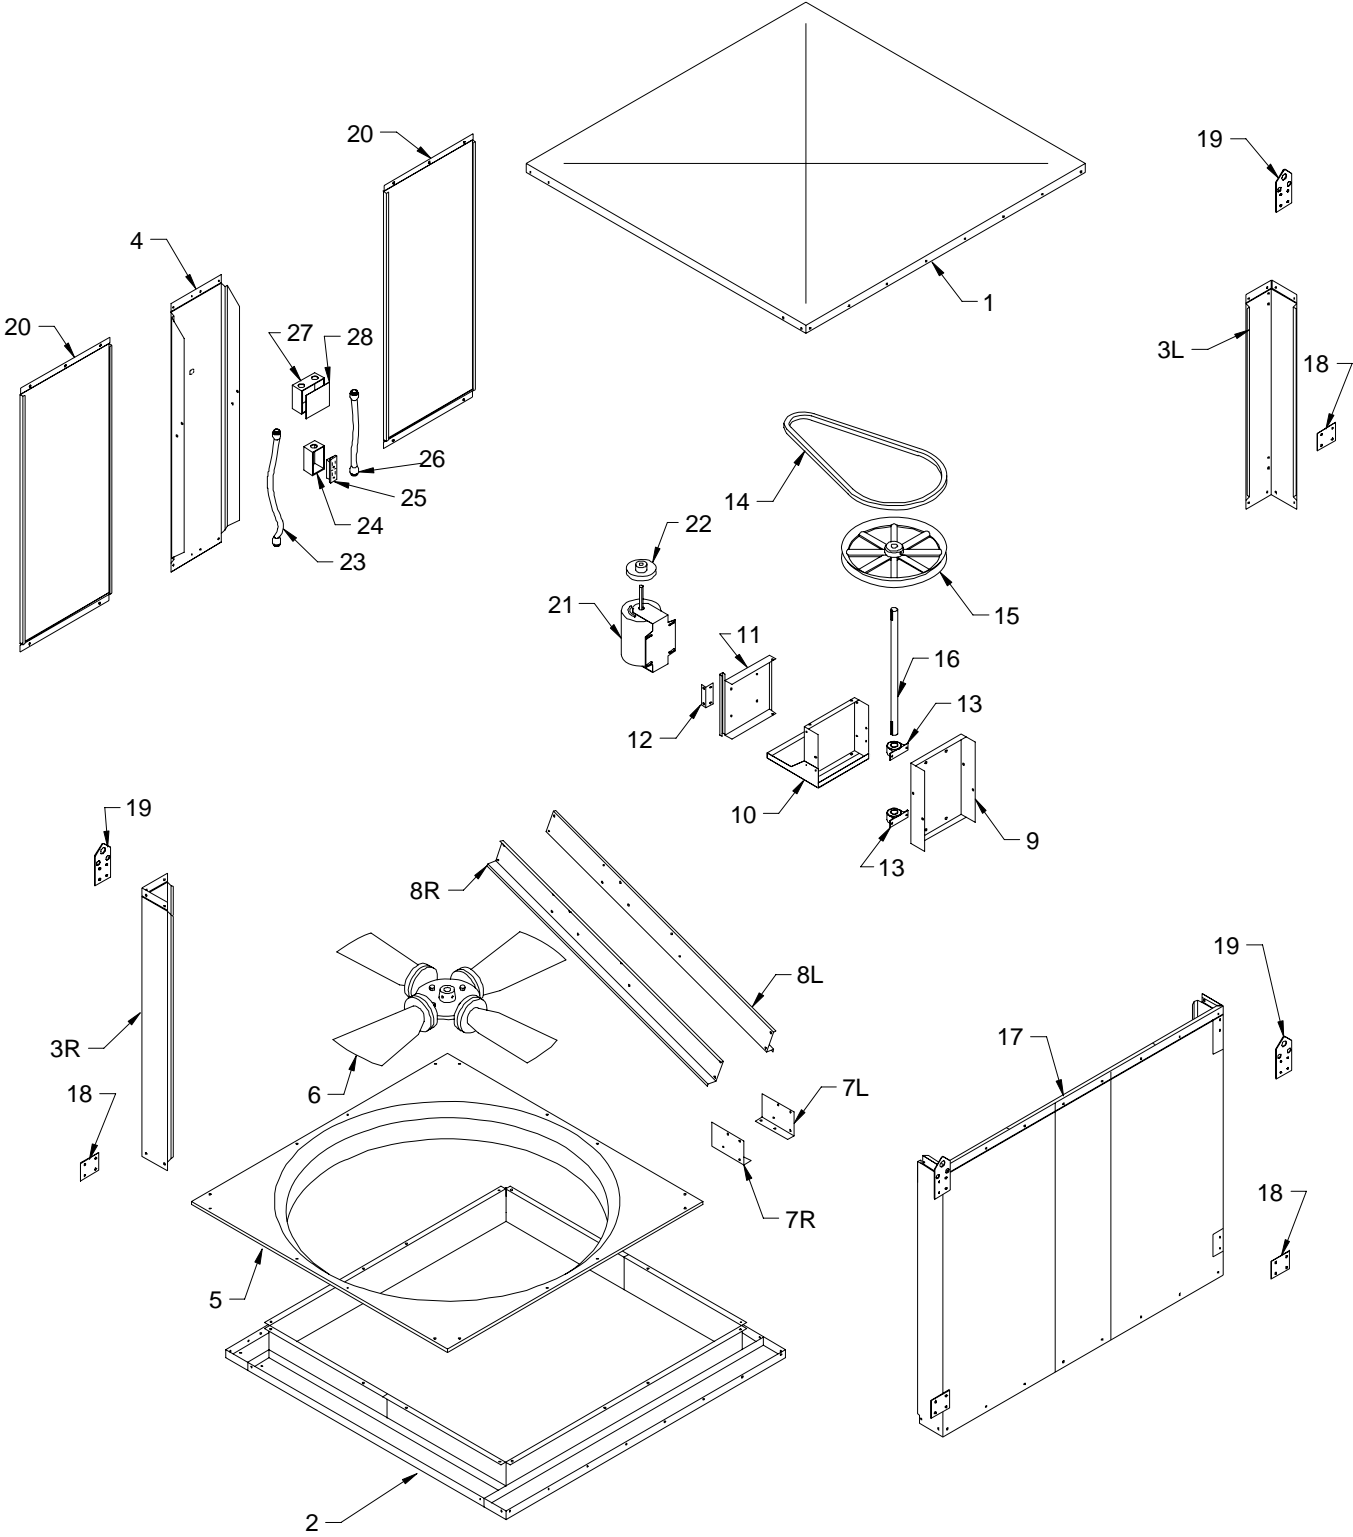



## Replacement Parts List / *Lista De Piezas De Repuesto*

All parts may be ordered from your dealer, but not directly from the factory. Be sure that you furnish the following information on all orders. / *Todas las partes pueden ser pedidas con su concesionario, pero no directamente a la fábrica. Incluya toda la información siguiente con su pedido:*

1. Cooler serial number / *Número de serie de la unidad*
2. Description and part number / *Descripción y número de parte*
3. Cooler size / *Tamaño de la unidad*
4. Date of purchase / *Fecha de compra*

Failure to supply all of this information will delay your order. / *El no proporcionar toda esta información resultará en una demora.*

| <b>No.</b> | <b><u>N°</u> Description / <u>Descripción</u></b>                                       | <b><u>FAD242B</u></b> | <b><u>FAD248B</u></b> |
|------------|---|-----------------------|-----------------------|
| 1.         | Top, Cabinet / <i>Tapa De La Caja</i> -----   | 216117-003            | 216117-003            |
| 2.         | Bottom, Cabinet / <i>Base De La Caja</i> -----  | 316117-008            | 316117-012            |
| 3R.        | Corner Post, Right / <i>Poste De Esquina, Derecha</i> -----                             | 318117-026            | 318117-033            |
| 3L.        | Corner Post, Left / <i>Poste De Esquina, Izquierda</i> -----                            | 318117-027            | 318117-032            |
| 4.         | Divider Channel / <i>Panel Divisora</i> -----   | 218117-028            | 218117-034            |
| 5.         | Venturi Plate / <i>Venturi</i> -----  | 216117-011            | 216117-015            |
| 6.         | Fan Blade / <i>Palas del Ventilador</i> -----   | 110841                | 110842                |
| 7R.        | Bottom Connect Bracket, Right / <i>Abrazadera Del Conectar De Abajo, Derecha</i> -----  | 214109-004            | 214109-008            |
| 7L.        | Bottom Connect Bracket, Left / <i>Abrazadera Del Conectar De Abajo, Izquierda</i> ----- | 214109-011            | 214109-010            |
| 8R.        | Drive Channel, Right / <i>Soporte Para El Sistema De Transmisión, Derecha</i> -----     | 214109-005            | 214109-005            |
| 8L.        | Drive Channel, Left / <i>Soporte Para El Sistema De Transmisión, Izquierda</i> -----    | 214109-003            | 214109-003            |
| 9.         | Bearing Mount / <i>Soporte Para Los Cojinetes</i> -----                                 | 214109-009            | 214109-009            |
| 10.        | Motor Mount / <i>Montura Del Motor</i> -----  | 314109-006            | 314109-006            |
| 11.        | Motor Mount Adjustment Plate / <i>Placa Ajustable Del Montura Del Motor</i> -----       | 214109-007            | 214109-007            |
| 12.        | Belt Adjustment Support Angle / <i>Ángulo De Soporte Para Ajustar El Correa</i> -----   | 211101-001            | 211101-001            |
| 13.        | Bearings, Fan Blade / <i>Cojinetes Del Eje Del Ventilador</i> -----                     | 110355                | 110355                |
| 14.        | Drive Belt / <i>Correa</i> -----  | *                     | *                     |
| 15.        | Pulley, Fan / <i>Polea Del Ventilador</i> -----   | 110282                | 110282                |
| 16.        | Shaft, Fan / <i>Eje Del Ventilador</i> -----  | 110156                | 110156                |
| 17.        | Front Panel / <i>Panel Del Frente</i> -----   | 318117-024            | 318117-030            |
| 18.        | Connect Bracket / <i>Abrazadera Del Conectar</i> -----                                  | 214120-001            | 214120-001            |
| 19.        | Lift Bracket / <i>Soporte De Levantamiento</i> -----                                    | 212101-001            | 212101-001            |
| 20.        | Inspection Panel / <i>Panel De Inspección</i> -----                                     | 220116-008            | 220116-009            |
| 21.        | Motor / <i>Motor</i> -----  | *                     | *                     |
| 22.        | Pulley, Motor / <i>Polea Del Motor</i> -----  | *                     | *                     |
| 23.        | Electrical Conduit / <i>Conducto Eléctrico</i> -----                                    | 110816                | 110816                |
| 24.        | Pump Receptacle Box And Cover / <i>Caja De Empalme Y Cubierta Para Las Bombas</i> ----- | 110821                | 110821                |
| 25.        | GFCI Receptacle / <i>Receptáculo GFCI</i> -----   | 110818                | 110818                |
| 26.        | Liquid Tight Non-Metalic connector / <i>Conector Estanco De No Metálico</i> -----       | 110817                | 110817                |
| 27.        | Power Supply Box / <i>Caja De Empalme Principal</i> -----                               | 110815                | 110815                |
| 28.        | Cover, Power Supply Box / <i>Cubierta De La Caja De Empalme</i> -----                   | 110815-1              | 110815-1              |


\* See motor specification table. / *Vea la tabla de especificaciones del motor.*

NOTE: Standard hardware items may be purchased from your local hardware store.

NOTA: *Artículos de uso corriente pueden comprarse en la ferretería de su localidad.*

# Replacement Parts Drawing / Dibujo De Piezas De Repuesto

FAD242W8, FAD248W8

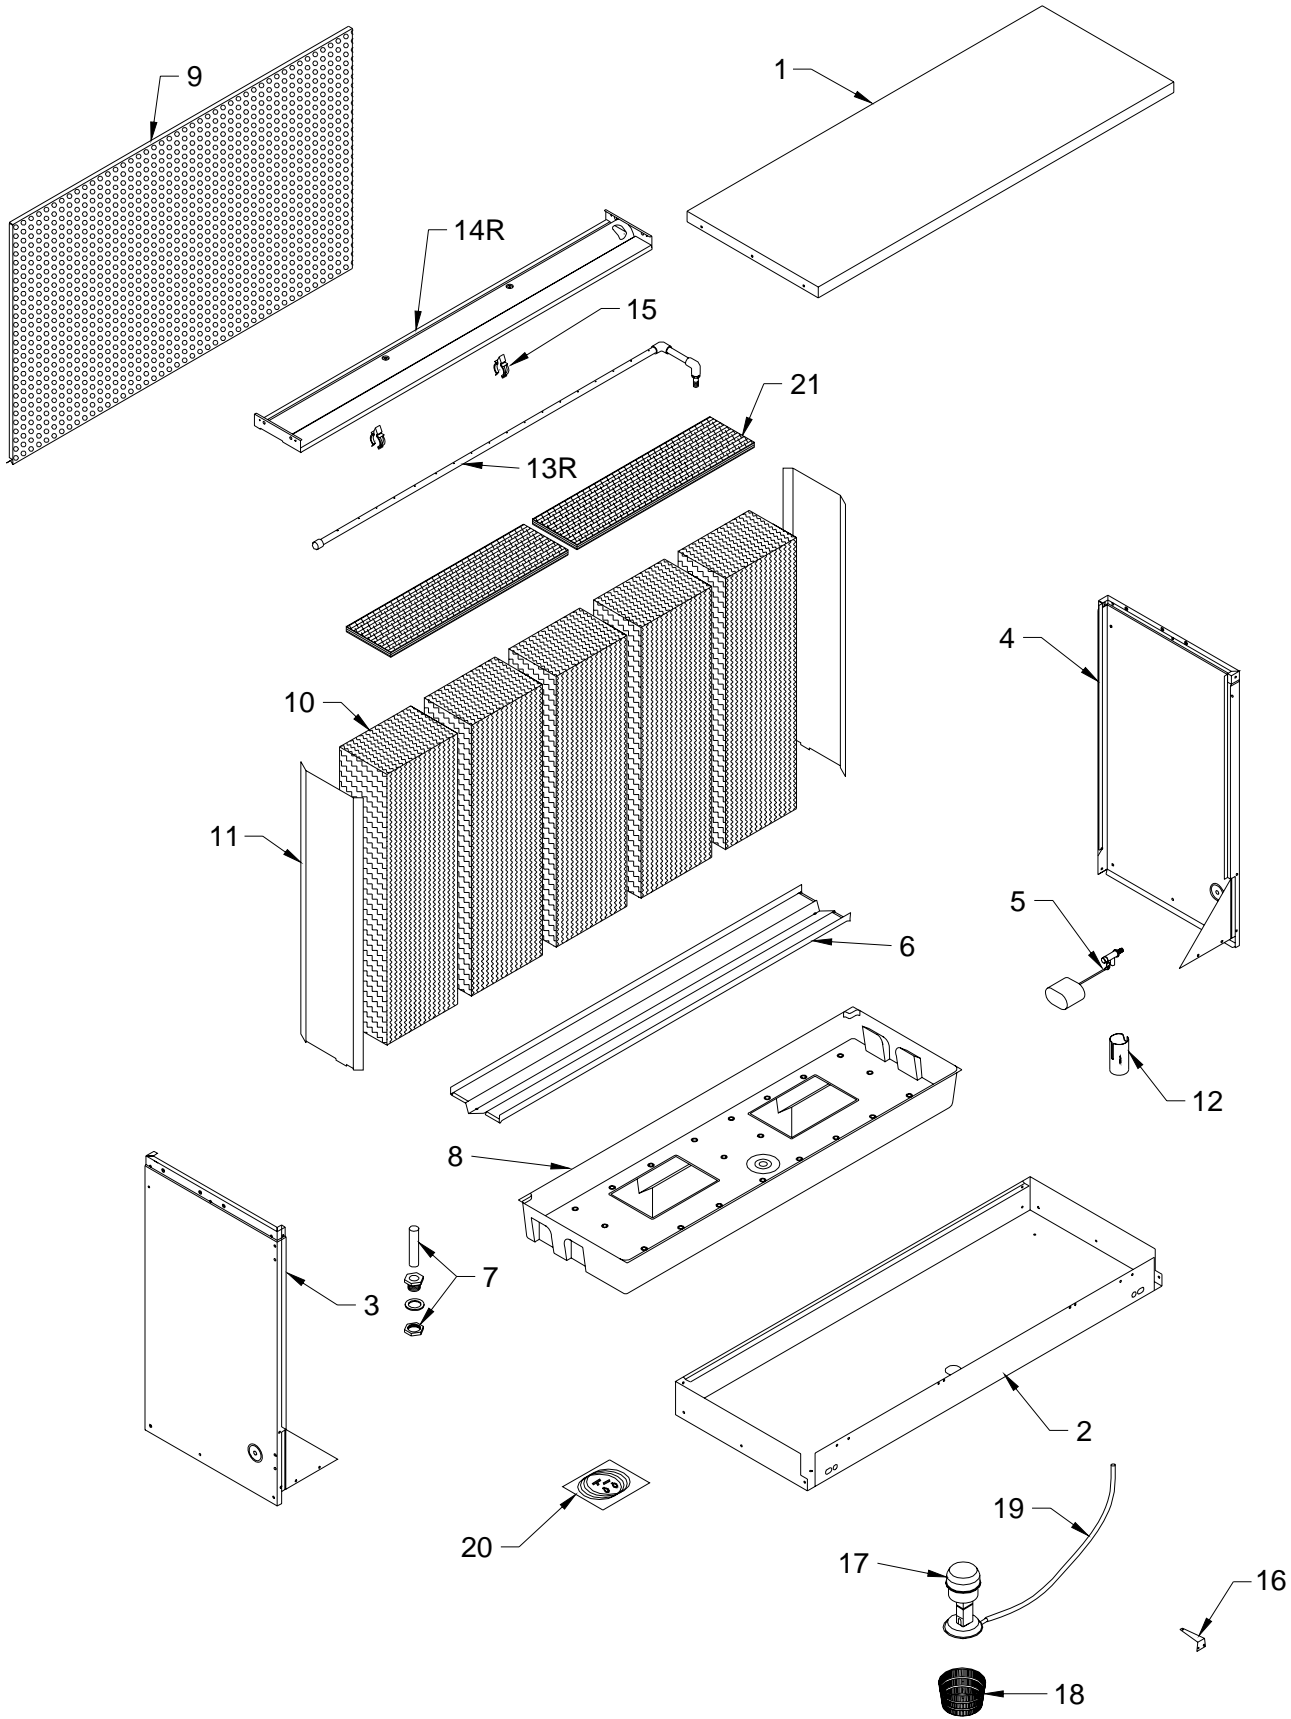

## Replacement Parts List / Lista De Piezas De Repuesto

All parts may be ordered from your dealer, but not directly from the factory. Be sure that you furnish the following information on all orders. / Todas las partes pueden ser pedidas con su concesionario, pero no directamente a la fábrica. Incluya toda la información siguiente con su pedido:

1. Cooler serial number / Número de serie de la unidad
2. Description and part number / Descripción y número de parte
3. Cooler size / Tamaño de la unidad
4. Date of purchase / Fecha de compra

Failure to supply all of this information will delay your order. / El no proporcionar toda esta información resultará en una demora.

| No.<br>N° | <u>Description / Descripción</u>   | <u>FAD242W8</u> | <u>FAD248W8</u> |
|-----------|--|-----------------|-----------------|
| 1.        | Top Access Panel / Panel Superior De Acceso -----  | 218116-030      | 218116-030      |
| 2.        | Bottom, Cabinet / Base De La Caja -----  | 218116-031      | 218116-031      |
| 3.        | Side Panel, Right / Panel Del Lado, Derecha -----  | 318116-028      | 318116-047      |
| 4.        | Side Panel, Left / Panel Del Lado, Izquierda -----   | 318116-027      | 318116-046      |
| 5.        | Float Valve / Flotador -----   | FL 3/8          | FL 3/8          |
| 6.        | Support, Media / Soporte Para El Medio Evaporativo -----   | 218116-029      | 218116-029      |
| 7.        | Over Flow Assembly / Montaje De Desagüe -----  | 3OA-2           | 3OA-2           |
| 8.        | Water Reservoir / Bandeja Acumuladora De Agua -----  | 281036          | 281036          |
| 9.        | Perforated Panel / Parrilla Perforada -----  | 218126-005      | 218126-006      |
| 10.       | Evaporative Media / Medio Evaporativo -----  | 110115          | 110116          |
| 11.       | Media Shield / Pantalla Protectora Para El Medio Evaporativo -----                                     | 281026-011      | 281026-012      |
| 12.       | Float Shield / Pantalla Protectora Del Flotador -----  | 281005-001      | 281005-001      |
| 13R.      | Water Distributor Assembly, Right (Shown) / Sistema Del Distribuidor De Agua, Derecho (Mostrado) ----- | 3D-28R          | 3D-28R          |
| 13L.      | Water Distributor Assembly, Left / Sistema Del Distribuidor De Agua, Izquierdo -----                   | 3D-28L          | 3D-28L          |
| 14R.      | Water Distributor Housing, Right (Shown) / Caja Del Distribuidor De Agua, Derecho (Mostrado) -----     | 322140-043      | 322140-043      |
| 14L.      | Water Distributor Housing, Left / Caja Del Distribuidor De Agua, Izquierdo -----                       | 322140-039      | 322140-039      |
| 15.       | Water Distributor Tube Clamp / Abrazadera De Tubo Del Distribuidor De Agua -----                       | 110591          | 110591          |
| 16.       | Pump Mount / Montura De La Bomba -----   | 218122-004      | 218122-004      |
| 17.       | Pump Assembly / Bomba -----  | 110467          | 110467          |
| 18.       | Pump Screen / Malla Para La Bomba -----  | 281001-001      | 281001-001      |
| 19.       | Tube, Water Delivery / Tubo De Agua -----  | 110717          | 110717          |
| 20.       | Bleed-Off Kit / Equipo De La Válvula De Desahogo -----   | 310587          | 310587          |
| 21.       | Polyester Pad / Filtro De Poliester -----  | 110119-4        | 110119-4        |

### Lea y Conserve Estas instrucciones

### Reglas De Seguridad

1. Lea las instrucciones con cuidado.
2. Desconecte todos los servicios eléctricos que serán usados en esta unidad antes de instalar el enfriador.
3. Las conexiones eléctricas deben ser hechas por un electricista competente, para que todo el cableado eléctrico cumpla con los requisitos establecidos en su localidad.
4. Para una máxima y segura precaución, debe estar muy seguro que la caja del enfriador está conectada con la tierra.
5. El enfriador debe ser conectado con el propio voltaje, corriente alterna y ciclos, lo que se encuentran en la placa de especificaciones de la bomba y del motor.

6. Debe instalar la unidad a lo menos de 10 pies arriba del piso.

7. Siempre **CORTE LA CORRIENTE** antes de realizar cualquier labor de mantenimiento.

### Operación

Para que no salga aire caliente al principio, prenda sólo la bomba durante unos cuantos minutos; luego prenda también el motor del ventilador.

Su enfriador puede ser utilizado sin agua para proporcionar ventilación solamente. Cuando esté fresco (por ejemplo, de noche) o cuando la humedad es alta, la bomba de agua puede ser apagada.