


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# GE TFX27FKC Owner's Manual

[Shop genuine replacement parts for GE TFX27FKC](#)

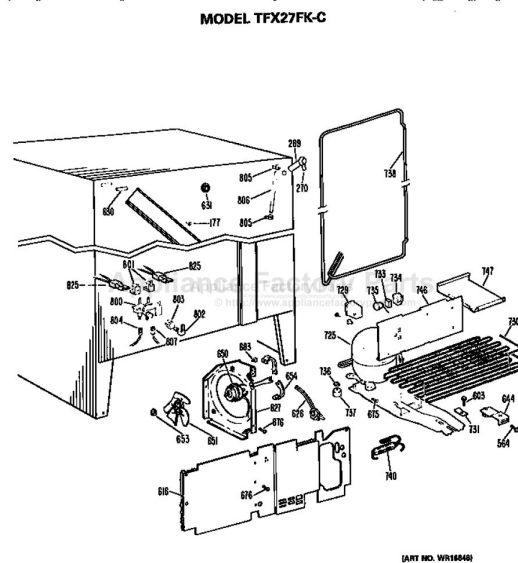

[Find Your GE Refrigerator Parts - Select From 27446 Models](#)

----- Manual continues below part list -----

## Available Replacement Parts for GE TFX27FKC

<a href="#">WR57X10051</a>	WATER VALVE
<a href="#">WR2X4550</a>	DRIVE CUP

# How to get the best from **Your Refrigerator**

## Contents

Appliance Registration	2	Water Supply to Icemaker	4
Base Grille	4	Light Bulb Replacement	19
Care and Cleaning	18	Model and Serial Numbers	2
Condenser	18	Porta-Bins	10, 17
Diagnostic Codes	6-9	Problem Solver	20-22
Drawers and Covers	15, 16	Refreshment Center	10
Electronic Monitor	6-9	Repair Service	23
Door Alarm	7	Safety Instructions	3
System Check-Reset	7, 8	Shelves	17
Warm Temperature	7	Temperature Controls	5
Energy Saver System	5	Vacation & Moving Tips	19
Energy-Saving Tips	2	Warranty	Back Cover
Food Saver System	15	Water Filter	19
Food Storage Suggestions	14		
Storage Drawers	15, 16		
Storage Times	14		
Ice Dispenser	10-13		
Icemaker	10-13		
Installation	3, 4		
Adapter Plug	4		
Adjustable Rollers	4		
Clearances	4		
Electrical Requirements	3, 4		
Extension Cord	4		
Grounding	3		
Location	4		

Use and Care of  
model TFX27F  
with  
Refreshment  
Center,  
Electronic  
Monitor and  
Diagnostic  
System



**Your Direct Line to General Electric**  
The GE Answer Center® 800.626.2000

GENERAL  ELECTRIC

49-6543

# Help us help you...

## Read this book carefully.

It is intended to help you operate and maintain your new refrigerator properly.

Keep it handy for answers to your questions.

If you don't understand something or need more help, write (include your phone number):

Consumer Affairs  
General Electric Company  
Appliance Park  
Louisville, KY 40225

## Write down the model and serial numbers.

You'll see them on a label at the bottom, just inside the fresh food compartment door.

These numbers are also on the Consumer Product Ownership Registration Card that came with your refrigerator.

Before sending in this card, please write these numbers here:

---

Model Number

---

Serial Number

Use these numbers in any correspondence or service calls concerning your refrigerator.

**If you received a damaged refrigerator**, immediately contact the dealer (or builder) that sold you the refrigerator.

## Save time and money.

**Before you request service**, check the Problem Solver on pages 20 through 22. It lists causes of minor operating problems that you can correct yourself.

## Energy-saving tips

- Location of your refrigerator is important. Avoid locating it next to your range, a heating vent or where sun will shine directly on it.
- Don't open the doors more often than necessary.
- Close the doors as soon as possible, particularly in hot, humid weather.
- Be sure the doors are closed tightly. Before leaving the house or retiring for the night, check to be sure the doors haven't been left open accidentally.
- Store only those foods requiring refrigeration in your refrigerator.
- Wipe all moisture from bottles and cartons before putting them in the refrigerator.
- Keep all foods covered to reduce moisture buildup inside the refrigerator.
- If you turn controls to the coldest position for quick chilling or freezing, be sure to turn them back to regular settings.
- Don't overcrowd your refrigerator. Overcrowding can require extra electrical energy to keep everything cool.

# IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

**WARNING**—when using this appliance, always exercise basic safety precautions, including the following:

- Use this appliance only for its intended purpose as described in this Use and Care Book.
- This refrigerator must be properly installed in accordance with the Installation Instructions before it is used. See grounding instructions below and on page 4.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either the plug or connector end.
- When moving your refrigerator away from the wall, be careful not to roll over or damage the power cord.
- After your refrigerator is in operation, do not touch the cold surfaces, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.

- Do not place fingers or hands on the automatic icemaking mechanism while the refrigerator is plugged in. This will prevent contact with the moving parts of the ejector mechanism, or with the heating element that releases the cubes.

- Do not allow anyone to climb, sit, stand or hang on the Refreshment Center Compartment door (see page 10). They could damage the refrigerator and maybe even tip it over, causing severe personal injury.

- Don't refreeze frozen foods which have thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No. 69 says:

"... You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold—below 40°F.

"... Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, get rid of it. The food may be dangerous to eat.

"Even partial thawing and refreezing reduce the eating quality of foods,

particularly fruits, vegetables and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible to save as much of their eating quality as you can."

- If your old refrigerator is still around the house but not in use, be sure to remove the doors. This will reduce the possibility of danger to children.

- Unplug your refrigerator.

A. Before making any repairs.

Note: We strongly recommend that any servicing be performed by a qualified individual.

B. Before cleaning.

C. Before replacing a burned-out light bulb, the refrigerator should be unplugged in order to avoid contact with a live wire filament. (A burned-out light bulb may break when being replaced.)

Note: Turning control to OFF position does not remove power to the light circuit.

- Do not operate your refrigerator in the presence of explosive fumes.


## SAVE THESE INSTRUCTIONS

### Installation Requirements — IMPORTANT: Please read carefully.

#### How to connect electricity

For personal safety, this appliance must be properly grounded.

The power cord of this appliance is equipped with a grounding plug which mates with a standard grounded wall outlet (Fig. 1) to minimize the possibility of electric shock hazard from this appliance.

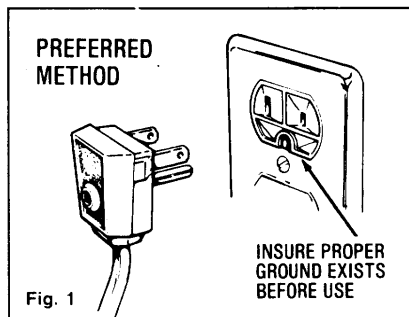

Have the wall outlet checked by a qualified electrician to make sure the outlet is properly grounded.

Where a standard two-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded three-prong wall outlet.


**DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD (GROUND) PRONG FROM THE POWER CORD.**

(continued next page)

# Installation Requirements (continued)—IMPORTANT... Please Read Carefully

## Use of Adapter Plug

Because of potential safety hazards under certain conditions, we strongly recommend against use of an adapter plug. However, if you still elect to use an adapter, where local codes permit, a **TEMPORARY CONNECTION** may be made to a properly grounded two-prong wall outlet by use of a UL listed adapter (Fig. 2) available at most local hardware stores.

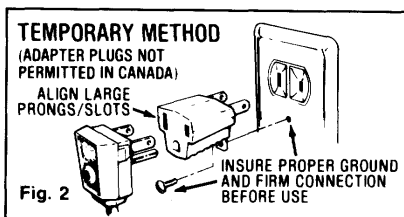

The larger slot in the adapter must be aligned with the larger slot in the wall outlet to provide proper polarity in the connection of the power cord.

**CAUTION:** Attaching adapter ground terminal to wall outlet cover screw does not ground the appliance unless cover screw is metal, and not insulated, and wall outlet is grounded through house wiring. You should have the circuit checked by a qualified electrician to make sure the outlet is properly grounded.

**When disconnecting the power cord from the adapter,** always hold the adapter with one hand. If this is not done, the adapter ground terminal is very likely to break with repeated use.

**Should the adapter ground terminal break, DO NOT USE the appliance until a proper ground has again been established.**

## Use of Extension Cords

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord. However, if you still elect to use an extension cord, it is absolutely necessary that it be a UL listed 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the

cord be 15 amperes (minimum) and 120 volts. Such extension cords are obtainable through your local service organization.

**The refrigerator should always be plugged into its own individual electrical outlet—** (115 volt, 60 Hertz, single phase AC). This is recommended for best performance and to prevent overloading house wiring circuits, which could cause a fire hazard from overheating wires.

## Refrigerator Location

**Do not install refrigerator where temperature will go below 60°F.** because it will not run often enough to maintain proper temperatures.

**Do install it on a floor strong enough to support a fully loaded refrigerator.**

Also see Energy-Saving Tips regarding location.

## Clearances

Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections:

Sides .....	5/8"
Top .....	0" (If built in, allow 7/8" at the top for hinge covers.)
Back .....	1"

Allow the following door clearance:


Refreshment Center Side .....	3 3/8"
Freezer Side .....	1 3/4"

## Water Supply to Icemaker

You will need to connect your icemaker to a cold water line. A water supply kit containing copper tubing, shut-off valve, fittings and instructions is available at extra cost from your dealer. There should be sufficient tubing for the icemaker from the cold water supply to allow you to move the refrigerator out from the wall several feet (approximately 3 coils of 1/4-inch copper tubing that is at least 10 inches in diameter).


## Rollers

**Adjustable rollers,** which enable you to move your refrigerator away from the wall for cleaning, are located behind the base grille. These rollers should be set so that the refrigerator is firmly positioned on the floor and the front is raised just enough that the doors close easily when opened about halfway. Specially designed door hinges lift both doors slightly when opened. The force of gravity then helps close the door automatically.

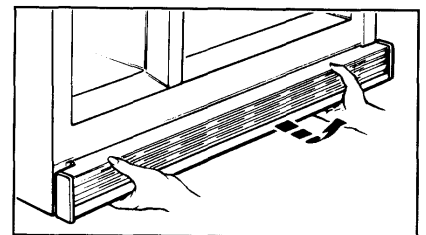


**To adjust rollers,** remove the base grille by grasping it at the bottom and pulling it out.

**Turn roller adjusting screws** clockwise to raise refrigerator, counterclockwise to lower it. Use adjustable wrench (3/8" hex head bolt) or pliers.

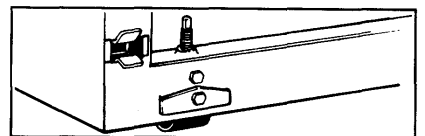


When adjusting front rollers for proper door closure, it is recommended that the bottom front edge of the cabinet be approximately 5/8" from the floor.

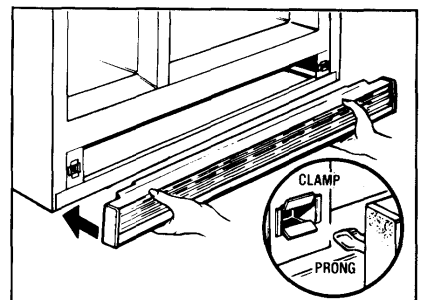

**To replace base grille,** align prongs on back of grille with clamps in cabinet and push forward until grille snaps into place.

# Operating Your Refrigerator

## Set the Temperature Controls

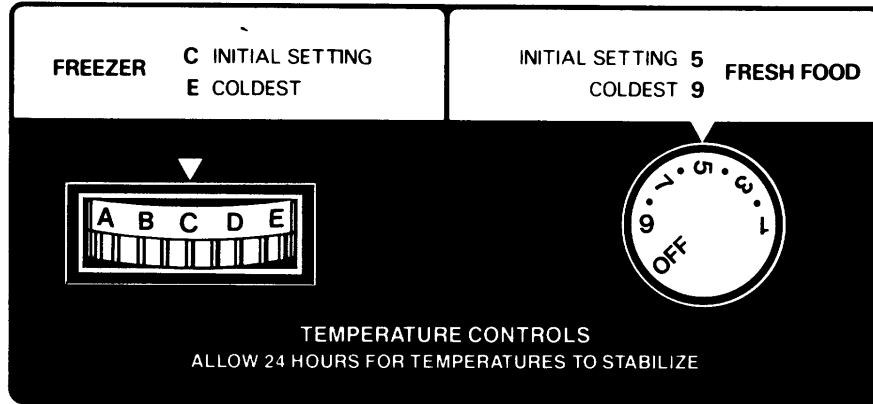

Your refrigerator has two controls that let you regulate the temperature in the fresh food and freezer compartments.

**INITIALLY, set the FRESH FOOD control at 5 and the FREEZER control at C.**

For colder or warmer temperatures, adjust the desired compartment control one letter or number at a time.

### IMPORTANT

**When your refrigerator is first installed, allow 24 hours for stabilization to normal operating temperature before filling it with large amounts of fresh or frozen foods.**

Note: Turning the fresh food control to "OFF" stops cooling in BOTH compartments—fresh food AND freezer—but does not shut off power to the refrigerator.

## How to Test Temperatures

**Use the milk test for the fresh food compartment.** Place a container of milk on the top shelf in the fresh food compartment. Check it a day later. If the milk is too warm or too cold, adjust the temperature controls.

**Use the ice cream test for the freezer compartment.** Place a container of ice cream in the center of the freezer compartment. Check it after a day. If it's too hard or too soft, adjust the temperature controls.

## If you turn your household thermostat below 60°F. at night

... you may want to turn the *lettered* control one step colder, as from "C" to "D." Cooler temperatures in the house may cause the compressor to operate less frequently, thus allowing the freezer compartment to warm somewhat. To protect your frozen food supply, leave your *lettered* setting at this colder setting for the entire winter or for whatever period of time you are turning down your thermostat. This is especially important when the thermostat is turned down for an extended period.

This change should have no effect on your fresh food compartment. However, if freezing occurs, turn the numbered control one step warmer, as from "5" to "4."

When you stop turning the thermostat down, turn temperature controls back to their regular settings.

## Automatic Energy Saver System

You won't find an "energy saver" switch on this refrigerator.

Warm liquid from the refrigerator's condenser is automatically circulated around the front edge of the freezer compartment to help keep moisture from forming on the outside of the refrigerator during humid weather.


Many refrigerators use special electric heaters. This refrigerator needs none. That's why there is no "energy saver" switch...there's no need for it.

## No Defrosting

It is not necessary to defrost the freezer or fresh food compartments. Your refrigerator is designed and equipped to defrost itself automatically.

# Electronic Monitor & Diagnostic System

It keeps an eye on things for you.

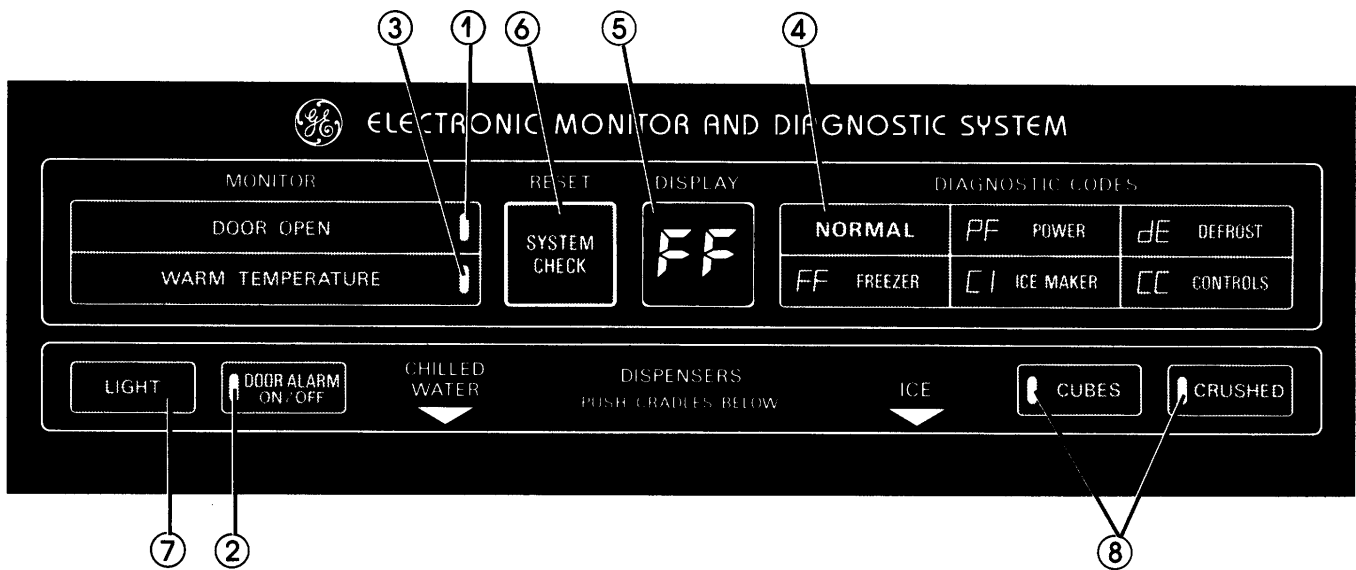

① Red signal light flashes to tell you when either door is open.

② Green signal light tells you that the Door Alarm beeper has been set to sound after either door has been open 30 seconds.

③ Red signal light tells you when freezer foodkeeping temperature is above normal.

④ Green lighted word **NORMAL** indicates that no failure has been detected by the diagnostic system.

⑤ Flashing green diagnostic codes in the display warn you when:

**FF** frozen foods should be checked.

**PF** power has been interrupted.

**CI** icemaker may not be operating properly.

**dE** defrost system has failed.

**CC** freezer control may need to be set for a colder temperature.

What these codes mean—and what to do when they appear—is summarized on the inside of the freezer compartment door and explained more thoroughly on the following pages.

⑥ System Check pad puts a review of the electronic diagnosis of five coded functions at your fingertip and also allows you to erase codes from display.

⑦ Electronic control allows you to turn night light in water-and-ice dispenser on and off.

⑧ Electronic control allows you to select ice cubes or crushed ice, and green signal light confirms your choice.

## When your refrigerator is first plugged in...

All panel lights come on for five seconds, a beep sounds, and lights go off except as follows:

- **PF** flashes in the display. Touch **SYSTEM CHECK-RESET** pad to erase it.
- Green word **NORMAL** glows.
- Red **WARM TEMPERATURE** light glows if freezer compartment temperature is higher than normal. It goes off when proper foodkeeping temperature is reached.
- Door alarm beeper is activated and green light on **DOOR ALARM** pad glows.
- **CRUSHED** ice selection light glows.
- Red **DOOR OPEN** light flashes if either door is open, goes out when doors are shut.
- Night light in water-and-ice dispenser is off.

## How to Set the Door Alarm

You don't have to set the visual alarm. As long as either door is open, the red DOOR OPEN signal light flashes.



If the green signal light on the DOOR ALARM pad is glowing, the beeper alarm is set. If it's not, touch the pad to turn it on.



If either door is open for more than 30 seconds, a recurring beep sounds.

The light goes out and the beeping stops when you close the door.

There are times when you'll want the Door Alarm beeper turned off. When you're rearranging a lot of food, for example. Just touch the pad. The green light will go out and the beeping will stop.

Deactivating the Door Alarm beeper does not turn the red DOOR OPEN light off—it keeps flashing until the door is closed.

## Why the Red Warm Temperature Light Glows.


At first, it's probably because your newly installed refrigerator hasn't completely cooled down yet. Wait a few hours for it to cool, and then the light will go out.




From then on, the red light will glow whenever temperatures inside get too high for proper food storage. If this happens, open the doors only when absolutely necessary, and close them as quickly as possible.

As soon as inside temperatures return to normal, the light goes out.

## How the Electronic Monitor and Diagnostic System Works.

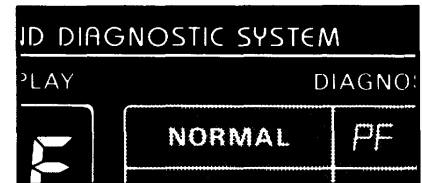

The word NORMAL is lighted in green except when a failure has been detected.

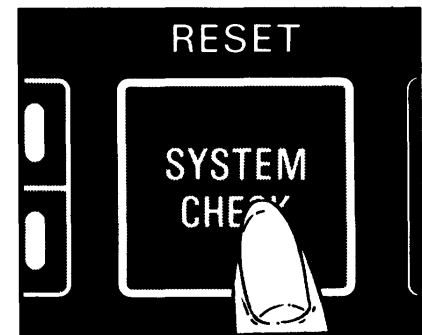

The SYSTEM CHECK-RESET pad has two functions:

1. You can touch the SYSTEM CHECK-RESET pad and get a review of the electronic diagnostic codes in order of their priority.
2. You can touch the SYSTEM CHECK-RESET pad to erase three flashing codes immediately and two codes after the condition that caused them to flash has been corrected (see page 8).

(continued next page)

# Electronic Monitor & Diagnostic System (continued)


The Electronic Monitor and Diagnostic System alerts you when something starts to go wrong.

If a diagnostic code appears on the display, something needs special attention. To get your attention, the display code flashes until you erase it. The first 6 flashes are accompanied by beeps.

If more than one coded function requires attention at the same time, the one with the highest priority will be displayed first.


Pressing the SYSTEM CHECK-RESET pad will evaluate all other coded functions. If the NORMAL display is lit during the displaying of a code, that function is operating properly.

Pressing the SYSTEM CHECK-RESET pad will erase three codes immediately—*PF*, *CI* and *CC*. The *DE* and *FF* codes can only be erased by touching the SYSTEM CHECK-RESET pad *after* the condition that caused the code to flash has been corrected.

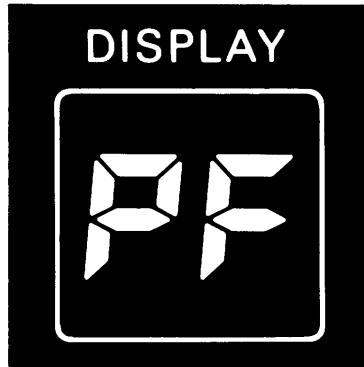


This flashing code tells you the power to the refrigerator has been interrupted for more than 2 seconds. Check the condition of food in both the fresh food and freezer compartments. Touch SYSTEM CHECK-RESET pad to erase code.


There is no fault with the refrigerator when *PF* code flashes.

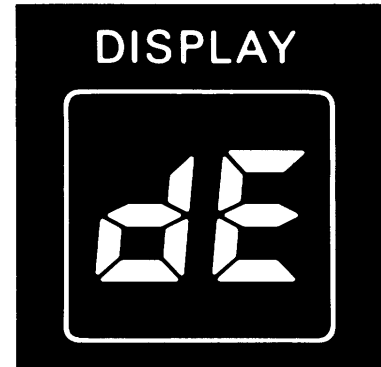


This flashing code tells you something's wrong with the defrost system—keep doors closed to retain cold and call for service. Code flashes until problem is corrected.

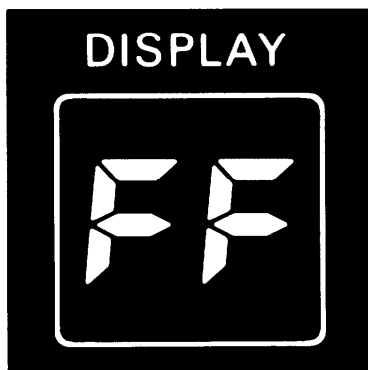

This flashing code tells you to check your frozen food. Has any of it started to thaw? A package may be holding the freezer compartment door open. Don't open the door more often than absolutely necessary while this code is displayed. Touching the SYSTEM CHECK-RESET pad after the freezer compartment temperature has returned to normal will erase the code.

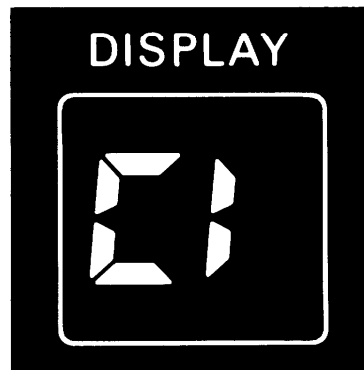

This flashing code tells you to check the automatic icemaker. Ice clumps in the storage bin may have stalled the icemaker. Follow corrective measures described on page 21. If water supply to the icemaker is not connected or not turned on, make sure manual icemaker switch is in the OFF position (see page 11). Code stops flashing when problem is corrected or SYSTEM CHECK-RESET pad is touched.

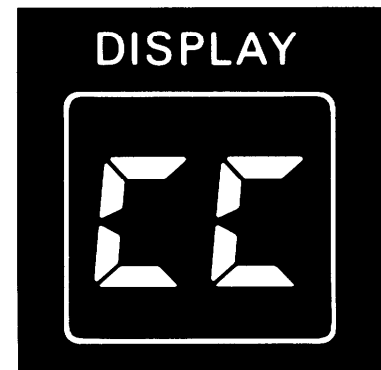

This flashing code tells you to check temperature controls and adjust them if necessary. (See directions on page 5.) Touch SYSTEM CHECK-RESET pad to erase code. If code reappears after 4 hours, call for service.

# Signal Lights and Diagnostic Codes

What they mean, and what to do when they alert you, is summarized on this panel on the inside of the freezer compartment door.

**ELECTRONIC MONITOR AND DIAGNOSTIC SYSTEM**

DISPLAY	EXPLANATION / RECOMMENDED ACTION	
<b>NORMAL</b>	ALL SYSTEMS OPERATING NORMALLY <div style="border: 1px solid black; display: inline-block; padding: 2px; margin: 5px;">             RESET SYSTEM CHECK           </div>	TO CHECK SYSTEM .... TOUCH SYSTEM CHECK .... LOOK FOR "NORMAL" READOUT DURING EACH CODE DISPLAY
<b>DOOR OPEN</b>	DOORS NOT COMPLETELY CLOSED .... CHECK FOR OPEN BINS .... PACKAGES MAY BE BLOCKING DOOR	
<b>WARM TEMPERATURE</b>	THIS MAY OCCUR WHEN REFRIGERATOR IS FIRST TURNED ON OR DOORS LEFT OPEN TOO LONG	
<b>FF</b> <b>FREEZER</b>	CHECK FOR THAWING OF FROZEN FOODS .... LIMIT DOOR OPENINGS TO RETAIN COLD .... CALL FOR SERVICE IF NECESSARY	
<b>PF</b> <b>POWER</b>	POWER HAS BEEN OFF FOR SOME PERIOD OF TIME .... CHECK CONDITION OF FOOD .... TOUCH RESET	
<b>CI</b> <b>ICE MAKER</b>	CHECK ICE BIN FOR BLOCKAGE .... TOUCH RESET .... IF CODE APPEARS AGAIN, CALL FOR SERVICE	
<b>dE</b> <b>DEFROST</b>	LIMIT DOOR OPENINGS TO RETAIN COLD .... CALL FOR SERVICE	
<b>CC</b> <b>CONTROLS</b>	CHECK TEMPERATURE CONTROLS .... ADJUST IF NECESSARY .... TOUCH RESET .... IF CODE REAPPEARS WITHIN 4 HRS, CALL FOR SERVICE	

SEE YOUR USE AND CARE BOOK FOR COMPLETE INSTRUCTIONS

*Panel located on the inside of the freezer compartment door.*

# Refreshment Center

The Refreshment Center consists of an Automatic Icemaker, an Ice & Water Dispenser and a special Refreshment Center Compartment with its own door that becomes a counter when you open it.

## Icemaker

- It replaces the ice you use... automatically.



## Ice & Water Dispenser

- It dispenses ice cubes, crushed ice and chilled water through the freezer compartment door.


## Refreshment Center Compartment

- It makes frequently used items stored on the fresh food door readily accessible through the Refreshment Center Compartment door without having to open the main refrigerator door.
- It provides an extra counter-high work surface with its own light right at the refrigerator when the Refreshment Center Compartment door is open. To open, lift compartment door handle and pull down. Close door after use.

*Although durable, stain- and scratch-resistant, the work surface on the Refreshment Center counter should not be used as a cutting board. Sharp utensils can damage it.*

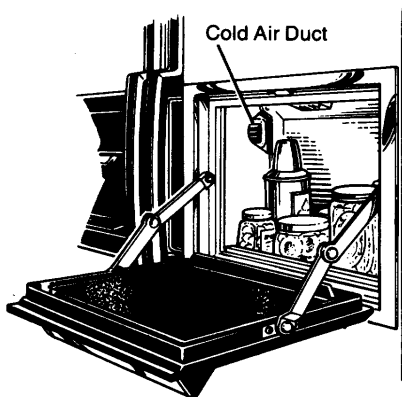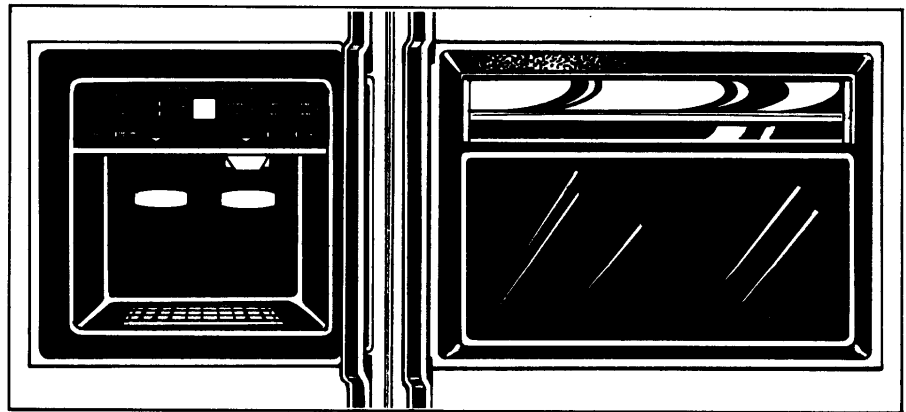


Cold air entering from the freezer compartment keeps the temperature in the Refreshment Center Compartment at proper food-keeping levels.

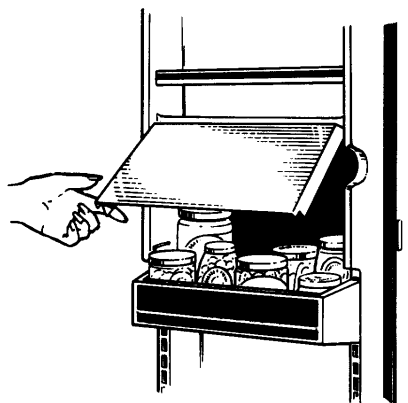

The Refreshment Center Compartment is also accessible through a lift-up door on the inside of the fresh food compartment door.

To remove the Refreshment Center Porta-Bin, open the outer door to free the lip on the bin from the overlapping door.

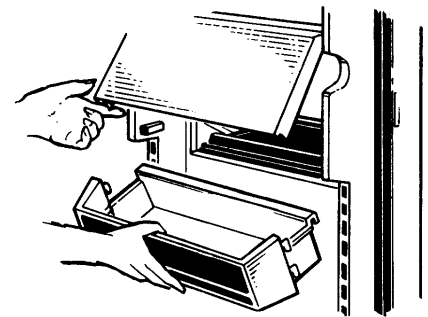


Then raise the inner door and lift the bin straight up until hooks on bin come out of tracks on door.

*Refreshment Center Porta-Bin must be replaced in its original position.*

# Ice & Chilled Water Dispenser

## Automatic Icemaker and Ice & Water Dispenser

Your refrigerator has an automatic icemaker and a custom dispenser that dispenses chilled water, ice cubes and crushed ice through the freezer compartment door. Here's how they work.

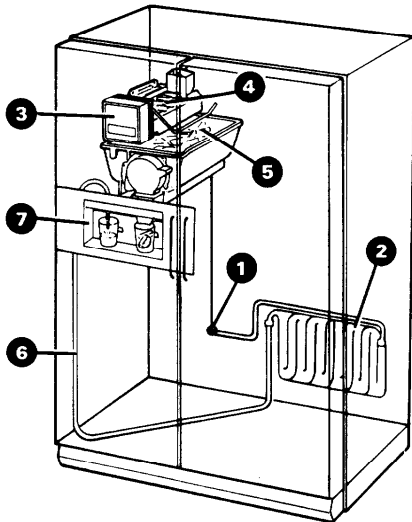

**Water flows from the household supply through a**

- (1) dual solenoid valve to the
- (2) water reservoir and to the
- (3) automatic icemaker as needed.

**Water is frozen in the**

- (4) cube mold and ejected into the
- (5) storage bin where a motor-powered auger moves cubes forward into the dispensing unit.

**When you touch the CUBES pad** on front of freezer compartment door, ice cubes will dispense through chute in door when cradle is pressed.

**When you touch the CRUSHED pad**, baffle in housing channels cubes through the crusher and crushed ice falls through chute into glass when cradle is pressed.

Chilled water from reservoir flows through the

- (6) tubing in the door and is dispensed when the cradle is pressed.
- (7) A **light switch** turns the night light in the dispenser on or off when the **LIGHT** pad is touched.

## Important Facts about Your Ice & Water Dispenser

- **Your icemaker will produce eight cubes per cycle**—approximately 120 cubes in a 24-hour period—depending on freezer compartment temperature, room temperature, number of door openings and other use conditions.

- **Intermittent dispensing of ice is normal.** If ice flow interruption is more than brief, ice clump(s) may be the cause and should be removed following instructions below and on page 13.

- **Avoid overfilling glasses with ice and using narrow or extra-tall glasses.** This can jam the chute or cause the door in the chute to freeze shut. Periodically open the freezer compartment door and look down into the chute. If ice is blocking the chute, poke it through with a wooden spoon.

- **To help keep bits of ice from being sprayed beyond the glass,** place glass close to ice chute—but not so close that it blocks outgoing ice.

- **Ice should not be dispensed into thin glasses, fine china or delicate crystal**—they can crack or chip from the combined pressure of your hand pressing them against the cradle and ice dropping into the container.



- **Ice should be dispensed before filling glass with soda or other beverage mixes.** This will prevent splashing which is annoying and which, if the splash reaches the ice and water selector switch, could cause it to stick or bind.

- **Beverages and foods should not be quick-chilled in the ice storage bin.** Cans, bottles or food packages in the storage bin may cause the icemaker to malfunction.


- **Ice other than that produced by your icemaker should not be added to the ice storage bin**—it may not crush or dispense well.

## Before Using Your Icemaker and Dispenser

If you use your refrigerator before the water connection is made, raise the ice access door and make sure the icemaker feeler arm is in the OFF (up) position as shown below.

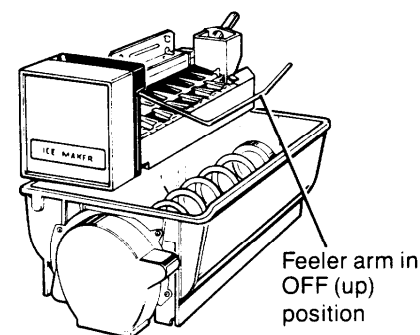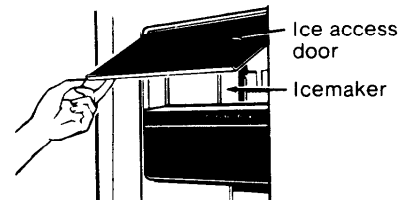

When water supply has been connected to icemaker, move feeler arm to ON (down) position.

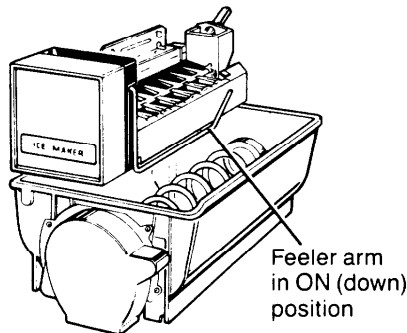

Depress water dispenser cradle for about two minutes to remove trapped air from the water line and to fill water reservoir automatically.

Ice cube mold automatically fills with water after cooling to freezing temperatures. First cubes normally freeze after several hours.

**NOTE:** With a newly-installed refrigerator, allow about 24 hours for the freezer compartment to cool down to the proper ice-making temperature.

(continued next page)

# Ice & Chilled Water Dispenser (continued)

## Once Your Icemaker and Dispenser Are in Operation

Throw away the first few batches of ice cubes (16 or 24 cubes). This will flush away any impurities in the water line. Do the same thing after vacations or extended periods when ice isn't used.

Discard the first half dozen glassfuls of water in the kitchen sink. This will eliminate the slight "plastic" taste temporarily imparted to the water by the water reservoir.



**Keep ice level to keep icemaker productive.** Cubes ejected into an empty storage bin will pile up close to the icemaker and push the feeler arm up to the OFF position prematurely when the bin is only partially full. Open the ice access door, reach in, level the cubes by hand and ice-making will resume. Keeping cubes distributed evenly will allow the icemaker to produce enough ice to fill the bin to its maximum capacity.

### Caution:

Under certain rare circumstances, ice cubes may be discolored, usually appearing with a green-bluish hue. The cause of this unusual discoloration is apparently due to a combination of factors such as certain characteristics of local waters, household plumbing and the accumulation of copper salts in an inactive water supply line which feeds the icemaker. Continued consumption of such discolored ice cubes may be injurious to health. If such discoloration is observed, discard the ice cubes and contact your General Electric Factory Service Center or an authorized Customer Care® servicer.

## To Dispense Ice and Water

- For ice, touch CUBES or CRUSHED pad. For water, simply position glass beneath words "CHILLED WATER."

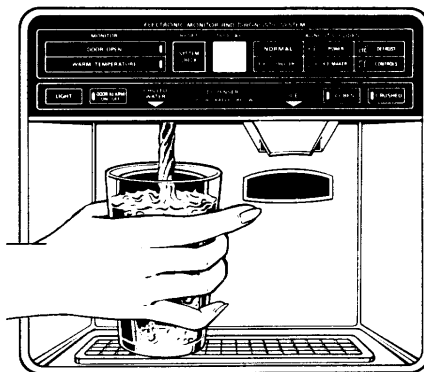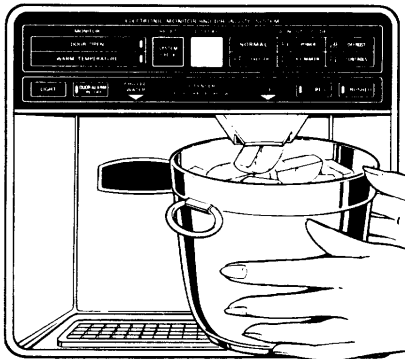

- Grip glass or other container gently near rim and press rim firmly against ice or water dispenser cradle.

### Caution:

**Never put fingers or other objects into the ice crusher discharge opening.**

## When Dispensing Ice...

**Some crushed ice may be dispensed even though you touched the CUBES pad.** This happens occasionally when a few cubes inadvertently get diverted to the crusher.

**Sometimes a mound of snow will form on the door in the ice chute.** This condition is normal, and usually occurs when you have dispensed crushed ice repeatedly. The snow will eventually evaporate.

## When Dispensing Water...


**The water system provides approximately six successive 6-ounce glassfuls.** After this, several hours must be allowed for the new water reservoir supply to cool. You probably will not drain all the chilled water from the reservoir on a single occasion.

**The first glass of water dispensed may be warmer than the following ones.** This is normal.

**Dispensed water is chilled, not iced.** For colder water, simply add crushed ice or cubes before dispensing water.

### To Stop Dispensing

Release pressure from cradle and withdraw slowly to catch last bits of ice or drops of water.

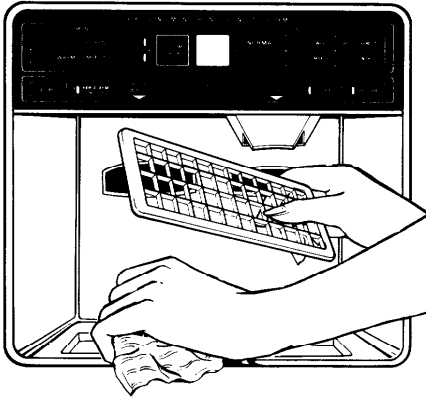

Some slight dripping may occur following dispensing of crushed ice or chilled water. If excessive, the spill should be wiped dry immediately.

Do not pour water in spill shelf because it is not self-draining—pour it in the kitchen sink. The shelf and its grille should be cleaned regularly according to instructions on page 18.


### If Ice Clumps Form in Storage Bin...

The icemaker ejects cubes in groups of eight, and it is normal for several cubes to be joined together. However, **infrequent usage of ice can cause ice clumps to form in the storage bin**, resulting in temporary malfunction of the dispenser mechanism.

If this happens:

- Remove storage bin from freezer compartment.
- Break up ice clumps with fingertip pressure and discard remaining clumps.
- Replace bin before remaining cubes melt and fuse together.


### To Remove Ice Cube Storage Bin...

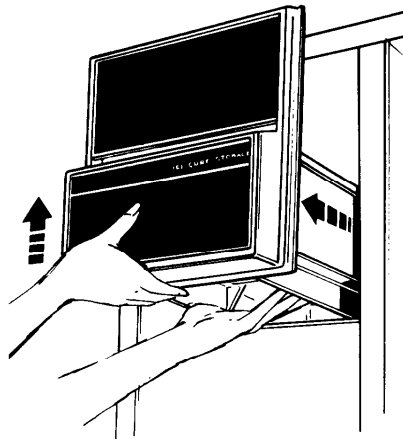

Lift the left corner to free the bin from the shelf, and pull the bin straight out while supporting it at front and back.

### To Replace Ice Cube Storage Bin

Slide the bin back until the tab on the bin locks into the slot in the shelf.

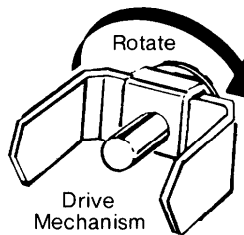

If bin does not go all the way back, remove it and rotate the drive mechanism 1/4 turn. Then push bin back again until the tab on the bin locks into the slot in the shelf.

### If Ice Is Not Used Frequently...

Old ice cubes will become cloudy and taste stale. Empty ice storage bin periodically and wash it in lukewarm water. Be sure to allow storage bin to cool before replacing it—otherwise ice cubes will stick to the metal auger.

### Move Icemaker Feeler Arm to OFF (up) Position When...

- Home water supply is to be turned off for several hours.
- Ice storage bin is to be removed for a period of time.
- Going away on vacation, at which time you should also turn off the valve in the water supply line to your refrigerator.

### If This Is Your First Icemaker...

You'll hear occasional sounds that may be unfamiliar. These are normal icemaking sounds and are not cause for concern.

# Food Storage Suggestions

## Suggested Storage Times\*

Eating quality drops after time shown	IN REFRIGERATOR	IN FREEZER
	AT 35° to 40°F. DAYS	AT 0°F. MONTHS
<b>Fresh Meats</b>		
Roasts (Beef & Lamb) . . . . .	3 to 5	6 to 12
Roasts (Pork & Veal) . . . . .	3 to 5	4 to 8
Steaks (Beef) . . . . .	3 to 5	6 to 12
Chops (Lamb) . . . . .	3 to 5	6 to 9
Chops (Pork) . . . . .	3 to 5	3 to 4
Ground & Stew Meats . . . . .	1 to 2	3 to 4
Variety Meats . . . . .	1 to 2	3 to 4
Sausage (Pork) . . . . .	1 to 2	1 to 2
<b>Processed Meats</b>		
Bacon . . . . .	7	1
Frankfurters . . . . .	7	½
Ham (Whole) . . . . .	7	1 to 2
Ham (Half) . . . . .	3 to 5	1 to 2
Ham (Slices) . . . . .	3	1 to 2
Luncheon Meats . . . . .	3 to 5	Freezing not recommended.
Sausage (Smoked) . . . . .	7	
Sausage (Dry & Semi-Dry) . . . . .	14 to 21	
<b>Cooked Meats</b>		
Cooked Meats and Meat Dishes . . . . .	3 to 4	2 to 3
Gravy & Meat Broth . . . . .	1 to 2	2 to 3
<b>Fresh Poultry</b>		
Chicken & Turkey (Whole) . . . . .	1 to 2	12
Chicken (Pieces) . . . . .	1 to 2	9
Turkey (Pieces) . . . . .	1 to 2	6
Duck & Goose (Whole) . . . . .	1 to 2	6
Giblets . . . . .	1 to 2	3
<b>Cooked Poultry</b>		
Pieces (Covered with Broth) . . . . .	1 to 2	6
Pieces (Not Covered) . . . . .	3 to 4	1
Cooked Poultry Dishes . . . . .	3 to 4	4 to 6
Fried Chicken . . . . .	3 to 4	4
<b>(Other than for meats &amp; poultry)</b>		
Most fruits and vegetables . . . . .		8-12 months
Lean fish . . . . .		6-8 months
Fatty fish, rolls and breads, soups, stew, casseroles . . . . .		2-3 months
Cakes, pies, sandwiches, left-overs (cooked) . . . . .		
Ice cream (original carton) . . . . .		1 month max.

New techniques are constantly being developed. Consult the College or County Extension Service or your local Utility Company for the latest information on freezing and storing foods.

\*U.S. Department of Agriculture

Meats, fish and poultry purchased from the store vary in quality and age; consequently, safe storage time in your refrigerator will vary.

### To store unfrozen meats, fish and poultry:

- Always remove store wrappings.
- Rewrap in foil, film or wax paper and refrigerate immediately.

To store cheese, wrap well with wax paper or aluminum foil, or put in a plastic bag.

- Carefully wrap to expel air and help prevent mold.
- Store pre-packaged cheese in its own wrapping if you wish.

To store vegetables, use the vegetable drawers—they've been designed to preserve the natural moisture and freshness of produce.

- Covering vegetables with a moist towel helps maintain crispness.
- As a further aid to freshness, pre-packaged vegetables can be stored in their original wrapping.

*Note: Special fresh food compartment drawers (on models so equipped) make it unnecessary to wrap certain foods which they've been designed to preserve. These drawers are described on page 15.*

To store ice cream—Fine-quality ice cream, with high cream content, will normally require slightly lower temperatures than more "airy," already-packaged brands with low cream content.

- It will be necessary to experiment to determine the freezer compartment location and temperature control setting to keep your ice cream at the right serving temperature.
- The rear of the freezer compartment is slightly colder than the front.

### Tips on Freezing Foods

There are three essential requirements for efficient home freezing.

- 1. Initial quality.** Freeze only top-quality foods. Freezing retains quality and flavor; it cannot improve quality.
- 2. Speed.** The quicker fruits and vegetables are frozen after picking, the better the frozen product will be. You'll save time, too, with less culling and sorting to do.
- 3. Proper packaging.** Use food wraps designed especially for freezing.

To freeze meat, fish and poultry, wrap well in freezer-weight foil (or other heavy-duty wrapping material), forming it carefully to the shape of the contents. This expels air. Fold and crimp ends of the package to provide a good, lasting seal.

Don't refreeze meat that has completely thawed; meat, whether raw or cooked, can be frozen successfully only once.

Limit freezing of fresh (unfrozen) meats or seafoods to 29 pounds at a time.

### For Convenience...

- Store all like things together. This not only saves time, but electricity—because you can find foods faster.
- Place the oldest items up front so they can be used up promptly.
- Use the roomy Porta-Bins on the door for most frequently used foods and beverages.
- Use the meat drawer for meats you do not freeze.

### To Save Money in Energy and Food Costs

- Place most perishable items such as milk, cream or cottage cheese in the coldest part of the refrigerator—in a Porta-Bin on the door in line with one of the air ducts through which cold air from the freezer enters the fresh food compartment.
- Cover moist foods with tight lids, plastic film or foil.
- Leaf vegetables and fruits placed in storage drawers will last longer stored in closed plastic containers or wrapped in plastic film.
- Do not overload your fresh food or freezer compartment with a lot of warm food at once.
- Open the doors the fewest times possible to save electrical energy.
- When going out of town for several days, leave as few perishables as possible in the refrigerator. Set the icemaker to the "OFF" position and shut off water to the refrigerator.

# General Electric Food-Saver System

## Moist 'n Fresh Drawer

The full-width top drawer is designed to keep **unwrapped foods** fresh by retaining the natural moisture content of foods such as:

- Artichokes
- Asparagus
- Beets, topped
- Blueberries
- Carrots
- Celery
- Cherries
- Corn
- Currants
- Greens, leafy
- Lettuce
- Parsley
- Peas, green
- Plums
- Radishes
- Rhubarb
- Spinach
- Tomatoes, ripe

As in any refrigerated storage area, **it is recommended that odorous foods be stored wrapped**—foods such as:

- Broccoli
- Brussels Sprouts
- Cabbage
- Cauliflower
- Green Onions
- Parsnips
- Turnips

Storage time will depend upon the type of food and its condition when placed in the drawer.

Excess water which may accumulate in the bottom of the Moist 'n Fresh drawer should be poured out and the drawer wiped dry.

The Moist 'n Fresh drawer is partially sealed by gaskets attached to the cover at the front and back edges. Always replace it in this cover and *push the drawer all the way in*.


## Cool 'n Fresh Drawer

The lower right drawer is designed to provide lower humidity storage for items such as:


- Apples
- Apricots
- Grapes
- Mushrooms
- Nectarines
- Oranges
- Peaches
- Pears
- Raspberries
- Summer Squash
- Strawberries
- Tangerines

## Convertible Meat Keeper

The Convertible Meat Pan drawer has its own cold air duct to allow a stream of cold air from the freezer compartment to flow around the drawer.

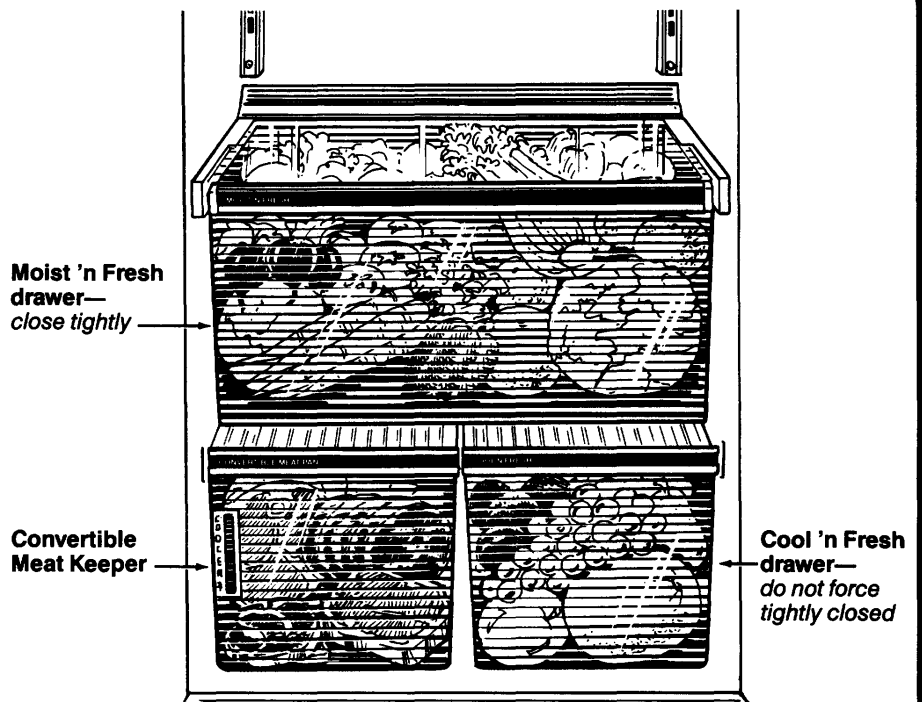

The variable temperature control regulates the air flow from the freezer compartment.

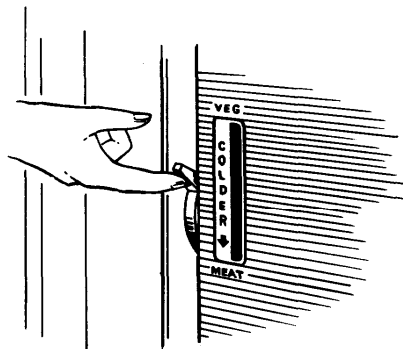

Set control lever to **MEAT**—the coldest setting—to store fresh meats. If lever is left in meat position for a long period of time, some frost may form on the inside of the drawer.

Set control lever to **VEG** to convert the drawer to normal refrigerator temperature and provide extra vegetable storage space. Cold air duct is turned off.


Variable settings between these extremes can be selected.

## Drawer Removal

Drawers will stop before coming all the way out of refrigerator to help prevent contents from spilling onto floor. Drawers can easily be removed by tilting up slightly and pulling past "stop" location.

To remove drawers when the fresh food compartment door cannot be opened fully:


1. Remove food from the shelf above the Moist 'n Fresh drawer and take out the shelf. Take food off of the glass cover and out of the drawer.

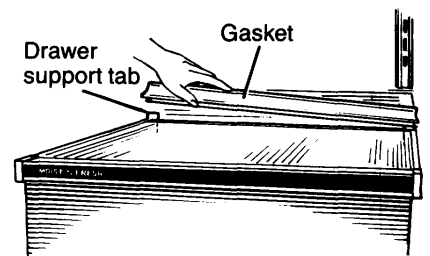

2. Remove the flexible gasket at the rear of the Moist 'n Fresh drawer. Lift each end straight up until the slots on the gasket are free of the drawer support tabs.

(continued next page)

## Storage Drawers (continued)

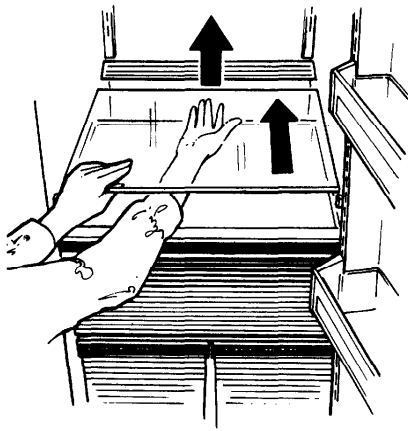


3. Pull the drawer part-way out. Reach in, push the rear of the glass up and, at the same time, push it back until it clears the front corner retainers.

4. Tilt and remove the cover.




5. Pull the Moist 'n Fresh drawer out until it hits the door, lift it higher than the drawer supports, tilt it, and take it out.

6. Pull the "Meats or Vegetables" drawer straight out, then lift its cover and remove it.

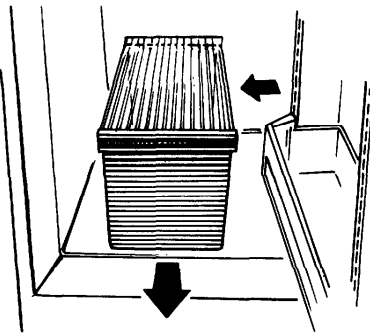


7. Slide the "Fruits & Vegetables" drawer and cover to the left and remove them.

After cleaning, replace in reverse order. "Meats or Vegetables" drawer must be returned to the lower left position.

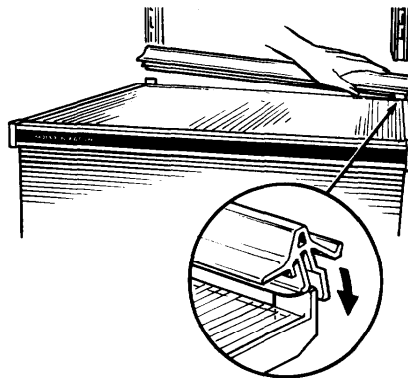


8. Reinstall the gasket at the rear of the "Moist 'n Fresh" drawer. Fit the end of the plastic drawer support into the slot on the gasket, with the rubber gasket flap facing you. Make sure the gasket snaps into place.

## Sealed Snack Pack

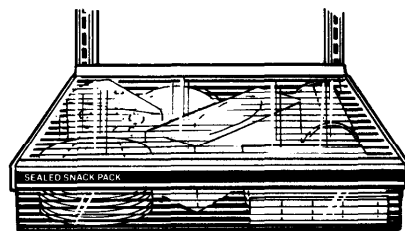


The Sealed Snack Pack—and shelf to which it is attached—can be relocated within the Fresh Food compartment. The sealed drawer retains high humidity for convenient storage of unwrapped meats and cheese, bacon, hors d'oeuvres, spreads and snacks.

## Quick Serve System

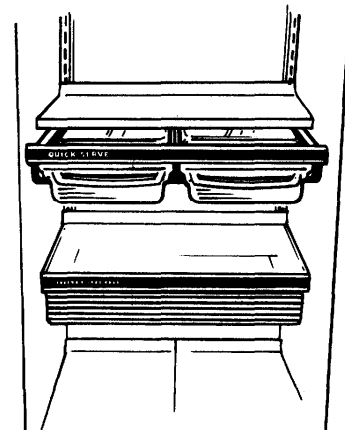

Cooking-serving-storage dishes with Lexan® see-through lids fit into a slide-out tray that, together with the shelf to which it attaches, can be located anywhere in the fresh food compartment.

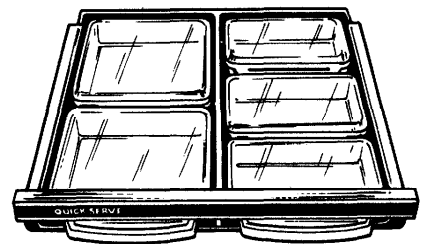

Dishes and lids are:

- safe for use in microwave ovens.
- safe for use in refrigerators and freezers.
- dishwasher safe.

Dishes only are safe for use in conventional ovens at temperatures up to 400°F.

### CAUTION:

**Lids cannot withstand the heat generated in conventional ovens.**


**Dishes and lids are not designed for range top cooking or broiler use. Such use can be hazardous.**

# Shelf Positions


## How to Rearrange Your Shelves

Shelves in the fresh food and freezer compartments are adjustable, enabling you to make efficient shelf arrangements to fit your family's food storage needs.

## Tempered Glass Shelves in Fresh Food Compartment

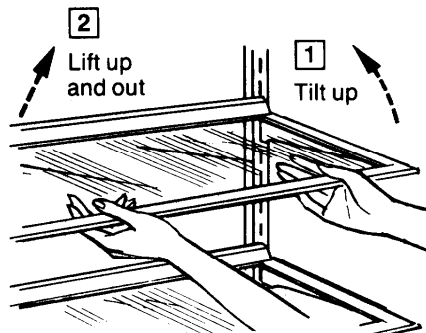


**To remove shelves:** Tilt the shelf up at front, then lift it up and out of the tracks on the rear wall of the refrigerator.

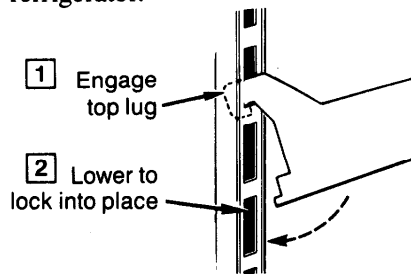


**To relocate shelves:** Select desired shelf height. With shelf front raised slightly, engage the top lugs in the tracks at the rear of the cabinet. Then lower the front of the shelf until it locks into position.

## Removable Wine Rack

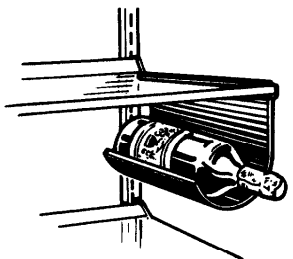

The wine rack is designed to hold a bottle on its side and will fit on any shelf.

## To relocate the wine rack:

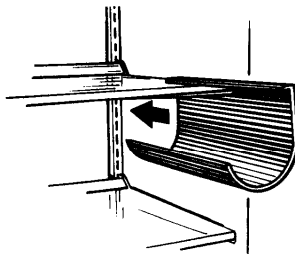


Pull the wine rack straight out, position its lip over either edge of the shelf you want to suspend it from, and push it all the way in.

## Porta-Bins on Fresh Food Compartment Door

Adjustable Porta-Bins can easily be carried from the refrigerator to your work area.

Snuggers hold smaller items securely in the bin to help prevent tipping, spilling and sliding.

All except the top Porta-Bin in the Refreshment Center Compartment (see page 10) can be relocated on the fresh food compartment door. The top bin is removable, but must be returned to its original position on the door.

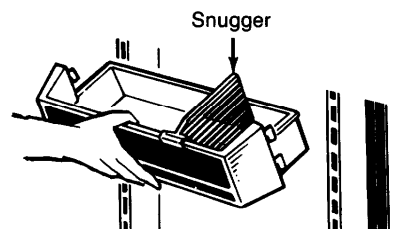

**To remove:** Lift Porta-Bin straight up until mounting hooks disengage.


**To replace or relocate:** Select desired shelf height, engage Porta-Bin's hook in slots on the tracks of the door, and push in. Porta-Bin will lock in place.

## Multi-Position Shelves in Freezer Compartment


Shelf supports at various levels in the freezer compartment let you reposition the shelves from time to time to better accommodate your variable inventory of frozen foods.

## To reposition shelves:


1. While pressing tabs on shelf supports on right wall, lift shelf out of grooves in supports.

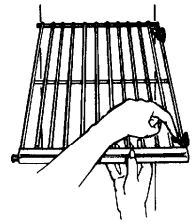

2. Pull shelf sideways until shelf rods come out of holes on left wall.

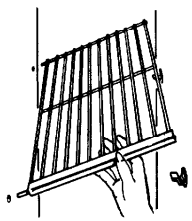


3. Select desired shelf height and insert shelf rods into holes on left wall. **If shelf supports at desired level on right wall have tabs, lower shelf into grooves on support while pressing tabs.** Be sure shelf wire is fully inserted into grooves.

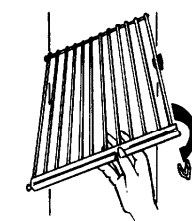

**If shelf supports at desired level on right wall do not have tabs, merely lower shelf into place on supports.**

## Deep Door Shelves in Freezer Compartment

Detachable shelf extenders deepen and enclose three fixed door shelves, providing more storage room and greater storage flexibility.

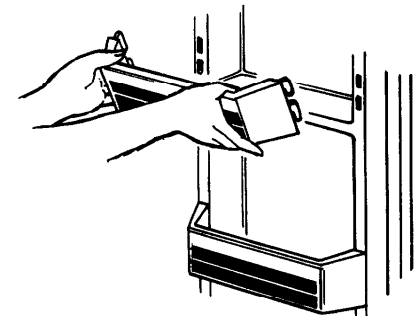

**To remove,** lift the shelf extender straight up until the mounting hooks come out of the slots in the door.

**To replace,** line up the hooks with the slots in the door and push in and down.

# User Maintenance Instructions

## Cleaning

### Outside

**Refreshment center compartment door—outside.** It's important that you use only Windex brand window cleaner or a damp cloth to clean the glass and trim. Other glass cleaners may damage the trim. Avoid using wax on the refreshment center door.

**Electronic monitor and diagnostic system panels.** Clean the panels on the outside and inside of the freezer compartment door with a soft, clean cloth lightly dampened with water. Do not use cleaning sprays or large amounts of water—the liquid can run down and damage the control mechanisms.

**The water and ice dispenser spill shelf** should be wiped dry immediately to prevent spotting. Water left on the shelf may leave deposits that you can remove by soaking in undiluted vinegar. You can also use a paste of non-precipitating water softener (such as Calgon brand) and water, or one teaspoon of citric acid powder per pint of hot tap water. Soak until the deposit disappears or becomes loose enough to rinse away. Usually 30 minutes soaking time is adequate. Avoid using wax on the spill shelf and trim.

**The door handles and trim** can be cleaned with a cloth dampened with a solution of mild liquid dishwashing detergent and water. Dry with a soft cloth. Don't use wax on the door handles and trim.

**Keep the finish clean.** Wipe with a clean cloth lightly dampened with kitchen appliance wax or mild liquid dishwashing detergent. Dry and polish with a clean, soft cloth. Do not wipe the refrigerator with a soiled dishwashing cloth or wet towel. These may leave a residue that can erode the paint. Do not use scouring pads, powdered cleaners, bleach or cleaners containing bleach because these products can scratch and weaken the paint finish.

**Protect the paint finish.** The outside of the refrigerator has a high quality, baked-on paint finish. With proper care, it will stay new-looking and rust-free for years. Apply kitchen/appliance wax when the refrigerator is new and then at least twice a year.

Appliance Polish Wax & Cleaner (Cat. No. WR92X216) is available from GE Appliance Parts Marts.

### Inside

**Refreshment center compartment door—inside.** Wipe up spills right away. Use one tablespoon of baking soda in one quart of water to clean the inside door surface, refreshment center bin and inside access door. Rinse, wipe dry.

**Inside the fresh food and freezer compartments** should be cleaned at least once a year. Unplug the refrigerator before cleaning. If this is not practical, wring excess moisture out of sponge or cloth when cleaning around switches, lights or controls.

Use warm water and baking soda solution—about a tablespoon of baking soda to a quart of water. This both cleans and neutralizes odors. Rinse thoroughly with water and wipe dry.

Other parts of the refrigerator—including door gaskets, meat and vegetable drawers, ice storage bin and all plastic parts—can be cleaned the same way. Do not use cleansing powders or other abrasive cleaners.

To help prevent odors, leave an open box of baking soda in the rear of the refrigerator, on the top shelf. Change the box every three months. An open box of baking soda in the freezer will absorb stale freezer odors.


**Do not wash any plastic parts from your refrigerator in your automatic dishwasher.**

**Quick Serve bowls and covers** can be cleaned in an automatic dishwasher or by hand with liquid

dishwashing detergent and water. You can remove stains by soaking them in a bleach-and-water solution—one part chlorine bleach to three parts water. (Stubborn stains may require two or more hours of soaking.) Use a plastic scouring pad to remove burned-on soil. Do not use cleansing powders or other abrasive cleaners.

**Drain opening in freezer compartment.** During yearly cleaning, remove bottom freezer basket and flush a solution of baking soda—one teaspoon and two cups of hot (not boiling) water—through the drain line with the help of a meat baster. This will help eliminate odor and reduce the likelihood of a clogged drain line.

If drain becomes clogged, use a meat baster and baking-soda-and-water solution to force the clog through the drain line.

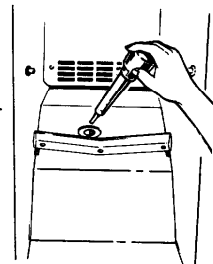


### Behind Refrigerator

Care should be taken in moving your refrigerator away from the wall. All types of floor coverings can be damaged, particularly cushioned coverings and those with embossed surfaces. Pull the refrigerator straight out and return it to position by pushing it straight in. Moving your refrigerator in a side direction may result in damage to your floor covering or refrigerator.

### Condenser

For most efficient operation, remove the base grille (see page 4) and either sweep away or vacuum up dust that is readily accessible. This easy cleaning operation should be done at least once a year.

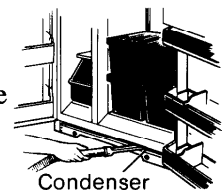


(continued next page)

## Light bulb replacement

### In Fresh Food Compartment

1. Unplug refrigerator.
2. Turn numbered temperature control to OFF and pull off knob.

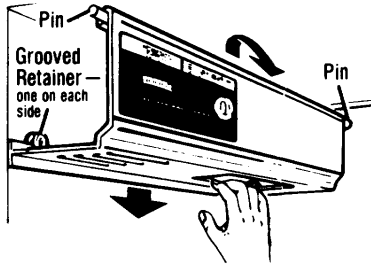


3. Pull bottom of light panel down about 1/4"—just enough to disengage lip at rear from grooves in retainers on rear wall.

4. Lift panel to disengage top from pins on side walls; remove panel.

After replacing with same size bulb, reinstall panel (hang top on pins; pull bottom down, push it back and release it to let lip engage grooves in retainers). Replace temperature control knob in OFF position, turn it to previous setting, and plug refrigerator back in.

### In Freezer Compartment

1. Unplug refrigerator.

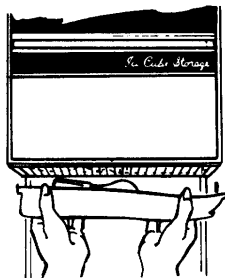


2. Remove shelf just below light shield. (Shelf will be easier to remove if it is emptied first.)

3. Pull plastic light shield toward you. (It will bend to free tabs from grooves.)

After replacing with same size bulb, reinstall shield and shelf and plug refrigerator back in.

### In Refreshment Center

1. Unplug refrigerator.
2. Open fresh food compartment door, remove top Porta-Bin and raise Refreshment Center inner door.

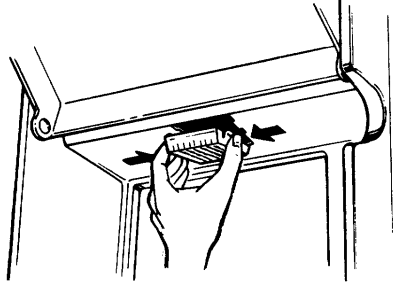

3. Press sides of flexible light shield to release locking tabs and allow the shield to swing down.

4. Unscrew burned-out bulb and replace it with night-light bulb of same wattage.

5. Place rear tab of light shield into door and rotate shield up until tabs lock into slots above.

6. Plug refrigerator back in.

## When you go on vacation

**For extended vacations or absences,** shut off power to refrigerator, turn the numbered control to OFF, clean interior with baking soda solution of one tablespoon of soda to one quart of water. Wipe dry. To prevent odors, leave open box of soda in refrigerator. Leave doors open.

**For shorter vacations,** remove perishable foods and leave controls at regular settings. However, if room temperature is expected to drop below 60°F., follow same instructions as for extended vacations.

Move icemaker feeler arm to OFF (up) position and be sure to shut off water supply to the refrigerator.

## When you move

Disconnect power cord from wall outlet, remove all food and clean and dry the interior.

**Secure all loose items** such as grille, shelves and storage pans by taping them securely in place to prevent damage.

Be sure refrigerator stays in *upright position only* during actual moving and in van. Refrigerator must be secured in van to prevent movement. Protect outside of refrigerator with blanket.


## Water filter accessory

**The perfect companion to your automatic icemaker—Quadra Kleen Water Filter**

Your ice cubes can only be as fresh-tasting as the water that produces them. That's why it's a good idea to purify your water with a Quadra Kleen Water Filter.

Its activated charcoal removes musty, stale odors and unpleasant medicinal, metallic tastes. A porous fiber cartridge catches dirt, rust particles, sand and silt while special crystals reduce deposits of hard scale.

The water filter is an option at extra cost and is available from your GE dealer. Specify WR97X214. It has complete installation instructions and installs in minutes on 1/4" O.D. copper water line.

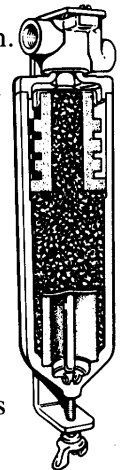

## Rapid Electrical Diagnosis

Your refrigerator is wired for accurate electrical diagnosis in your home—takes only minutes for a service technician to check its entire electrical system. No need for the technician to unplug, move or unload the refrigerator to make the diagnosis.



## Questions? Use This Problem Solver

PROBLEM	POSSIBLE CAUSE AND REMEDY
NO PANEL TOUCH PAD RESPONSE	<ul style="list-style-type: none"> <li>• If interior light is not on, refrigerator may not be plugged in at wall outlet.</li> <li>• If plug is secure and the refrigerator still fails to operate, plug a lamp or a small appliance into the same outlet to determine if there is a tripped circuit breaker or burned out fuse.</li> </ul>
REFRIGERATOR DOES NOT OPERATE	<ul style="list-style-type: none"> <li>• May be in defrost cycle when motor does not operate for about 30 minutes.</li> <li>• Temperature control in OFF position.</li> <li>• If interior light is not on, refrigerator may not be plugged in at wall outlet.</li> <li>• If plug is secure and the refrigerator still fails to operate, plug a lamp or a small appliance into the same outlet to determine if there is a tripped circuit breaker or burned out fuse.</li> </ul>
MOTOR OPERATES FOR LONG PERIODS	<ul style="list-style-type: none"> <li>• Modern refrigerators with more storage space and a larger freezer compartment require more operating time.</li> <li>• Normal when refrigerator is first delivered to your home—usually requires 24 hours to completely cool down.</li> <li>• Large amounts of food placed in refrigerator to be cooled or frozen.</li> <li>• Hot weather—frequent door openings.</li> <li>• Door left open.</li> <li>• Temperature controls are set too cold. Refer to instructions for use of TEMPERATURE CONTROLS on page 5.</li> <li>• Grille and condenser need cleaning. Refer to page 18.</li> <li>• Check ENERGY-SAVING TIPS on page 2.</li> </ul>
MOTOR STARTS & STOPS FREQUENTLY	<ul style="list-style-type: none"> <li>• Temperature control starts and stops motor to maintain even temperatures.</li> </ul>
VIBRATION OR RATTLING	<ul style="list-style-type: none"> <li>• If refrigerator vibrates, more than likely it is not resting solidly on the floor and front roller screws or front leveling legs need adjusting or floor is weak or uneven. Refer to ROLLERS on page 4.</li> <li>• If dishes vibrate on shelves, try moving them. Slight vibration is normal.</li> </ul>
HOT AIR FROM BOTTOM OF REFRIGERATOR	<ul style="list-style-type: none"> <li>• Normal air flow cooling motor. In the refrigeration process, it is normal that heat be expelled in the area under the refrigerator. Some floor coverings will discolor at these normal and safe operating temperatures. Your floor covering supplier should be consulted if you object to this discoloration.</li> </ul>
DOOR NOT CLOSING PROPERLY	<ul style="list-style-type: none"> <li>• Door gasket on hinge side sticking or folding over. To correct, put a small amount of petroleum jelly on face of gasket.</li> </ul>

PROBLEM	POSSIBLE CAUSE AND REMEDY
OPERATING SOUNDS	<ul style="list-style-type: none"> <li>• The high speed compressor motor required to maintain near zero temperatures in the large freezer compartment may produce higher sound levels than your old refrigerator.</li> <li>• Normal fan air flow—one fan blows cold air through the refrigerator and freezer compartments, another fan cools the compressor motor.</li> <li>• These NORMAL sounds will also be heard from time to time:               <ul style="list-style-type: none"> <li>• Defrost timer switch clicks at defrost.</li> <li>• Defrost water dripping into drain pan.</li> <li>• Temperature control clicks ON or OFF.</li> <li>• Refrigerant boiling or gurgling.</li> </ul> </li> <li>• Cracking or popping of cooling coils caused by expansion and contraction during defrost and refrigeration following defrost.</li> <li>• With automatic icemaker, the sound of cubes dropping into the bin and water running in pipes as icemaker refills.</li> </ul>
FRESH FOOD OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	<ul style="list-style-type: none"> <li>• Temperature control not set cold enough. Refer to TEMPERATURE CONTROLS on page 5.</li> <li>• Warm weather—frequent door openings.</li> <li>• Door left open for too long time.</li> <li>• Package may be holding door open.</li> </ul>
FOODS DRY OUT	<ul style="list-style-type: none"> <li>• Foods not covered, wrapped or sealed properly.</li> </ul>
FROST OR ICE CRYSTALS ON FROZEN FOOD	<ul style="list-style-type: none"> <li>• Door may have been left ajar or package holding door open.</li> <li>• Too frequent and too long door openings.</li> <li>• Frost within package is normal.</li> </ul>
SLOW ICE CUBE FREEZING	<ul style="list-style-type: none"> <li>• Door may have been left ajar.</li> <li>• Turn temperature of freezer compartment colder.</li> </ul>
ICE CUBES HAVE ODOR/TASTE	<ul style="list-style-type: none"> <li>• Old cubes need to be discarded.</li> <li>• Ice storage bin needs to be emptied or washed.</li> <li>• Unsealed packages in refrigerator and/or freezer compartments may be transmitting odor/taste to ice cubes.</li> <li>• Interior of refrigerator needs cleaning—refer to page 18.</li> <li>• Poor-tasting incoming water. Install Quadra Kleen water filter—see page 19.</li> </ul>
AUTOMATIC ICEMAKER DOES NOT WORK	<ul style="list-style-type: none"> <li>• Icemaker feeler arm in OFF (up) position.</li> <li>• Water supply turned off or not connected.</li> <li>• Freezer compartment too warm.</li> <li>• Cubes too small—water shutoff valve connecting refrigerator to home water line may be clogged.</li> <li>• Piled up cubes in storage bin may cause icemaker to shut off prematurely. With icemaker feeler arm in OFF (up) position, level cubes in bin by hand.</li> </ul>

(continued next page)

# The Problem Solver (continued)

PROBLEM	POSSIBLE CAUSE AND REMEDY
CUBE DISPENSER DOES NOT WORK	<ul style="list-style-type: none"> <li>• No ice cubes. Remove storage container. If cubes are frozen to wire arm, remove cubes.</li> <li>• No ice cubes. Icemaker turned off or water supply turned off.</li> <li>• Irregular ice clumps in storage container. Break up as many as you can with fingertip pressure and discard the remaining clumps.</li> </ul>
WATER HAS POOR TASTE/ODOR	<ul style="list-style-type: none"> <li>• If water dispenser has not been used for an extended period, dispense water in regular manner until all water in reservoir is replenished with fresh water.</li> <li>• Poor-tasting incoming water. Install Quadra Kleen water filter—see page 19.</li> </ul>
WATER IN FIRST GLASS IS WARM	<ul style="list-style-type: none"> <li>• Allow about 24 hours for water to cool to proper temperature after refrigerator is first installed.</li> <li>• If water dispenser has not been used for extended period, water in first glass will not be as cool as in succeeding glasses.</li> <li>• If water reservoir has been drained, allow several hours for replenished supply to chill.</li> </ul>
WATER DISPENSER DOES NOT WORK	<ul style="list-style-type: none"> <li>• Water supply line turned off or not connected.</li> <li>• Supply line may be clogged with sediment.</li> </ul>
DIVIDER BETWEEN FRESH FOOD AND FREEZER COMPARTMENT FEELS WARM	<ul style="list-style-type: none"> <li>• Normal warmth is created by automatic energy saver system circulating warm liquid around front edge of freezer compartment to help prevent condensation on outside of refrigerator in hot, humid weather.</li> </ul>
MOISTURE FORMS ON OUTSIDE OF REFRIGERATOR	<ul style="list-style-type: none"> <li>• Not unusual during period of high humidity.</li> </ul>
MOISTURE COLLECTS INSIDE	<ul style="list-style-type: none"> <li>• Too frequent and too long door openings.</li> <li>• In humid weather air carries moisture into refrigerator when doors are opened.</li> </ul>
REFRIGERATOR HAS ODOR	<ul style="list-style-type: none"> <li>• Foods with strong odors should be tightly covered.</li> <li>• Check for spoiled food.</li> <li>• Interior needs cleaning. Refer to page 18.</li> <li>• Keep open box of baking soda in refrigerator; replace every three months.</li> </ul>
INTERIOR LIGHT DOES NOT LIGHT	<ul style="list-style-type: none"> <li>• No power at outlet.</li> <li>• Light bulb needs replacing. See page 19.</li> </ul>

**If you need more help... call, toll free:**  
**The GE Answer Center®**  
**800.626.2000**  
**consumer information service**

## If You Need Service

To obtain service, see your warranty on the back page of this book.

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are three steps to follow for further help.

**FIRST**, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

**NEXT**, if you are still not pleased, write all the details—including your phone number—to:

Manager, Consumer Relations  
General Electric  
Appliance Park  
Louisville, Kentucky 40225

**FINALLY**, if your problem is still not resolved, write:

Major Appliance  
Consumer Action Panel  
20 North Wacker Drive  
Chicago, Illinois 60606

# YOUR GENERAL ELECTRIC REFRIGERATOR WARRANTY

Save proof of original purchase date such as your sales slip or cancelled check to establish warranty period.

## WHAT IS COVERED

### FULL ONE-YEAR WARRANTY

For one year from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace **any part of the refrigerator** that fails because of a manufacturing defect.

### FULL FIVE-YEAR WARRANTY

For five years from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace **any part of the sealed refrigerating system** (the compressor, condenser, evaporator and all connecting tubing) that fails because of a manufacturing defect.

### LIMITED LIFETIME WARRANTY

For the life of the refrigerator, we will replace, free of charge, **any tinted see-through pan or drawer made from Lexan® polycarbonate resin** and furnished with the refrigerator if the pan or drawer breaks during normal household use. Drawer covers are not included. To avoid any trip charges, you must take the pan or drawer to a General Electric Appliance Parts Mart and pick up a replacement.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for ordinary home use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is LIMITED because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care® servicers during normal working hours.

Look in the White or Yellow Pages of your telephone directory for GENERAL ELECTRIC COMPANY, GENERAL ELECTRIC FACTORY SERVICE, GENERAL ELECTRIC-HOTPOINT FACTORY SERVICE or GENERAL ELECTRIC CUSTOMER CARE® SERVICE.

## WHAT IS NOT COVERED

- Service trips to your home to teach you how to use the product.

### Read your Use and Care material.

If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

The GE Answer Center®  
800.626.2000  
consumer information service

- Improper installation.

If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, plumbing and other connecting facilities.

- Replacement of house fuses or resetting of circuit breakers.

- Failure of the product if it is used for other than its intended purpose or used commercially.

- Damage to product caused by accident, fire, floods or acts of God.

**WARRANTOR IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

**Warrantor: General Electric Company**

**If further help is needed concerning this warranty, write:**

**Manager—Consumer Affairs, General Electric Company, Appliance Park, Louisville, KY 40225**

Part No. 468347P02  
Pub. No. 49-6543

GENERAL  ELECTRIC

TFX27F