

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



ASKO D5554XXLFI Owner's Manual

[Shop genuine replacement parts for ASKO D5554XXLFI](#)



[Find Your ASKO Dishwasher Parts - Select From 210 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for ASKO D5554XXLFI

[428814](#)

SPACERS

Operating Instructions

Dishwasher

Dear Customer,

Thank you for choosing this quality product from ASKO.

We hope it will meet your expectations and fulfill your needs for many years to come. Scandinavian design combines clean lines, everyday functionality, and high quality. These are key characteristics of all our products and the reason they are greatly appreciated throughout the world.

To get the most out of your new dishwasher, we recommend that you read the operating instructions before using it. The operating instructions also include information on how you can help protect the environment.



ASKO D5554XXLFI
Operating Instructions

Contents

| | | | |
|--|----|-------------------------------------|----|
| Before washing for the first time | 3 | Technical information | 33 |
| Read the operating instructions | 3 | Information for test institute | 33 |
| Be careful with certain materials | 3 | Technical data | 33 |
| Checking water hardness | 3 | Service | 34 |
| Program key | 3 | Warranty | 35 |
| Important safety instructions | 4 | How to contact ASKO Appliances Inc. | 35 |
| Winter storage/Transport | 4 | Quick guide | 36 |
| Overflow guard function | 4 | | |
| Care and maintenance instructions | 4 | | |
| Packing material | 4 | | |
| Disposal | 4 | | |
| Child safety | 5 | | |
| Activate child lock (button lock) | 5 | | |
| Dishwasher components | 6 | | |
| Dishwasher baskets | 7 | | |
| Front panel | 9 | | |
| Detergent/Rinse Aid Dispenser | 10 | | |
| Economic dishwashing | 11 | | |
| Fragile dishes | 12 | | |
| Dishwashing | 13 | | |
| Load the baskets correctly | 13 | | |
| Add detergent | 14 | | |
| Select the program | 16 | | |
| Select options | 19 | | |
| After dishwashing | 20 | | |
| Settings | 21 | | |
| Time remaining | 23 | | |
| Status light | 24 | | |
| Care and maintenance instructions | 25 | | |
| Rinse aid | 28 | | |
| Error messages | 29 | | |
| Troubleshooting | 30 | | |

Before washing for the first time

Do you need this Use&Care Guide in Spanish? Log on to www.askousa.com/customer-care to download.

¿Necesita esta Instrucciones de uso y cuidado en español? Entre en www.askousa.com/customer-care y descárguesela.

Read the operating instructions

Read through the operating instructions before using the dishwasher, especially the sections Important safety instructions, Child safety, and Dishwashing.

Be careful with certain materials


Read the section Fragile dishes before dishwashing porcelain with unglazed decoration or other utensils made from plastic, wood, or crystal that you value.

Checking water hardness

Contact the local water utility to check the water hardness in your area. This is important to determine how much detergent and rinse aid to use.

Program key

Some dishwashers include program keys in different languages. Attach the program key in the appropriate language to the top of the door.

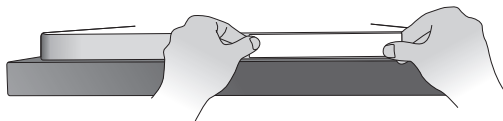

Important safety instructions



SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

WARNING!



This manual does not cover all possible conditions and situations that may occur. Common sense and caution should always be used when installing, operating, and maintaining any appliance.

- Read all instructions before using the dishwasher.
- Dishwashers must be electrically grounded. Read the Installation Instructions for details.
- Use the dishwasher only for its intended purpose.
- Do not run the dishwasher while you are out of the home.
- Use only automatic dishwasher detergents and rinse agents.
- To reduce the risk of injury, keep detergents and rinse aids out of the reach of children.
- Do not load sharp items near the door; you could damage the door seal.
- Place sharp knives in the cutlery basket with the sharp ends down to avoid the risk of cut-type injuries.
- Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent. For items not marked, check the manufacturer’s recommendations. Items not dishwasher safe could become deformed or melt and create a potential fire hazard.
- Do not operate the dishwasher unless all enclosure panels are properly in place (i.e., guard plate, access panel, toe kick, etc.).
- Do not tamper with controls by removing or changing.
- Do not abuse, sit on, or stand on the dishwasher door or baskets.
- To reduce the risk of injury, do not allow children to play in or on a dishwasher.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for two weeks, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As

the gas is flammable, do not smoke or use an open flame during this time.

- When removing an old dishwasher from service or discarding it, remove the door to the washing compartment.
- Do not store or use combustible materials, gasoline, or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Disconnect electrical power to dishwasher before servicing.
- Repairs should be done by a qualified technician.
- Read the grounding instructions in the installation instructions.

Winter storage/Transport

- Store the dishwasher where the temperature remains above freezing.
- Avoid long transport distances in very cold weather.
- Transport the dishwasher upright or laying on its back.

Overflow guard function

The overflow protection starts pumping out the machine and turns off the water supply if the water level in the dishwasher exceeds the normal level. If the overflow protection is triggered, turn off the water supply and call the Customer Care Center.

Care and maintenance instructions

When cleaning the edge around the door, use only a slightly damp cloth. Do not spray water around the edge! Moisture can make its way into the lock, which contains electrical components.

Packing material

Please sort waste materials in accordance with local guidelines.

Disposal

- When the machine has reached the end of its service life and is to be disposed of, it should immediately be made unusable. Pull out the power cable and cut it as short as possible.
- The dishwasher is manufactured and labeled for recycling.
- Contact your municipality for information about where and how your dishwasher can be recycled correctly.

Child safety



TIP!



Dishwasher detergents and rinse aids are corrosive, so always keep them out of reach of children.

- Should a child swallow dishwasher detergent or rinse aid, give plenty to drink immediately, i.e., one or two glasses of milk or water. Do not try to induce vomiting. Seek medical advice immediately: Call the National Capital Poison Center at 1-800-222-1222.
- Always close the door and start the dishwasher as soon as you put in the detergent.
- Always keep small children away from the machine when it is open. There may be some detergent residue left inside the machine.
- If dishwasher detergent gets in someone's eyes, rinse them with plenty of water for at least 15 minutes.
- Do not allow children to use or play in or on the dishwasher.
- Load all long and sharp items in the utensil basket in the middle rack. If this is not possible, load sharp objects with the pointed end facing the back of the dishwasher. Sharp items loaded in the cutlery basket should be loaded with pointed ends down.

Activate child lock (button lock)

You can activate the child lock (button lock) to prevent children from starting the dishwasher (see the section Settings).

Dishwasher components*

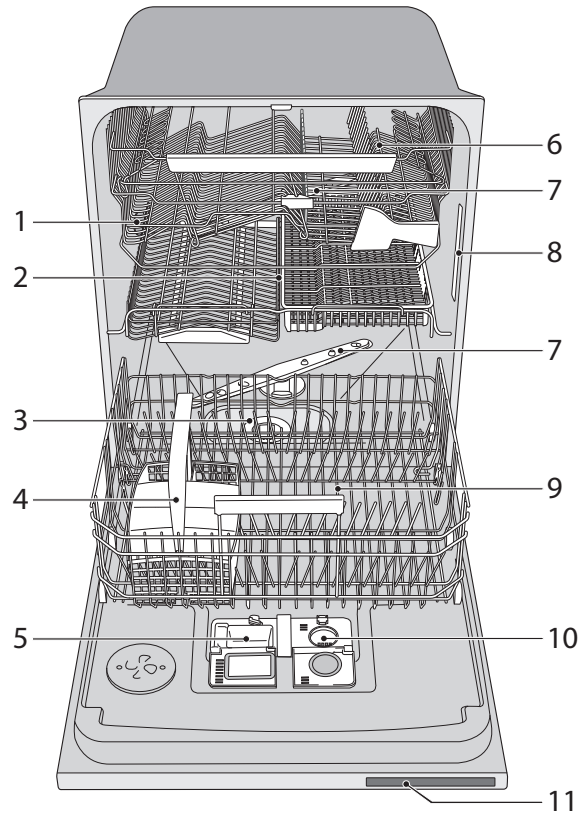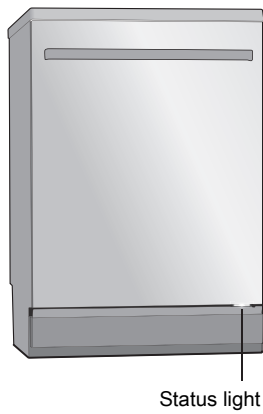


- | | |
|--------------------------|---------------------------|
| 1. Interior light | 7. Spray arms |
| 2. Middle basket | 8. Serial number plate |
| 3. Filters | 9. Lower basket |
| 4. Cutlery basket | 10. Rinse aid compartment |
| 5. Detergent compartment | 11. Panel |
| 6. Upper basket | |

*Specifications may differ depending on the model and market.

Dishwasher baskets*

Upper basket

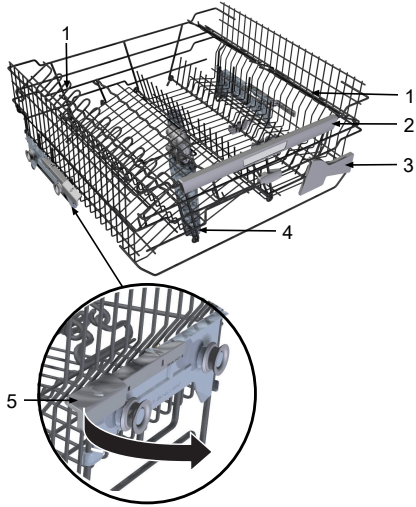

1. Wine glass shelf
2. Handle
3. Knife guard
4. Spray arm
5. Locking handle for upper basket


Raising the upper basket

1. Pull out the upper basket.
2. Grab the sides of the upper basket with both hands and lift it up.

Lowering the upper basket

1. Pull out the upper basket.
2. While holding the basket, pull out the two locking handles (5) on either side to lower the upper basket.

Middle basket

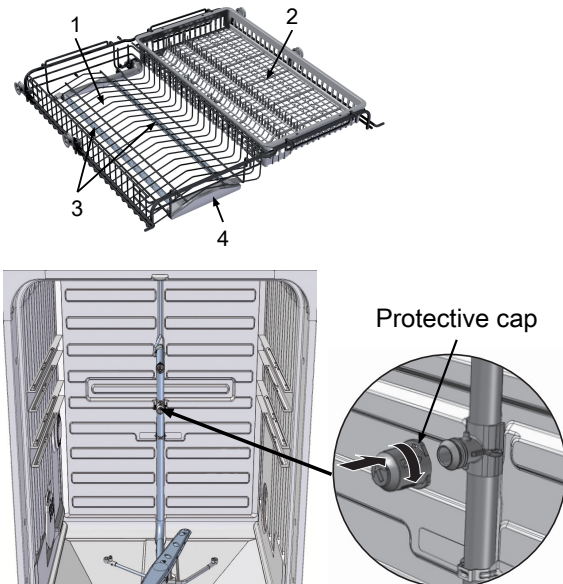

1. Wire basket for cups, small glasses, or bowls
2. Utensil basket for ladles, whisks, food turners, serving cutlery, and similar items
3. Spray pipes
4. Handle

The two baskets in the middle basket can be removed, or the entire middle basket can be removed, to create more space between the upper and lower baskets if larger items are being washed.


NOTE!

Fit the supplied protective cap if the wire basket with spray pipes or the entire middle basket is removed. Don't forget to remove the protective cap when the wire basket with spray pipes or the entire middle basket is reinstalled.

*Specifications may differ depending on the model and market.


Dishwasher baskets*

Lower basket

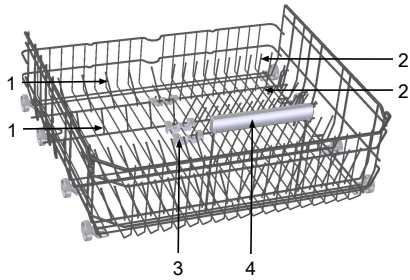

1. Fold-down bowl support left
2. Fold-down plate support right
3. Forward mount for plate support (used for plates with a diameter greater than 9 3/4" (25 cm))
4. Handle


Cutlery basket

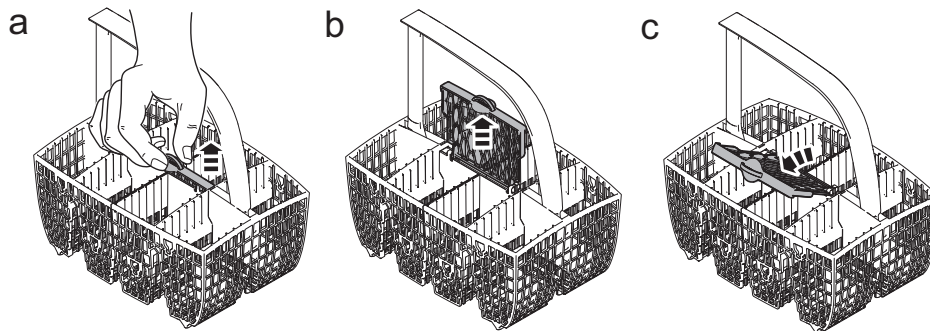

*Specifications may differ depending on the model and market.

Front panel

The panel is fitted with touch buttons with audible feedback (see the chapter Settings).

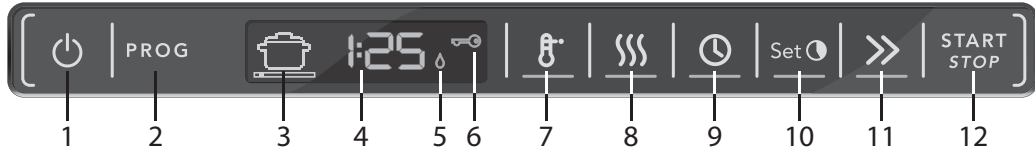


- | | |
|-----------------------------|-------------------------------------|
| 1. Main power switch | 7. High temperature |
| 2. Program selector | 8. Long dry |
| 3. Program symbol | 9. Delayed start |
| 4. Display | 10. Set time (for the Time program) |
| 5. Rinse aid indicator | 11. Time saver |
| 6. Child lock (button lock) | 12. Start/Stop |

NOTE!

- The touch buttons only react to use when the door is open. Wait a moment before pressing the touch buttons after opening the door.
- Two minutes after the last button press, the panel backlight enters energy saving mode. Close and reopen the door, or press the main power switch, to reactivate the panel.
- Keep the touch buttons clean and free from grease. Wipe them clean with a dry or slightly damp cloth. Never use cleaners – they can scratch the surface. Use the main power switch to turn off the dishwasher before cleaning the touch buttons to avoid activating any buttons unintentionally.

Detergent/Rinse Aid Dispenser

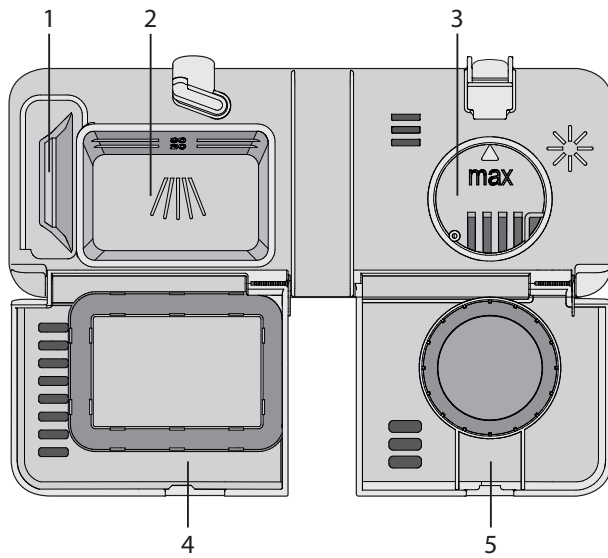

1. Prewash detergent compartment
2. Main wash detergent compartment
3. Rinse aid compartment
4. Detergent compartment lid
5. Rinse aid compartment lid

Economic dishwashing

Run programs only with a full load

Wait until the dishwasher is fully loaded before running a program, this way you save energy. Use the Rinse & Hold program to rinse the dishes if there are any unpleasant odors while you wait for the dishwasher to become fully loaded.

Run programs at a lower temperature

If the dishes are only lightly soiled, you can select a lower temperature with certain programs. See also the section Select options in the chapter Dishwashing.

Select a program with Short dry

To save energy, use Short dry. The drying result will be better if, once the program is finished, you leave the door slightly open.

Do not rinse under running water

Simply scrape off large food particles before loading the dishwasher.

Choose a green detergent

Read the environmental declaration on the packaging!

Connect to cold water...

If you use oil or electricity to heat your home.

Connect to hot water (max. 160 °F (70 °C))...

If you use district heating, solar power, or geothermal power to heat your home. Choosing a hot water connection cuts program times and reduces the dishwasher's electricity consumption.

Fragile dishes

Some cookware is not dishwasher safe. This can be for several reasons. Some materials cannot withstand high temperatures, others can be damaged by dishwasher detergent.

Fragile decoration

Porcelain with decoration on top of the glazing (the items feel rough) should not be washed in a dishwasher.

Crystal / Glass

Position items so that they do not touch each other during the wash. Use the lowest possible wash temperature and the shortest possible program. Select Short dry. Antique and very fragile items should not be washed in a dishwasher.

Glass washed in a dishwasher at high temperatures can gradually develop a gray film that cannot be removed. Wash fragile glasses at a low temperature and with a small amount of detergent.

Silver

Silver and stainless steel items should not come into contact, as the silver can become discolored.

Cutlery with glued handles

Some types of glue are not dishwasher safe. In such cases, the handles may loosen.

Wood

Wooden items should only be washed in a dishwasher if marked dishwasher safe.

Aluminum

Aluminum can lose its shine if washed in a dishwasher. However, good quality aluminum pans can be washed in a dishwasher, even if some of the shine will be lost.

Plastic items

Avoid washing plastic items that cannot withstand high temperatures.

Dishwashing

Below are step-by-step instructions to help you achieve the best possible dishwashing results.

1 Load the baskets correctly


Do not rinse dishes under running water before loading them in the dishwasher. Simply scrape off large food particles before loading the dishwasher. See the section Fragile dishes if you want to wash items that may be considered fragile.

Upper basket

Place glasses, cups, bowls, side plates, and saucers in the upper basket. Wine glasses are placed on the wine glass shelf and knives are placed in the knife stand on the right (if equipped).


NOTE!

All dirty surfaces should face in and down!

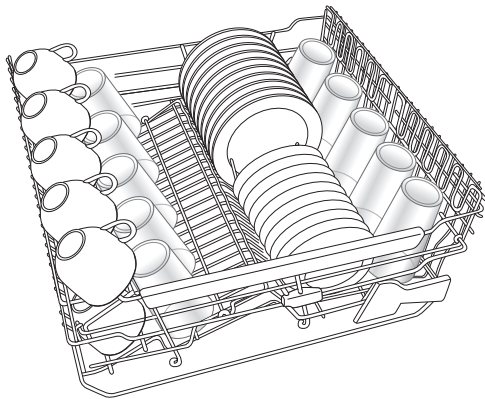

Middle basket

The middle basket's wire basket with spray pipes is suitable for short objects, such as cups, small glasses, and bowls. The middle basket's utensil basket has space for ladles, whisks, serving cutlery, and similar items.

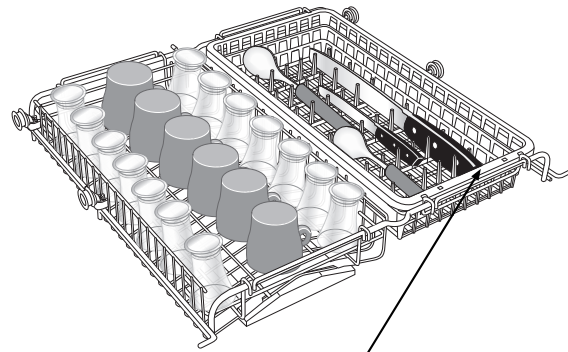

Do not place bowls or cups in the utensil basket!


The two baskets in the middle basket can be removed, or the entire middle basket can be removed, to create more space between the upper and lower baskets if larger items are being washed.

NOTE!

Fit the supplied protective cap if the wire basket with spray pipes or the entire middle basket is removed. Don't forget to remove the protective cap when the wire basket with spray pipes or the entire middle basket is reinstalled. See the section Dishwasher baskets.

Lower basket

Place plates, side plates, serving dishes, pots, and cutlery (in the cutlery basket) in the lower basket. Lower the fold-down plate supports when washing pots.

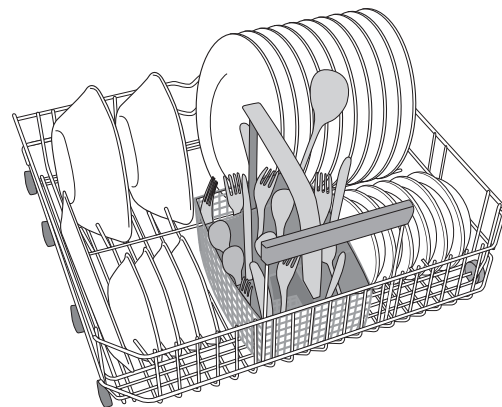

Cutlery basket

Place cutlery with the handles facing down, except for knives, and spread them out as much as possible.

Dishwashing

Ensure that spoons do not stack inside each other. The cutlery basket is placed in the lower basket.

WARNING!



Knives and other pointed items must be placed with the points down in the cutlery basket or horizontally in other baskets.

Do not place cutlery made of different materials, such as silver and stainless steel, in the same place (risk of discoloration).

The cutlery basket has a fold-down section in the middle for small items, or small shafts, such as electric whisk attachments.

2 Check that the spray arms can rotate freely

3 Add detergent

We recommend that you use only unscented, granular automatic dishwashing detergent.

Using the wrong detergent could cause flooding and/or damage your dishwasher. Do not use detergent that has been wet and is clumped. Also, check the expiration date on the container.

The amount of detergent needed can vary due to differences in water hardness. To determine the water hardness in your area, contact your local water utility or area water softening company. The harder the water, the more detergent you may need. Refer to the chart below for the recommended detergent amounts based on water hardness. Remember, you should adjust the amount of detergent you use by small amounts until you find the correct amount. Twelve grains and higher is extremely hard water and detergent alone may not be enough. You may need to use a water softener to maximize the performance of your dishwasher. Also, in areas with hard water (9+) you may need to wash at lower temperatures to prevent hard water deposits from forming in tank and wash system. In hard water areas, both the dishes and the machine can develop a white or gray film after

a while. If this happens, run the Heavy wash program with high temperature and two tablespoons of citric acid or commercially available dishwasher cleaner in the detergent compartment (with no dishes in the machine).

NOTE!

We recommend that you do not add prewash detergent for the programs Quick wash or Super Quick.

NOTE!

If you use a dishwashing detergent with a rinse aid additive, you should not fill the rinse aid dispenser. This could cause a film on your dishes.

WARNING!



Children must be supervised – dishwasher detergent is corrosive!

NOTE!

Use only dishwasher detergent! Liquid hand-washing detergent must not be used as the foam that forms prevents the dishwasher from operating effectively.

Dishwasher tablets

Halve the tablet if it is difficult to close the dispenser lid. There is a risk that the detergent will not be released properly if the lid is tight and cannot open correctly.

NOTE!

Dishwasher tablets are not recommended for short programs (less than 75 minutes). Use powder or liquid dishwasher detergent instead.

3-in-1/ All-in-one detergent

Read through the directions for these products carefully. If anything is unclear, contact the detergent manufacturer.

Dishwashing

| Recommended detergent amounts based on water hardness | |
|---|--|
| Water hardness | Detergent amounts |
| Soft (0-3 grains per gallon) | Prewash 1 teaspoon Main wash 1 to 1-1/2 tablespoons |
| Medium (4-8 grains per gallon) | Prewash 1 teaspoon Main wash 1 to 2 tablespoons |
| Hard (9+ grains*) | Prewash 1 teaspoon Main wash 2 to 3 tablespoons |
| *12 grains and higher is extremely hard water. | |

Dishwashing

4 Press the main power switch  until the display lights up

5 Select the program Press the Program selector one or more times until the desired program symbol appears on the display.



Time program

The program adapts to the specified running time or finish time. With this program, it is important to choose a time suited to how dirty the dishes are.

 0:30-1:15 Lightly soiled dishes

 1:30-2:00 Normally soiled dishes

 2:15-3:00 Heavily soiled dishes

To set the program time, see the section Select options.



Heavy wash

Program for very dirty dishes, such as pans, casserole dishes, and oven dishes. If these dishes do not completely fill the dishwasher, you can add plates and other dishes that can withstand a Heavy wash to fill out the load.



Normal wash

Use to wash normally soiled dishes, and even dishes with dried leftovers, such as plates, serving dishes, cups, glasses, and so on.



Daily wash

A program suitable for day-to-day dishwashing. This program can also clean dried leftovers, but is not intended for burnt food, such as on oven dishes.



Quick wash

This program is used for glasses and porcelain that is lightly soiled, such as coffee cups.



Super Quick

Short program lasting about 15 minutes with acceptable results for very lightly soiled dishes.



Delicate wash

If the dishes are only lightly soiled, you can select Delicate wash. This program is intended for glasses and porcelain that have just been used and as such do not require such a powerful program.

This program can be used for fragile dishes. Select Short dry if you want to be especially cautious. See also the section Fragile dishes.



Eco wash

Use when you want to save energy. For normally soiled dishes.



Upper half

You can use this program if you only have cups and glasses that need washing in the upper basket. Lightly soiled dishes can also be placed in the lower basket.



Lower half

You can use this program when you only want to wash plates and cutlery in the lower basket. Lightly soiled dishes can also be placed in the upper basket.



Mixed wash

This dishwashing program is used when you have lightly soiled dishes in the upper basket and heavily soiled dishes in the lower basket. This program adds a prewash and has a longer program time than Lower half.

Dishwashing



Rinse & Dry

This program consists of a rinse with heating and drying. This is a suitable program if, for example, you plan to make jam and want to rinse and heat clean glass jars.



Rinse & Hold

Use to rinse dishes while you wait for the dishwasher to become fully loaded.

Dishwashing

Program chart

| Program | Op-tions | Pre-washes (°F) | Main wash (°F) | Number of rinses | Final rinse temperature (°F) | Consumption values ¹⁾ | | | | | |
|---------------------------|----------|-----------------|----------------|------------------|------------------------------|-----------------------------------|----------------------|-----------------------------------|-------------------------|-----------------------------------|----------------------|
| | | | | | | Cold water ²⁾ | | | Hot water ³⁾ | | |
| | | | | | | Wash time (approx. hours:minutes) | Energy (approx. kWh) | Wash time (approx. hours:minutes) | Energy (approx. kWh) | Wash time (approx. hours:minutes) | Energy (approx. kWh) |
| Time program | - | 0-2 | max. 150 | 2-3 | max. 150 | 0:30-3:00 | 0.6-1.6 | 0:30-3:00 | 0.4-1.2 | 3:0-5.1 | |
| Heavy wash | - | 2 | 130 | 3 | 140 | 3:50 | 1.5 | 3:10 | 0.7 | 4.9 | |
| Normal wash ⁴⁾ | - | 1 | 115 | 3 | 120 | 2:30 | 1.0 | 2:00 | 0.5 | 4.2 | |
| Normal wash | | 2 | 150 | 3 | 150 | 2:30 | 1.5 | 2:05 | 0.9 | 4.8 | |
| Daily wash | - | 1 | 140 | 2 | 150 | 2:00 | 1.4 | 1:40 | 0.8 | 3.6 | |
| Quick wash | - | 0 | 85 | 2 | - | 0:20 | 0.2 | 0:20 | 0.1 | 2.6 | |
| Super Quick | - | 0 | 85 | 2 | - | 0:15 | 0.2 | 0:15 | 0.1 | 2.6 | |
| Delicate wash | - | 1 | 105 | 2 | 120 | 1:55 | 0.7 | 1:35 | 0.3 | 3.6 | |
| Eco wash | - | 1 | 120 | 2 | 120 | 2:30 | 0.9 | 2:20 | 0.5 | 3.5 | |
| Upper half | - | 1 | 130 | 2 | 140 | 2:35 | 1.5 | 2:10 | 0.7 | 3.6 | |
| Lower half | - | 1 | 130 | 2 | 140 | 2:35 | 1.5 | 2:10 | 0.7 | 3.6 | |
| Mixed wash | - | 2 | 130 | 2 | 140 | 2:55 | 1.3 | 2:40 | 0.7 | 4.1 | |
| Rinse & Dry | | 0 | - | 1 | 120 | 0:50 | 0.5 | 0:40 | 0.3 | 0.9 | |
| Rinse & Hold | - | 0 | - | 1 | - | 0:06 | 0.01 | 0:06 | 0.01 | 0.9 | |

1) Consumption values vary depending on the water supply temperature, the ambient temperature, the size of the load, the selected options, and more.

2) Connection to cold water, approx. 50 °F (10 °C).

3) Connection to hot water, approx. 120 °F (50 °C).

4) The energy label performance figures are based on this program.

Dishwashing

6 Select options











To select an option, press one of the option buttons. The field under the button lights when the option is activated. The available options depend on the selected program. Once you have started the program, the options you selected are saved for the next time you use the same program. An exception is the Delayed start option.

High temperature

Activate this option for improved dishwashing results. The machine then uses a higher temperature for the main wash. This option cannot be activated if the Time saver option is selected.

If you want to use the lower temperature, press again so that the field under the button turns off.

You can vary the temperature as shown below:

| | | |
|---|----------------|--------------------------------|
|  | Heavy wash: | 130 °F (55 °C)/ 160 °F (70 °C) |
|  | Normal wash: | 115 °F (45 °C)/ 150 °F (65 °C) |
|  | Daily wash: | 140 °F (60 °C)/ 150 °F (65 °C) |
|  | Quick wash: | 85 °F (30 °C)/ 140 °F (60 °C) |
|  | Super Quick: | 85 °F (30 °C)/ 140 °F (60 °C) |
|  | Delicate wash: | 105 °F (40 °C)/ 120 °F (50 °C) |
|  | Eco wash: | 120 °F (50 °C)/ 140 °F (60 °C) |
|  | Upper half: | 130 °F (55 °C)/ 150 °F (65 °C) |
|  | Lower half: | 130 °F (55 °C)/ 150 °F (65 °C) |
|  | Mixed wash: | 130 °F (55 °C)/ 150 °F (65 °C) |

Long dry

A higher temperature in the final rinse and a longer drying phase improves the drying result if you activate the Long dry option. This causes a slight increase in energy consumption. This option can be used with all programs except Time program, Rinse & Dry, and Rinse & Hold. This option cannot be activated if the Time saver option is selected.

If you want a program with Short dry, press again so that the field under the button turns off.

Delayed start

When you select Delayed start, the dishwasher will start 1-24 hours after you press the Start/Stop button.

1. Press the button once to activate Delayed start. Press the button several times – or hold it in – to set the desired number of hours.
2. Press Start/Stop and the dishwasher counts down 1 hour at a time and starts after the selected delay.

Press and hold Start/Stop for three seconds if you want to cancel the Delayed start option.

NOTE!

Remember to press the Start/Stop button to start the program.


Set Set time

Press the option button several times – or hold it in – to set the desired program time for Time program. You can choose a program time between 30 minutes and 3 hours.

Time saver

This option shortens the program time, but uses more energy and water. This option can be selected with the Heavy wash, Normal wash, Daily wash, Upper half, Lower half, and Mixed wash programs.

7 Press Start/Stop and close the door

The display flashes three times with the remaining time to indicate that the program has started. Close the door properly, otherwise the dishwasher will not start. The display indicates  if the door is open.

NOTE!

If the machine does not start within 2 minutes of the last button press, the display returns to showing the last program run.

Dishwashing

Stopping or changing a program

If you want to change programs after starting the dishwasher, open the door then press and hold Start/Stop for three seconds. Add more detergent if the lid of the detergent dispenser has opened. Then choose a new program, press Start/Stop, and close the door.

Do you want to add more dishes?

Open the door. The dishwasher stops automatically. Add the dishes, close the door, and the dishwasher resumes the program.

If the dishwasher is turned off using the main power switch or due to a power failure

If the program was not finished, the interrupted program resumes when power is restored.

NOTE!

During drying, the program is interrupted if the power is cut or the door is open for more than 2 minutes.

8 After dishwashing

Once the program has finished, "End" appears on the display.


A buzzer also sounds at the end of the program. See the section Settings, which describes how to change this function.

A status light also indicates the end of the program. See the section Status light.

Once the dishwasher has finished, it uses only standby power. Turn off the dishwasher using the main power switch if you want to completely cut the power. Turn off the water supply valve after each use.


Settings

Do as follows to open the settings menu:




1. First, open the door. Turn off the dishwasher using the main power switch (press and hold). Release the button.
2. Press and hold the main power switch until the display lights up.
3. Within five seconds, press and hold the Program selector and the Long dry button.
4. Release the buttons when the display shows  SET.

TIP!

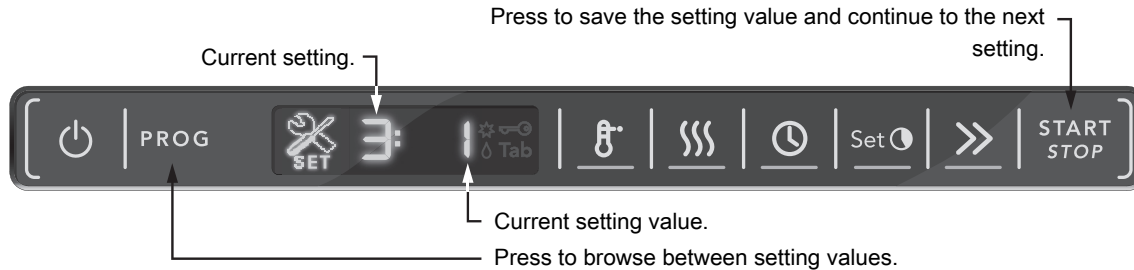







Be sure to press right on the symbols, so as not to inadvertently activate any other button. Try again if you fail to open the settings menu the first time.



You can now adjust the following settings:

| Button press | Options | Settings | Description |
|--|---|------------------------------------|---|
|  PROG | † □ (Off) † I (On) | Child lock (button lock) | You can activate the child lock (button lock) option to prevent children from starting the dishwasher. Press the High temperature and Long dry buttons simultaneously to temporarily deactivate the button lock when you want to start the dishwasher. The button lock is automatically reactivated after 2 minutes.  |
|  START STOP | Press Start/Stop to save the setting value and continue to the next setting. If you do not want to change any other settings, keep pressing Start/Stop to step through the entire settings menu. | | |

Settings

| Button press | Options | Settings | Description |
|--|--|-------------------------|---|
| PROG  | 2: 0 (Off) | Buzzer volume | The dishwasher uses a buzzer to indicate when a program is finished or when a fault has occurred. |
| | 2: 1 (Low) | | |
| | 2: 2 | | |
| | 2: 3 | | |
| | 2: 4 (High) | | |
| START STOP  | Press Start/Stop to save the setting value and continue to the next setting. | | |
| PROG  | 3: 0 (Off) | Operation volume | This sound is used to confirm each button press. |
| | 3: 1 (Low) | | |
| | 3: 2 | | |
| | 3: 3 | | |
| | 3: 4 (High) | | |
| START STOP  | Press Start/Stop to save the setting value and continue to the next setting. | | |
| PROG  | 5:- 1 (Low) | LCD contrast | For adjusting the contrast of the display on the panel. |
| | 5: 0 | | |
| | 5: 1 | | |
| | 5: 2 | | |
| | 5: 3 (High) | | |
| START STOP  | Press Start/Stop to save the setting value and continue to the next setting. | | |
| PROG  | 6: 0 (Off) | Rinse aid | Rinse aid dosage setting. |
| | 6: 1 (Low dosage) | | |
| | 6: 2 | | |
| | 6: 3 | | |
| | 6: 4 | | |
| | 6: 5 | | |
| | 6: 6 (High dosage) | | |
| START STOP  | Press Start/Stop to exit the settings menu. | | |

Time remaining

Once you have selected a program and options, the display indicates how long the program took the last time it was used. Once you have started the dishwasher, the display indicates how much program time remains. The remaining time is updated after the water for the final rinse has been heated.

This may differ somewhat from time to time depending on the temperature of the water supply, the amount of dishes, the ambient temperature, and other factors.


While the program is running, the time counts down and the remaining program time is shown on the display. The remaining time is shown, for example, as 1:15, which means the program will run for another 1 hour and 15 minutes.

NOTE!

During the first run of each program, the remaining time displayed can be slightly misleading, as the dishwasher is estimating the time. When you run the program a second time, the dishwasher will calculate the remaining time based on the previous duration of the program.

Status light

The status light at the bottom on the dishwasher provides information by means of 3 different colors. Adjust the status light so that it is seen clearly by pulling out or pushing in the transparent plastic strip.

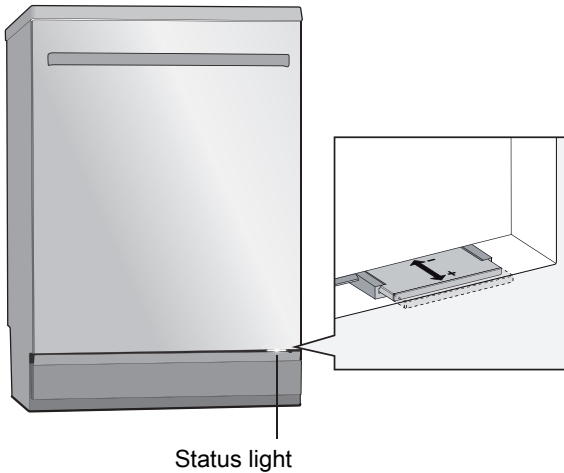

Blue

Load more. The program has started, but you can still load more dishes.

Red

Do not load. You should not load more dishes (risk of poor dishwashing result).

Flashing red


This indicates a fault. See further in the sections Error messages and Troubleshooting.

Green

Unload. The dishwashing program is finished. Standby light for two hours.

Care and maintenance instructions


The dishwasher tub is made of stainless steel and is kept clean through normal use. However, if you have hard water, limescale deposits may form in the dishwasher. If this happens, run the Heavy wash program with high temperature and two tablespoons of citric acid or commercially available dishwasher cleaner in the detergent compartment (with no dishes in the machine).

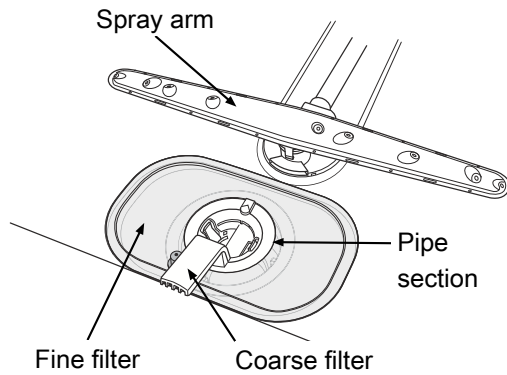

Coarse filter

The coarse filter traps larger food particles, which cannot get past the drain pump. Empty the coarse filter as necessary.


1. Lift the coarse filter by the handle.
2. Empty the coarse filter. Remember to replace it!

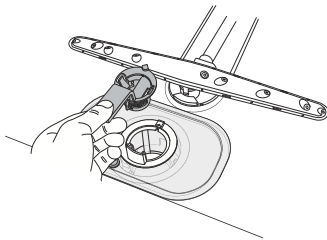


Fine filter

Debris that collects on the fine filter is automatically rinsed away during each wash. However, the fine filter and its pipe section should be cleaned a couple of times a year.


1. Turn the handle counterclockwise once.

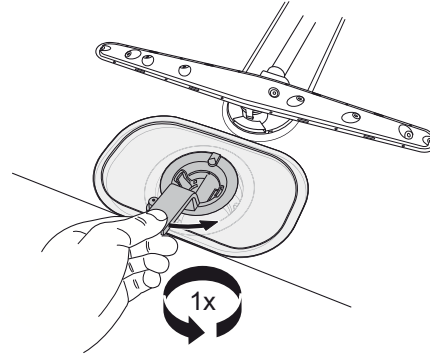

2. Lift the pipe section straight up by the handle. Free the coarse filter to clean the pipe section.
3. Remove and clean the fine filter.
4. Replace in reverse order. Check that the edges seal properly when replacing the fine filter.

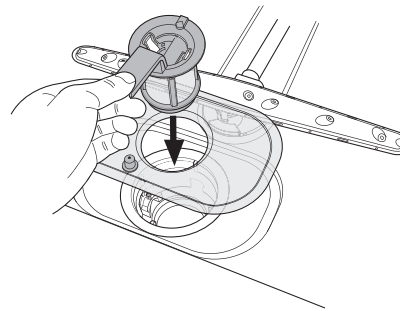

5. Lock the filter in place by turning the handle clockwise to the stop position. The handle should point straight out from the dishwasher.

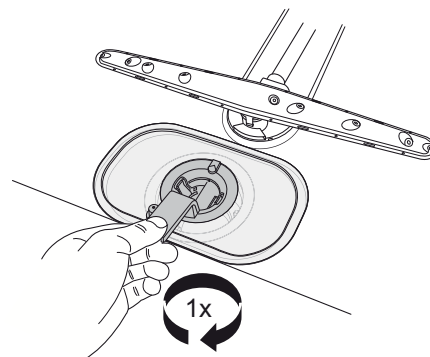

NOTE!

The dishwasher must not be used without the filter in place!


Dishwashing efficiency can be affected if the coarse filter is incorrectly fitted.

Care and maintenance instructions


Drain pump

The pump can be accessed from inside the dishwasher.

1. Cut the power to the dishwasher by unplugging the unit from the power outlet.
2. Remove the coarse filter and pipe section.
3. Remove the small yellow drain pump access cover at the left of the bottom drain (see illustration below).

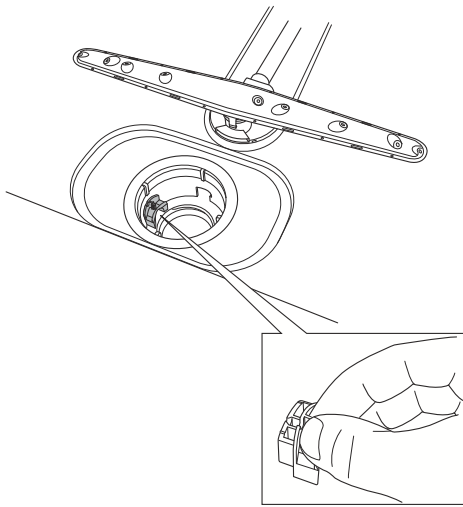

4. By inserting your finger into the hole, you can turn the pump blades to release anything blocking the pump.
5. Reinstall the access cover and filters.
6. Plug the machine in again.

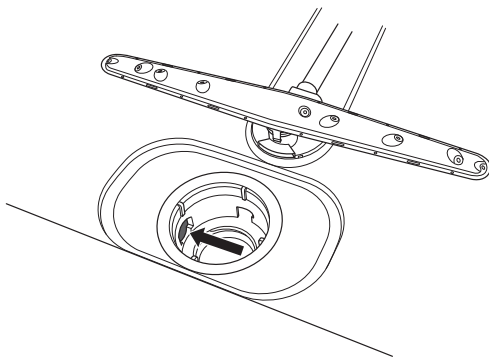


If the dishwasher still does not start and a whirring sound is heard, the overflow protection has been triggered.

- Shut off the water.
- Unplug the unit from the power outlet.
- Call the Customer Care Center.

NOTE!


Do not forget to reinstall the drain pump access cover.

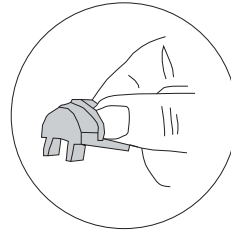

Lower spray arm

Holes and bearings can sometimes become blocked.


1. Pull the lower spray arm straight up to release it.
2. Remove any debris using a needle, toothpick, or some other similar pointed device. The spray arms also have holes underneath.

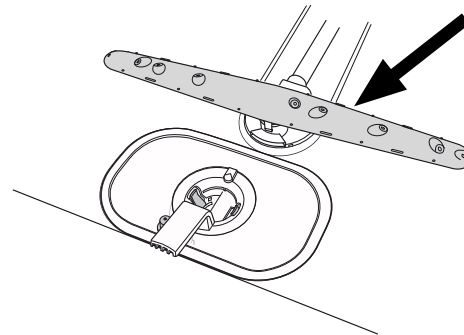

Care and maintenance instructions

Upper spray arm


1. Pull out the basket.
2. Unscrew the spray arm bearings as illustrated to remove the spray arm from the upper basket.

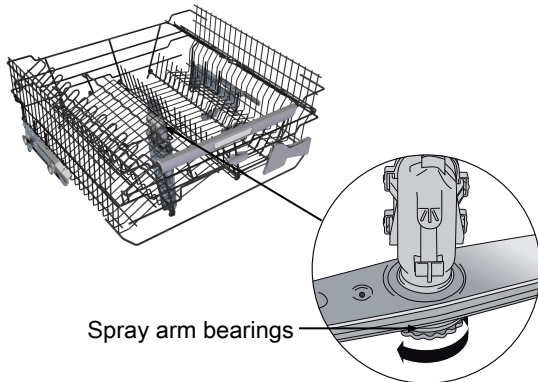

3. Clean the upper spray arm in the same manner as the lower spray arm.
4. Replace the spray arm and screw the spray arm bearings firmly back into place.

Cleaning the middle basket

1. Pull out the basket.
2. Check the holes in the spray pipe.

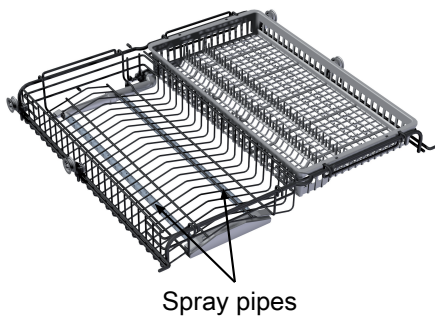

3. Clean with a needle or similar pointed object.


Door

When cleaning the edge around the door, use only a slightly damp cloth (with a little cleaner if necessary).

WARNING!



Do not use a spray bottle or the like around the door lock. This is to ensure that water does not penetrate the door catch and come into contact with the electrical components.

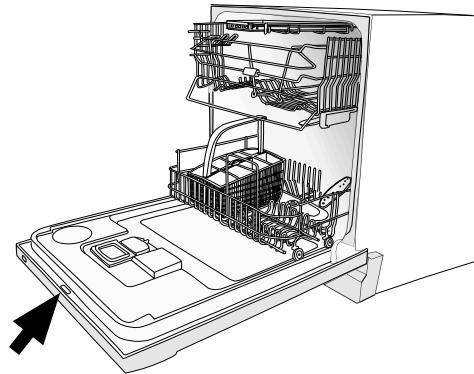

Rinse aid




Drying is faster if you use rinse aid. When the rinse aid needs topping up, the above symbol lights on the display.


Top up with rinse aid

Top up with rinse aid as follows:

1. Open the rinse aid compartment lid.

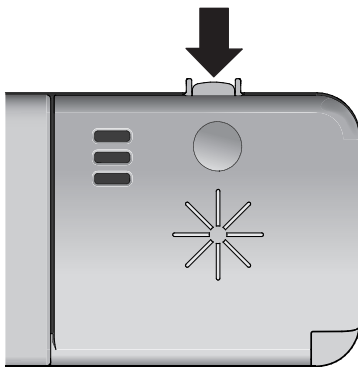

2. Carefully top up with rinse aid. Only add rinse aid to the level marked **max**.

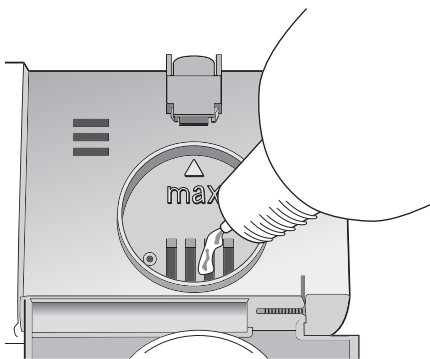

3. Wipe up any spilled rinse aid around the compartment.
4. Close the lid firmly.

NOTE!

After topping up, it may take a while before the symbol goes out.

Select dosage

The rinse aid dispenser can be adjusted between 0 (off) and 6.

Increase the rinse aid dosage:

- If the dishes have water marks.

Reduce the rinse aid dosage:

- If the dishes have a sticky white/blue film.
- If the dishes are streaked.
- Heavy foaming. If you have very soft water, the rinse aid can be diluted 50:50 with water.

Set the dosage

The section Settings describes how to set the rinse aid dosage.

Error messages

| Display | Type of fault | Action |
|---------|---------------------|---|
| F: 10 | Overfilling | Call the Customer Care Center. |
| F: 11 | Water outlet fault | See "Possible causes" in the chapter Troubleshooting. |
| F: 12 | Water inlet fault | Check that the water supply valve is on. |
| F:40 | Inlet valve leakage | Turn off the water supply valve and call the Customer Care Center |

Turn off the machine with the main power switch and then turn it on again to clear the error message from the display.


Troubleshooting

| Problem | Possible causes | Action |
|---|--|---|
| The dishes are not clean. | The spray arms do not rotate. | Remove the arms and clean them. Check that the dishes are not blocking the spray arms. |
| | Detergent is too old. Detergent is a perishable product. | Avoid large packages. |
| | Incorrect detergent dosage. | Dose according to water hardness. Far too much or far too little detergent can result in poor dishwashing results. |
| | Dishwashing program too weak. | Select a higher temperature or a more powerful program. |
| | Dishes loaded incorrectly. | Do not cover dishes with large bowls or lids. Avoid placing very tall glasses in the corners of the baskets. |
| | Glasses and cups have toppled over during the program. | Load the dishes securely. |
| | The filter is not correctly fitted. | Screw the filter firmly into place. See the section Care and maintenance instructions. |
| Spots or films on the dishes. | Incorrect rinse aid dosage setting. | See the sections Rinse aid and Settings. |
| | Too high temperature and/or too much detergent can cause etching on crystal. Unfortunately, this cannot be repaired, only prevented. | Wash crystal at a low temperature and with a conservative amount of detergent. Contact the detergent manufacturer. |
| The dishes have a sticky white/blue film. | Rinse aid dosage setting too high. | Reduce the amount. See the sections Rinse aid and Settings. If you have very soft water, you may want to dilute the rinse aid 50:50 with water. |
| Spots on stainless steel or silver. | Some types of food, such as mustard, mayonnaise, lemon, vinegar, salt, and dressings, can cause spots on stainless steel if left for too long. | Rinse off these types of food if not starting the dishwasher immediately. Or why not run the Rinse & Hold program? |
| | All stainless steel can cause spots on silver if they come into contact during dishwashing. Aluminum can also cause spots on dishes. | Silver and stainless steel items should not come into contact during dishwashing. |
| Spots left after washing. | Lipstick and tea can be difficult to wash off. | Use a detergent with a bleaching agent. |
| Rattling sound when dishwashing. | The dishes are not correctly placed or the spray arms are not rotating. | Check that the dishes are placed securely. Spin the spray arms to make sure they can rotate. |

Troubleshooting

| Problem | Possible causes | Action |
|--|--|--|
| The dishwasher does not start. | You have forgotten to turn on the main power switch. | Press and hold the main power switch until the display lights up. |
| | The door is not properly closed. | Check. |
| | A fuse/circuit breaker has been tripped. | Check. |
| | The plug is not plugged into the power outlet. | Check. |
| | The water supply valve is turned off. | Check. |
| | Overflow/leaks. | Check. |
| | A whirring sound (the drain pump) is heard from the dishwasher and does not stop when the main power switch is turned off. | Turn off the water supply valve. Pull out the plug and call the Customer Care Center. |
| | Check that the Delayed start option has not been selected. | Press and hold Start/Stop for three seconds if you want to cancel the Delayed start option. |
| 1 minute appears on the display. | The program is taking longer than estimated. | None. Next time the program is run, the corrected time will be displayed. |
| Water remains in the dishwasher above the filters. | Blocked drain hose. | Loosen the drain hose from where it terminates. Check that no debris has clogged the hose. Is the cone-shaped part of the drain boot cut to the maximum size of the fitting where it attaches? |
| | Kink in drain hose. | Check that the hose is free from kinks and sharp bends. |
| | The filters are blocked. | Clean the coarse and fine filters. |
| | Debris in the drain pump. | Clean the drain pump. See the section Care and maintenance instructions. |
| Bad odor in dishwasher. | Dirt around the seals and in corners. | Clean with dish brush and low foaming cleaner. |
| | Low temperature programs have been selected for a prolonged period. | Run a program with a higher temperature about once a month. |
| The dishes are not dry enough. | Drying power too low. | Activate the Long dry option. |
| | The dishwasher is not fully loaded. | Fully load the dishwasher. |
| | Rinse aid needs topping up or dosage is set too low. | Top up with rinse add or increase the rinse aid dosage. See the sections Rinse aid and Settings. |
| | | Open the door a little once the program has finished. |

Troubleshooting

| Problem | Possible causes | Action |
|--|---|--|
| Cannot close door. | The baskets are not correctly positioned. | Check that the baskets are correctly positioned horizontally, and that the middle basket's water connector is in line with its spray pipe. |
| | | Check that the dishes are not blocking the baskets from sliding properly into place. |
| The touch buttons do not react when pressed. | You have pressed the touch buttons too soon after opening the door. | Wait a moment then try again. |
| | Dirt on the touch buttons. | Clean with a dry or slightly damp cloth. |
| |  If this symbol appears on the display, the door is not open enough. | Open the door until the display lights up. |
| | Child lock (button lock) activated. | See the section Settings. |

Technical information

Information for test institute

Energy standard

USA: Energy label FTC, 10 CFR Part 430
Wash performance ANSI/AHAM DW-1-2005


CAN: Energy label CSA C 373-04

Program for test: Normal wash 115 °F (45 °C), No Options


Dosages during testing

Rinse aid dosage: 3

Loading for wash performance test

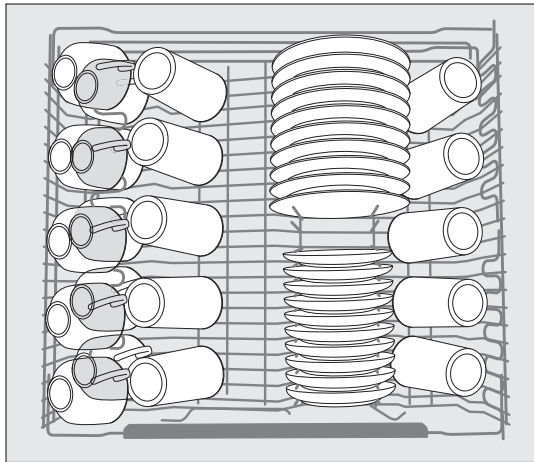

Upper basket with 10 place settings AHAM DW-1
Ensure the upper basket is set to its lowest position.

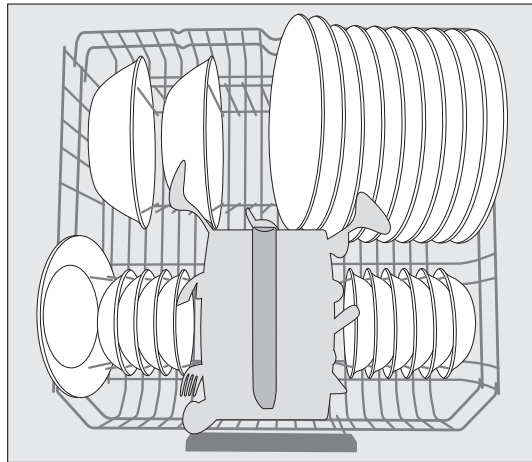

Lower basket with 10 place settings AHAM DW-1

Technical data

| | |
|------------------------|---|
| Height: | 33-7/8" - 36" (860-914 mm) |
| Width: | 23-5/8" (600 mm) |
| Depth: | 22-7/8" (581 mm) |
| Weight: | 110 lb (50 kg) ¹⁾ |
| Water pressure: | 4.2–140 psi |
| Electrical connection: | See serial number tag and rating plate. |
| Rated power: | See serial number tag and rating plate. |

1) Weight can vary due to different specifications.

Service

It is important to register your product warranty by logging onto "<http://www.askousa.com/customer-care/register-my-appliance/>" and filling out all required fields within 90 days from the date of purchase. After doing so, you will be e-mailed a certificate that will extend the original warranty for one additional year. If you do not have access to the internet, complete the warranty card included with the product and mail it to the address on the warranty card within 90 days from the date of purchase. Cosmetic damage must be reported to your dealer within five days from the date of purchase. After unpacking the washer, thoroughly check the unit for cosmetic damage.

| For residential installations only | ASKO Appliances Inc. will pay for: |
|---|--|
| Length of warranty Two-Year Full From date of purchase. | ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be provided by an authorized ASKO service agent. |
| Third Year Full Complete your product warranty registration online at " http://www.askousa.com/customer-care/register-my-appliance/ " within 90 days from the date of purchase to extend the original warranty one additional year. If you do not have access to the internet, complete the warranty card included with the product and mail it to the address on the warranty card within 90 days from the date of purchase. | ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be performed by an authorized ASKO service agent. |
| Lifetime | ASKO replacement parts (labor cost not included) for the stainless steel tank if it exhibits a manufacturing defect such as cracking or rusting through. Service must be provided by an authorized ASKO service agent. |
| For non-residential installations One-year Full Warranty From date of purchase. | ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be provided by an authorized ASKO service agent. |

Service

Warranty

ASKO Appliances Inc. will not pay for:

1. Service calls to:
 - Correct the installation of the appliance.
 - Repair damage due to shipment, delivery, installation, misuse or abuse.
 - Instruct how to use the appliance.
 - Replace house fuses or correct house wiring.
 - Correct house plumbing, including drainage problems related to improper installation.
 - Clean or service air device in drain line.
2. Repair and/or replacement parts for failure of product if appliance is used for other than home/residential use.
3. Damage resulting from accident, fire, floods, acts of God, alteration, misuse, abuse, improper installation, or installation not in accordance with local electrical or plumbing codes.
4. Any shipping costs for parts during the limited warranty period.
5. Replacement parts or repair labor costs for units operated outside the continental United States.
6. Pickup and delivery. ASKO washers are designed to be repaired in the home.

In no event shall ASKO Appliances Inc. be responsible for any incidental or consequential damages.

Some states will not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

For warranty service, contact our Customer Care Center at the number listed below.

Before calling for service or contacting ASKO Appliances Inc. regarding a warranty issue, make a note of the model, type name, and serial number.

How to contact ASKO Appliances Inc.

Write to us at:

ASKO Appliances Inc.
P.O. Box 940609
Plano, TX 75094-0609
www.askousa.com

Or contact our

Customer Care Center at
1-800-898-1879
www.askousa.com

Quick guide

1 Load the baskets

Do not rinse dishes under running water before loading them in the dishwasher. Simply scrape off large food particles before loading the dishwasher.

2 Add detergent

The detergent compartment has one smaller compartment for the prewash and one for the main wash.

3 Check that the spray arms can rotate freely

4 Press the main power switch until the display lights up

5 Select a program and any options

6 Press Start/Stop and close the door