

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 2000001150 Owner's Manual

[Shop genuine replacement parts for Coleman
2000001150](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----

TO INSTALL OR REPLACE BATTERIES

Your new lantern operates on 8 "D" cell batteries. For longest life, use alkaline batteries.

CAUTION: DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE BATTERIES. RESULT COULD LEAD TO OVER-HEATED CIRCUIT AND DAMAGE TO LANTERN.

1. With lantern off, turn upside down and unscrew base by rotating counterclockwise.
2. Install 8 batteries in the correct orientation as shown on the battery housing. Always be careful that all 8 batteries are installed correctly. (Fig. 1.)
3. Replace base by screwing clockwise until hand tight. Check that base is securely installed in closed position.

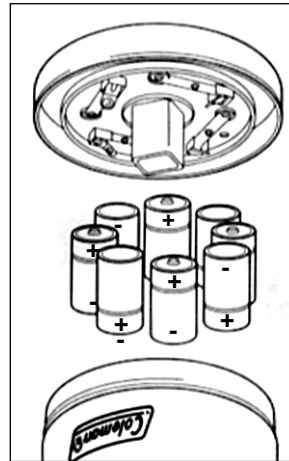


Fig. 1

MISE EN PLACE OU REMPLACEMENT DES PILES

Votre nouvelle lanterne est alimentée par 8 piles « D ». Les piles alcalines procurent l'autonomie la plus longue.

ATTENTION: N'UTILISEZ PAS EN MÊME TEMPS DES VIEILLES PILES ET DES PILES NEUVES. NE MÉLANGEZ PAS DES PILES ALCALINES, STANDARD (LECLANCHÉ) ET RECHARGEABLES. CECI RISQUERAIT DE FAIRE SURCHAUFFER LE CIRCUIT ET D'ENTRAÎNER L'ENDOMMAGEMENT DE LA LANTERNE.

1. Mettez la lanterne éteinte sens dessus dessous et dévissez la base en la tournant en sens antihoraire (sens contraire des aiguilles d'une montre).
2. Placez les 8 piles tel qu'illustré, en les orientant exactement tel qu'indiqué dans le logement des piles. Vérifiez toujours que les 8 piles soient correctement placées. (Fig. 1)
3. Remplacez la base de la lanterne en la vissant en sens horaire, à la main. Assurez-vous qu'elle soit bien vissée et fermée.

TO OPERATE IN LANTERN MODE

1. To turn lantern "ON", press On/Off Switch on top of lantern (Fig. 2). All four Removable Area Lights will turn on for 360° of area lighting.
2. To turn lantern off, press On/Off Switch once again.

FONCTIONNEMENT AU MODE LANTERNE

1. Pour ALLUMER la lanterne, pressez l'interrupteur du dessus de la lanterne. (Fig. 1) Les quatre plaques lumineuses amovibles s'allumeront, formant une lampe d'ambiance qui éclaire sur 360°.
2. Pressez l'interrupteur une fois de plus pour éteindre la lanterne.



Fig. 2

TO OPERATE REMOVABLE AREA

One or more Removable Area Lights can be removed from the "Docking Station", and then be returned to the lantern.

1. Push in Release Button located on back of Removable Area Light to release from locked/charging position.
2. Lift out Removable Area Light. (Fig. 6)
NOTE: If the Lantern Mode is "ON", the Removable Area Light will be approximately 1.5 hours once detached from the lantern "Docking Station", the Nickel-Metal Hydride (NiMH) 8 "D" cell batteries located in the lantern.
3. The Removable Area Lights are designed to be used in "Docking Station" position. (Fig. 6 & 7)
4. Return Removable Area Light to "Docking Station" position. (Fig. 8)
NOTE: Once the Removable Area Light is returned to the "Docking Station", it over-rides the Removable Area Light Mode.

UTILISATION D'UNE (DES) PLAQUE(S)

Retirées de la « station d'accueil », les plaques lumineuses amovibles ont une autonomie plus longue. Il suffit de les replacer sur la lanterne.

1. Pressez le bouton de dégagement de la plaque lumineuse amovible sur la poignée vers l'avant pour libérer la plaque lumineuse amovible.
2. Levez la plaque lumineuse amovible de la lanterne.
REMARQUE: Si la lanterne est réglée sur le mode "LANTERNE", les plaques lumineuses amovibles continueront à illuminer.
3. Pressez l'interrupteur de la face arrière de la plaque lumineuse amovible pour ALLUMER, mais aussi pour ÉTEINDRE la lanterne.
REMARQUE: Les batteries au nickel-métal-hydrure (NiMH) ont une autonomie approximative de 1.5 heures. Une fois la plaque replacée sur la « station d'accueil », la lanterne rechargera les batteries.
4. Les plaques lumineuses amovibles sont conçues pour être utilisées sur une surface plane. (Fig. 6 et 7)
5. Remplacez la plaque lumineuse amovible sur la « station d'accueil » de la lanterne et tournez la poignée pour la remettre en position de verrouillage. (Fig. 8)
REMARQUE: Une fois la plaque lumineuse amovible remise en place sur la « station d'accueil », l'interrupteur de la lanterne a la priorité sur l'interrupteur de la plaque lumineuse amovible.