LANDMANN

pizza kettle

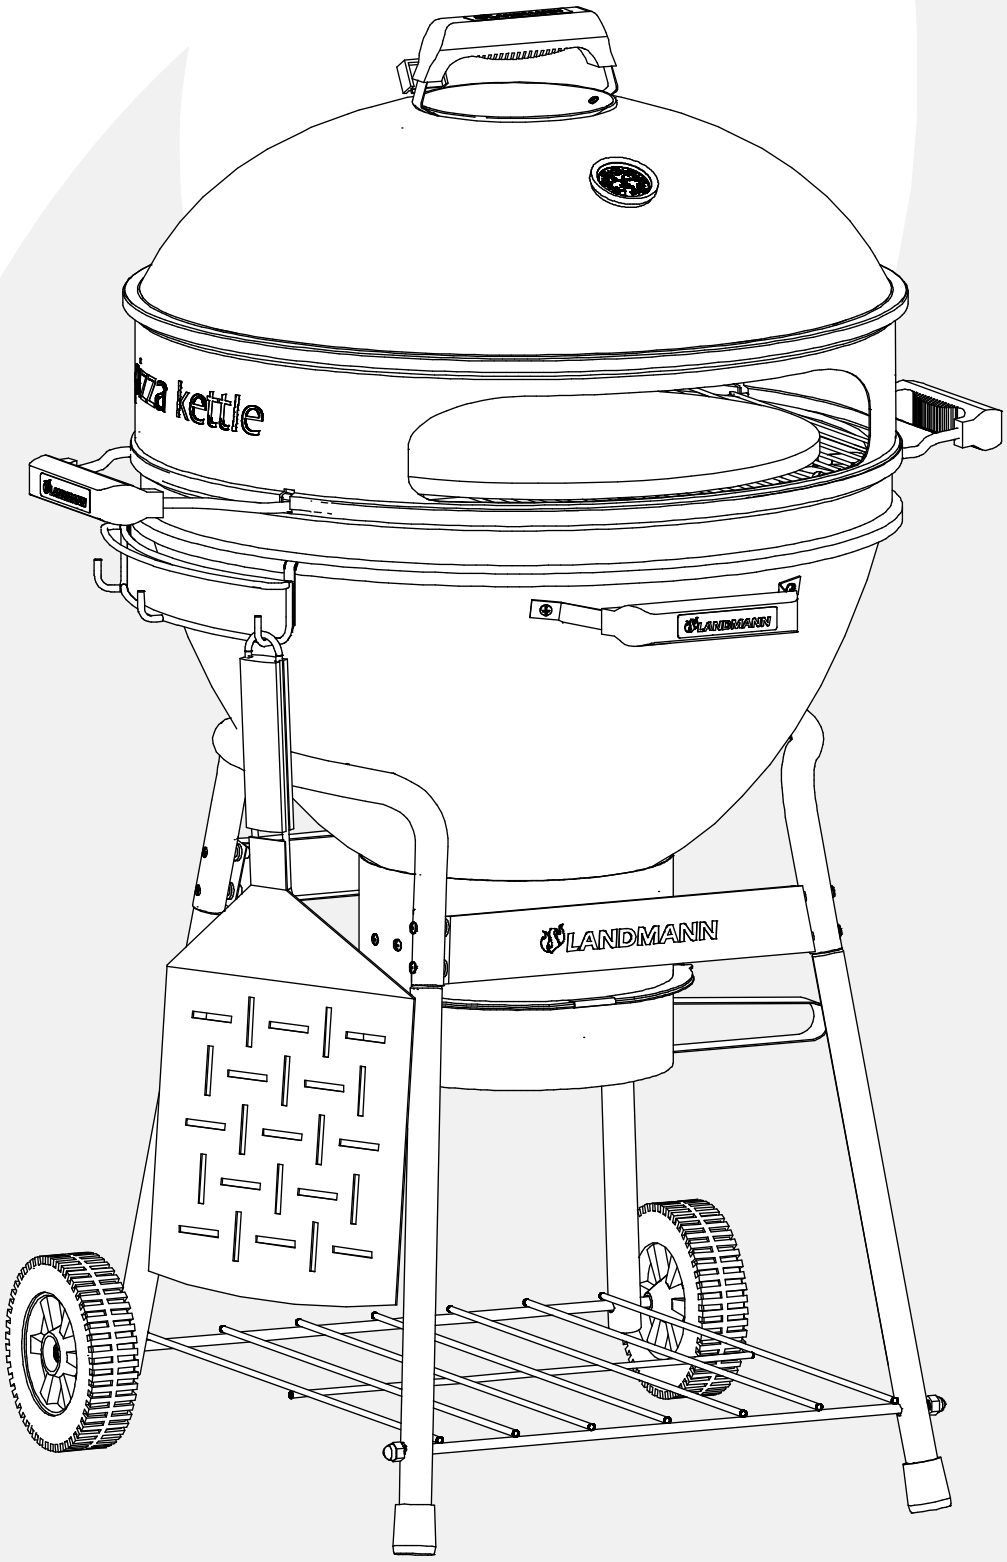

Pizza Kettle
Charcoal Grill

Assembly and Operating Instructions for Model:
525105
525110

VER. 5, 7/11/2014

PLEASE READ ALL RULES FOR SAFE OPERATION AND FOOD SAFETY BEFORE USING.

READ FIRST!
RULES FOR PIZZA KETTLE CHARCOAL GRILL SAFE OPERATION.

- WARNING! THE GRILL IS FOR OUTDOOR USE ONLY!
- WARNING! THIS GRILL GETS EXTREMELY HOT DURING USE! USE EXTREME CAUTION AROUND THE GRILL.
- EXTREME HEAT WARNING! DURING USE EXTREME HEAT EXITS OUT OF THE PIZZA RING OPENING! KEEP CLEAR! USE PIZZA PEEL TO PLACE AND REMOVE PIZZAS. USE GLOVES IF NECESSARY.
- WARNING! NEVER USE GASOLINE, ALCOHOL OR VOLATILE FLUIDS TO START OR RESTART FIRES. USE CHARCOAL LIGHTER FLUID ONLY TO START CHARCOAL. READ AND FOLLOW CHARCOAL LIGHTER FLUID MANUFACTURER INSTRUCTIONS CLOSELY
- WARNING! DO NOT OPERATE GRILL WITHOUT ASH CATCHER IN PLACE, DO NOT OPEN ASH CATCHER DURING USE
- IMPORTANT! LID VENT MUST BE KEPT CLOSED WHEN COOKING PIZZAS
- DO NOT SUBJECT THE PIZZA STONE TO EXTREME TEMPERATURE CHANGES. ALLOW STONE TO COOL ON ITS OWN AND NEVER POUR WATER ON A HOT STONE
- DO NOT USE THE PIZZA PEEL TO PICK UP THE PIZZA STONE
- HANDLE THE STONE WITH CARE, IT WILL CHIP OR BREAK IF IT IS MISHANDLED OR DROPPED
- TWO PERSONS ARE RECOMMENDED TO REMOVE THE COOKING GRATE FROM THE GRILL IF MORE FUEL IS NEEDED. DO NOT LEAN OVER THE GRILL. DO NOT LEAN OVER THE PIZZA RING OPENING.
- DO NOT OVERLOAD THE GRILL OR USE MORE FUEL THAN THE SUGGESTED AMOUNT.
- KEEP THE GRILL A MINIMUM OF 10 FT. AWAY FROM BUILDINGS, STRUCTURES, ANY FLAMMABLE ITEMS AND VEHICLES DURING USE
- NEVER USE THE GRILL UNDER COVERED PORCHES, AWNINGS, LOW HANGING TREE BRANCHES, TRELLIS, OR OVERHANGS OF ANY KIND.
- NEVER USE INSIDE ENCLOSED AREAS SUCH PATIOS, GARAGES, ENCLOSED ROOMS, BUILDINGS OR TENTS
- ALWAYS USE THE GRILL ON A HARD, STABLE AND LEVEL SURFACE
- THE GRILL IS FOR ADULT USE ONLY.
- DO NOT STORE LIGHTER FLUID OR OTHER FLAMMABLE LIQUIDS OR MATERIALS ON THE BOTTOM SHELF.
- KEEP CHILDREN AND PETS AWAY WHILE THE GRILL IS BEING USED.
- MITTENS OR GLOVES WILL BE NEEDED TO REMOVE THE LID AS SURFACES WILL BE HOT.
- MOST SURFACES OF THIS GRILL BECOME EXTREMELY HOT, USE CAUTION.
- DO NOT MOVE THE GRILL WHILE IT IS BEING USED.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE
- DO NOT USE IN WINDY CONDITIONS
- USE CAUTION WHEN OPENING THE LID AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS
- BEFORE EACH USE, MAKE SURE THE GRILL IS IN GOOD WORKING CONDITION.
- FOR LONGER PRODUCT LIFE, KEEP THE CHARCOAL AND WOOD FIRES TO A RESPECTABLE SIZE, DO NOT OVERLOAD.
- DO NOT ALTER THE GRILL IN ANY WAY.
- DO NOT USE THE GRILL UNTIL IT IS COMPLETELY ASSEMBLED WITH ALL PARTS SECURELY TIGHTENED
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED- SURFACES WILL REMAIN HOT FOR SOME TIME.
- BE SURE ALL COALS ARE COLD BEFORE DISPOSING.
- DISPOSE OF COALS PROPERLY
- THE GRILL MUST BE COMPLETELY COOLED OFF AND ALL EMBERS MUST BE EXTINGUISHED BEFORE ANY COVER CAN BE USED.

FOOD SAFETY

- RAW MEAT AND POULTRY HAS TO BE KEPT SEPARATE FROM READY TO EAT FOOD.
- USE CLEAN PLATTERS AND UTENSILS FOR HANDLING COOKED FOODS
- COOK POULTRY AND MEATS THOROUGHLY TO KILL BACTERIA.
- USE INSTANT-READ THERMOMETER TO ENSURE PROPER INTERNAL FOOD TEMPERATURES
- KEEP PREPARED FOOD AND LEFTOVERS REFRIGERATED
- WASH HANDS, UTENSILS AND SURFACES WITH SOAP AND HOT WATER PRIOR TO AND AFTER HANDLING RAW MEAT AND POULTRY.

WARNING!

CARBON MONOXIDE HAZARD!

BURNING WOOD OR CHARCOAL PRODUCES CARBON MONOXIDE, WHICH HAS NO ODOR AND CAN CAUSE DEATH IF BURNED IN ENCLOSED AREAS. NEVER BURN WOOD OR CHARCOAL INSIDE HOMES, VEHICLES, TENTS OR ANY OTHER ENCLOSED AREAS

HARDWARE AND SMALL PART LISTING


x 8

AA
(8) M6 x 35MM BOLT


x 8

BB
(8) M6 x 15MM BOLT


x 1

CC
(1) M6 x 12MM BOLT


x 6

DD
(6) M5 x 10MM BOLT


x 2

EE
(2) M4 x 12MM BOLT

x 2

GG
(2) M4 HEXNUT

x 6

HH
(6) M5 HEXNUT

x 3

JJ
(3) M6 HEXNUT


x 2

KK
(2) M8 LOCKING HEXNUT

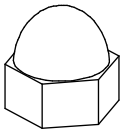
x 2

LL
(2) M8 CAPNUT


x 2

MM
(2) 16MM BLACK WASHER

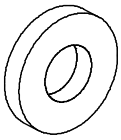
x 2

NN
(2) 16MM WASHER

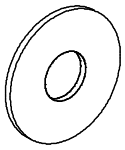
x 8

PP
(8) 18MM BLACK WASHER

x 5

RR
(5) 12MM BLACK WASHER

x 2

SS
(2) 9MM BLACK WASHER

x 1

TT
(1) LOCK WASHER

x 2

UU
(2) LOCK WASHER

PART LISTING

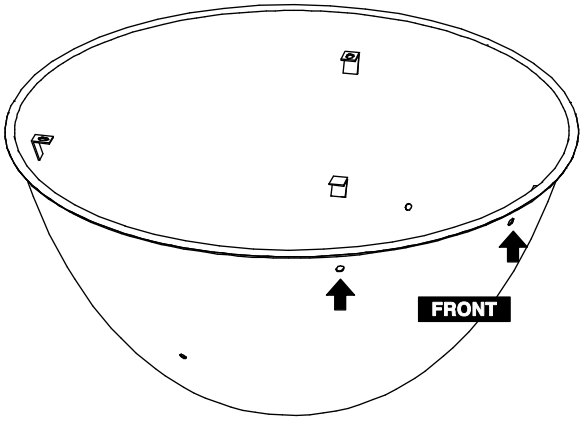

A
(1) FIREBOWL

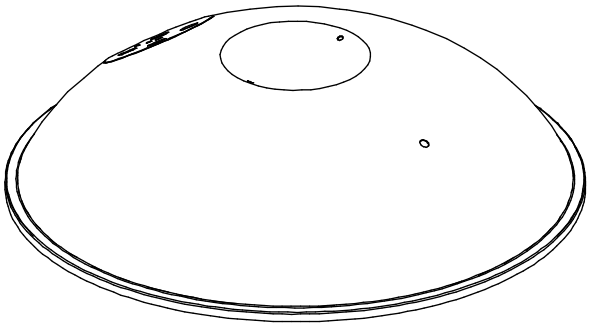

B
(1) LID

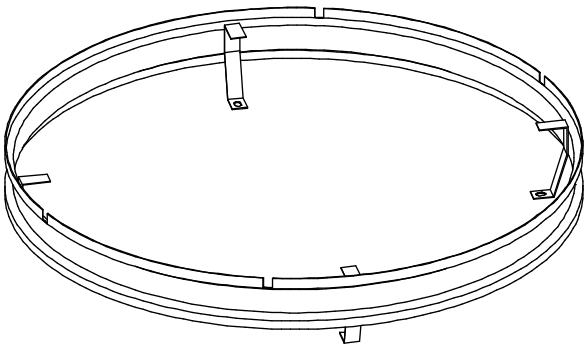

C
(1) LOCKING RING

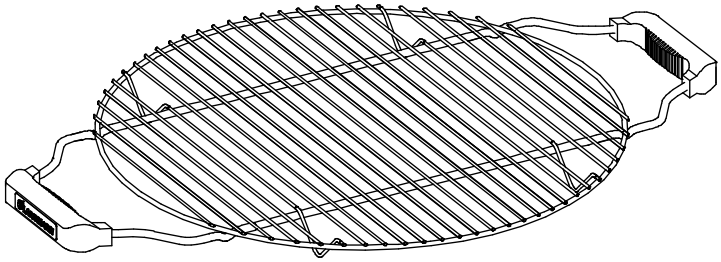

D
(1) COOKING GRATE

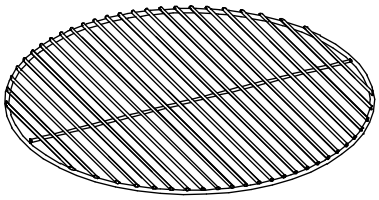

E
(1) CHARCOAL GRATE

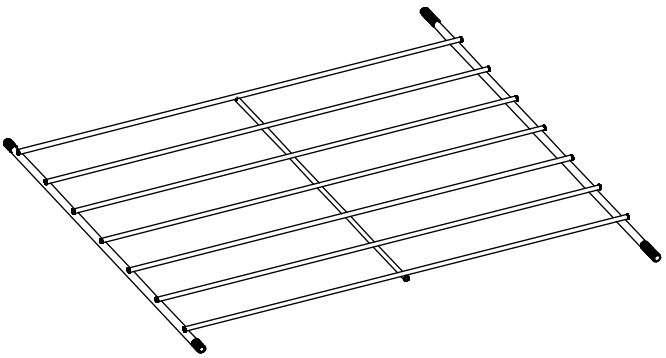

F
(1) BOTTOM SHELF

PART LISTING



G
(2) FRONT LEGS
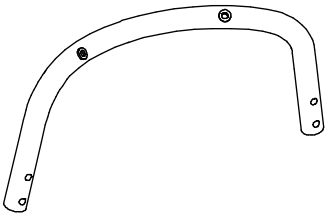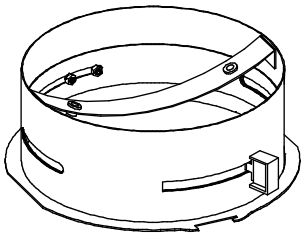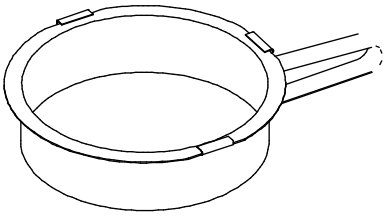
H
(2) WHEEL LEGS