LANDMANN

pizza kettle

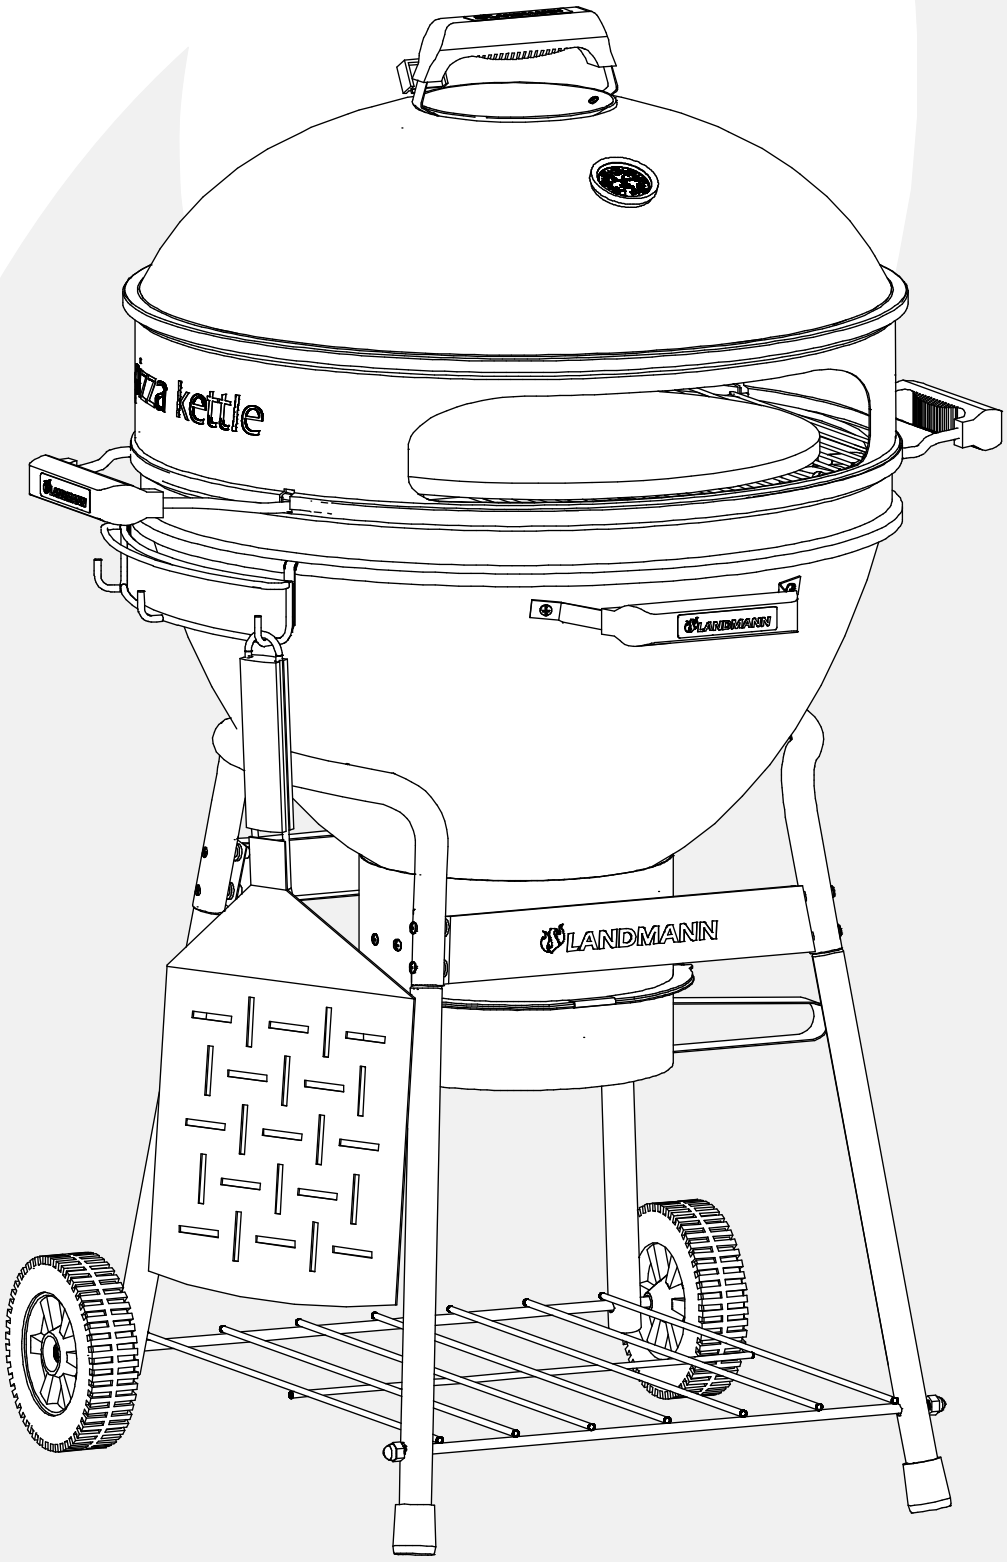


**Pizza Kettle**
**Charcoal Grill**

**Assembly and Operating Instructions for Model:**
**525105**
**525110**

**VER. 5, 7/11/2014**

**PLEASE READ ALL RULES FOR SAFE OPERATION AND FOOD SAFETY BEFORE USING.**

# READ FIRST!
# RULES FOR PIZZA KETTLE CHARCOAL GRILL SAFE OPERATION.

- **WARNING!** THE GRILL IS FOR OUTDOOR USE ONLY!
- **WARNING!** THIS GRILL GETS EXTREMELY HOT DURING USE! USE EXTREME CAUTION AROUND THE GRILL.
- **EXTREME HEAT WARNING!** DURING USE EXTREME HEAT EXITS OUT OF THE PIZZA RING OPENING! KEEP CLEAR! USE PIZZA PEEL TO PLACE AND REMOVE PIZZAS. USE GLOVES IF NECESSARY.
- **WARNING!** NEVER USE GASOLINE, ALCOHOL OR VOLATILE FLUIDS TO START OR RESTART FIRES. USE CHARCOAL LIGHTER FLUID ONLY TO START CHARCOAL. READ AND FOLLOW CHARCOAL LIGHTER FLUID MANUFACTURER INSTRUCTIONS CLOSELY.
- **WARNING!** DO NOT OPERATE GRILL WITHOUT ASH CATCHER IN PLACE, DO NOT OPEN ASH CATCHER DURING USE.
- I**MPORTANT!** LID VENT MUST BE KEPT CLOSED WHEN COOKING PIZZAS.
- DO NOT SUBJECT THE PIZZA STONE TO EXTREME TEMPERATURE CHANGES. ALLOW STONE TO COOL ON ITS OWN AND NEVER POUR WATER ON A HOT STONE.
- DO NOT USE THE PIZZA PEEL TO PICKUP THE PIZZA STONE.
- HANDLE THE STONE WITH CARE, IT WILL CHIP OR BREAK IF IT IS MISHANDLED OR DROPPED.
- TWO PERSONS ARE RECOMMENDED TO REMOVE THE COOKING GRATE FROM THE GRILL IF MORE FUEL IS NEEDED. DO NOT LEAN OVER THE GRILL. DO NOT LEAN OVER THE PIZZA RING OPENING.
- DO NOT OVERLOAD THE GRILL OR USE MORE FUEL THAN THE SUGGESTED AMOUNT.
- KEEP THE GRILL A MINIMUM OF 10 FT. AWAY FROM BUILDINGS, STRUCTURES, ANY FLAMMABLE ITEMS AND VEHICLES DURING USE.
- NEVER USE THE GRILL UNDER COVERED PORCHES, AWNINGS, LOW HANGING TREE BRANCHES, TRELLIS, OR OVERHANGS OF ANY KIND.
- NEVER USE INSIDE ENCLOSED AREAS SUCH PATIOS, GARAGES, ENCLOSED ROOMS, BUILDINGS OR TENTS.
- ALWAYS USE THE GRILL ON A HARD, STABLE AND LEVEL SURFACE.
- THE GRILL IS FOR ADULT USE ONLY.
- DO NOT STORE LIGHTER FLUID OR OTHER FLAMMABLE LIQUIDS OR MATERIALS ON THE BOTTOM SHELF.
- KEEP CHILDREN AND PETS AWAY WHILE THE GRILL IS BEING USED.
- MITTENS OR GLOVES WILL BE NEEDED TO REMOVE THE LID AS SURFACES WILL BE HOT.
- MOST SURFACES OF THIS GRILL BECOME EXTREMELY HOT, USE CAUTION.
- DO NOT MOVE THE GRILL WHILE IT IS BEING USED.
- DO NOT LEAVE UNATTENDED AT ANY TIME WHILE IN USE.
- DO NOT USE IN WINDY CONDITIONS.
- USE CAUTION WHEN OPENING THE LID AS HOT STEAM OR A FLARE UP COULD CAUSE BURNS.
- BEFORE EACH USE, MAKE SURE THE GRILL IS IN GOOD WORKING CONDITION.
- FOR LONGER PRODUCT LIFE, KEEP THE CHARCOAL AND WOOD FIRES TO A RESPECTABLE SIZE, DO NOT OVERLOAD.
- DO NOT ALTER THE GRILL IN ANY WAY.
- DO NOT USE THE GRILL UNTIL IT IS COMPLETELY ASSEMBLED WITH ALL PARTS SECURELY TIGHTENED.
- USE CAUTION AFTER THE FIRE HAS BEEN EXTINGUISHED- SURFACES WILL REMAIN HOT FOR SOME TIME.
- BE SURE ALL COALS ARE COLD BEFORE DISPOSING.
- DISPOSE OF COALS PROPERLY.
- THE GRILL MUST BE COMPLETELY COOLED OFF AND ALL EMBERS MUST BE EXTINGUISHED BEFORE ANY COVER CAN BE USED.

## ⚠ FOOD SAFETY

- RAW MEAT AND POULTRY HAS TO BE KEPT SEPARATE FROM READY TO EAT FOOD.
- USE CLEAN PLATTERS AND UTENSILS FOR HANDLING COOKED FOODS.
- COOK POULTRY AND MEATS THOROUGHLY TO KILL BACTERIA.
- USE INSTANT-READ THERMOMETER TO ENSURE PROPER INTERNAL FOOD TEMPERATURES.
- KEEP PREPARED FOOD AND LEFTOVERS REFRIGERATED.
- WASH HANDS, UTENSILS AND SURFACES WITH SOAP AND HOT WATER PRIOR TO AND AFTER HANDLING RAW MEAT AND POULTRY.

⚠ **WARNING!**

## CARBON MONOXIDE HAZARD!

BURNING WOOD OR CHARCOAL PRODUCES CARBON MONOXIDE, WHICH HAS NO ODOR AND CAN CAUSE DEATH IF BURNED IN ENCLOSED AREAS. NEVER BURN WOOD OR CHARCOAL INSIDE HOMES, VEHICLES, TENTS OR ANY OTHER ENCLOSED AREAS.

LANDMANN
pizza kettle

# HARDWARE AND SMALL PART LISTING


x 8

AA
(8) M6 x 35MM BOLT


x 8

BB
(8) M6 x 15MM BOLT


x 1

CC
(1) M6 x 12MM BOLT


x 6

DD
(6) M5 x 10MM BOLT


x 2

EE
(2) M4 x 12MM BOLT

x 2

GG
(2) M4 HEXNUT

x 6

HH
(6) M5 HEXNUT

x 3

JJ
(3) M6 HEXNUT


x 2

KK
(2) M8 LOCKING HEXNUT

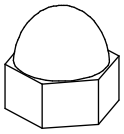
x 2

LL
(2) M8 CAPNUT


x 2

MM
(2) 16MM BLACK WASHER

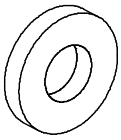
x 2

NN
(2) 16MM WASHER

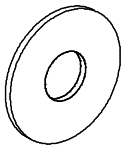
x 8

PP
(8) 18MM BLACK WASHER

x 5

RR
(5) 12MM BLACK WASHER

x 2

SS
(2) 9MM BLACK WASHER

x 1

TT
(1) LOCK WASHER

x 2

UU
(2) LOCK WASHER

# PART LISTING

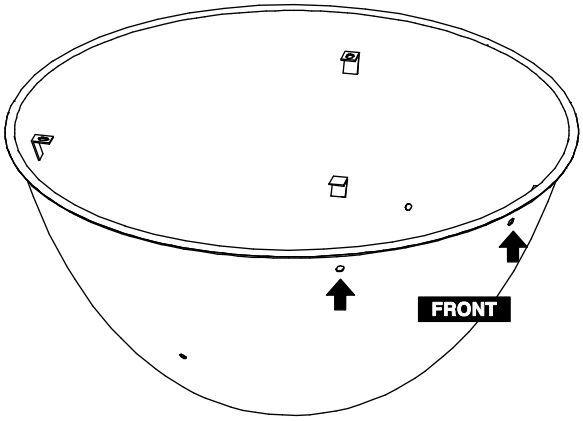


**A**
**(1) FIREBOWL**

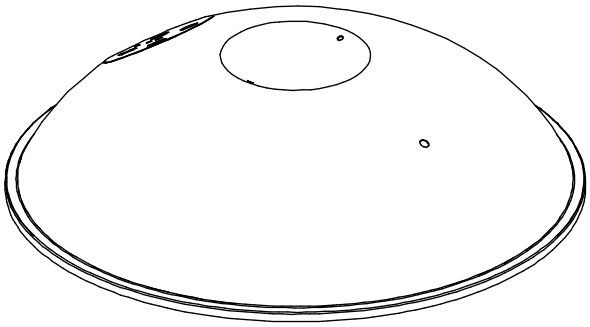

**B**
**(1) LID**

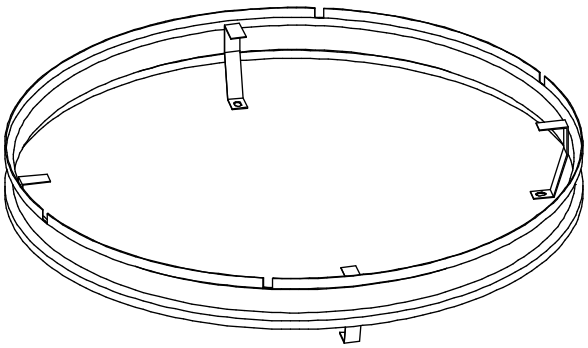

**C**
**(1) LOCKING RING**

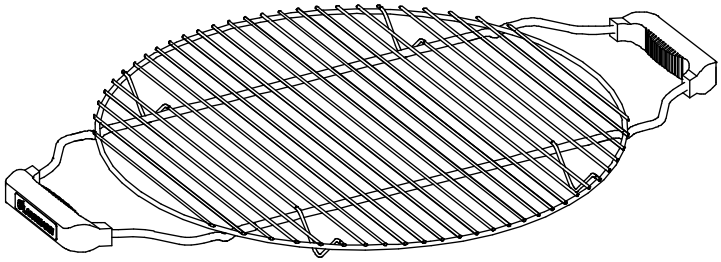

**D**
**(1) COOKING GRATE**

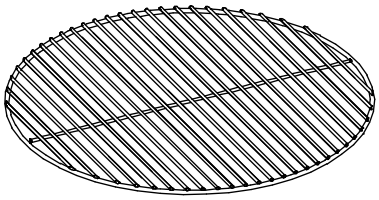

**E**
**(1) CHARCOAL GRATE**

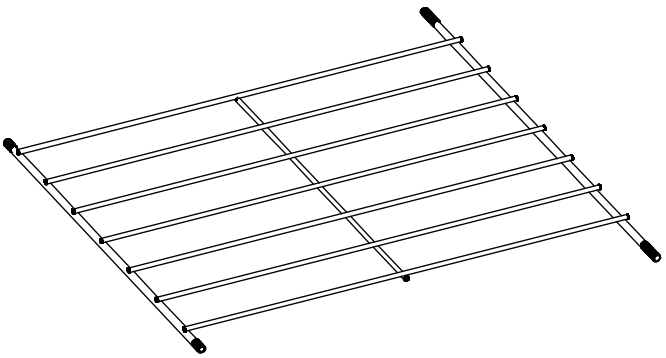

**F**
**(1) BOTTOM SHELF**

# PART LISTING

x 2

**G**
**(2) FRONT LEGS**

x 2

**H**
**(2) WHEEL LEGS**

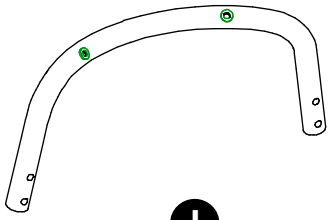

x 2

**J**
**(2) TOP LEGS**

x 2

**K**
**(2) LEG BRACES**

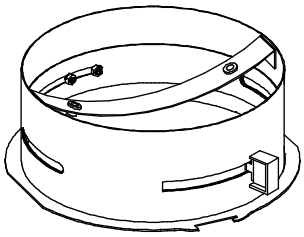

**L**
**(1) ASH CATCHER HOUSING AND VENT**

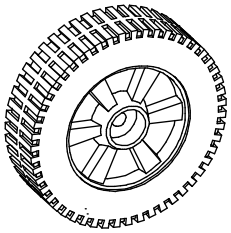

x 2

**N**
**(2) WHEELS**

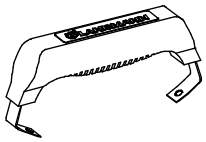

**P**
**(1) LID HANDLE**

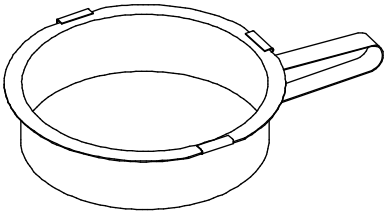

**M**
**(1) ASH CATCHER**



**Q**
**(1) LID HANDLE HEAT SHIELD**

# PART LISTING

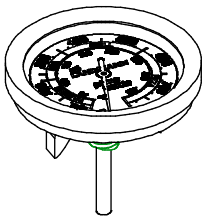

**R**
**(1) TEMPERATURE GAUGE WITH WINGNUT**



**S**
**(1) LID HANGER**

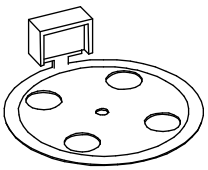

**T**
**(1) LID VENT**

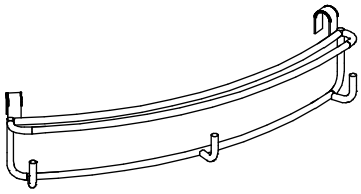

**U**
**(1) TOOL HOOK**

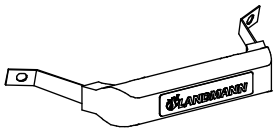

**V**
**(1) FIREBOWL HANDLE**

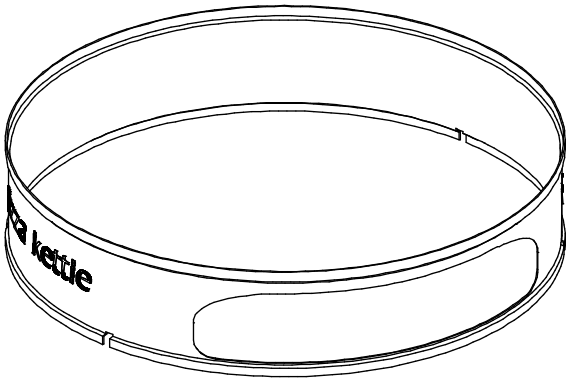

**P1**
**(1) PIZZA RING**

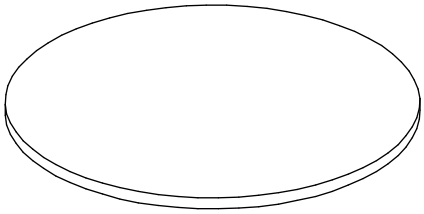

**P2**
**(1) PIZZA STONE**

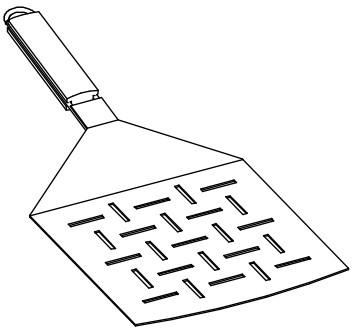

**P3**
**(1) PIZZA PEEL**

# EXPLODED VIEW

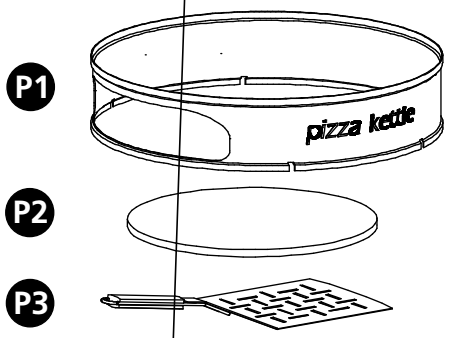


**PARTS USED TO MAKE PIZZA**

WHEN NOT MAKING PIZZA, THESE PARTS ARE NOT USED AND THE GRILL OPERATES AS A CHARCOAL GRILL

| PIZZA KETTLE PARTS | | QTY |
|---|---|---|
| A. | FIREBOWL | 1 |
| B. | LID | 1 |
| C. | LOCKING RING | 1 |
| D. | COOKING GRATE | 1 |
| E. | CHARCOAL GRATE | 1 |
| F. | BOTTOM SHELF | 1 |
| G. | FRONT LEG | 2 |
| H. | WHEEL LEG | 2 |
| J. | TOP LEG | 2 |
| K. | LEG BRACE | 2 |
| L. | ASH CATCHER HOUSING / VENT | 1 |
| M. | ASH CATCHER | 1 |
| N. | WHEEL | 2 |
| P. | LID HANDLE | 1 |
| Q. | LID HANDLE HEAT SHIELD | 1 |
| R. | TEMPERATURE GAUGE | 1 |
| S. | LID HANGER | 1 |
| T. | LID VENT | 1 |
| U. | TOOL HOOK | 1 |
| V. | FIREBOWL HANDLE | 1 |
| P1. | PIZZA RING | 1 |
| P2. | PIZZA STONE | 1 |
| P3. | PIZZA PEEL | 1 |

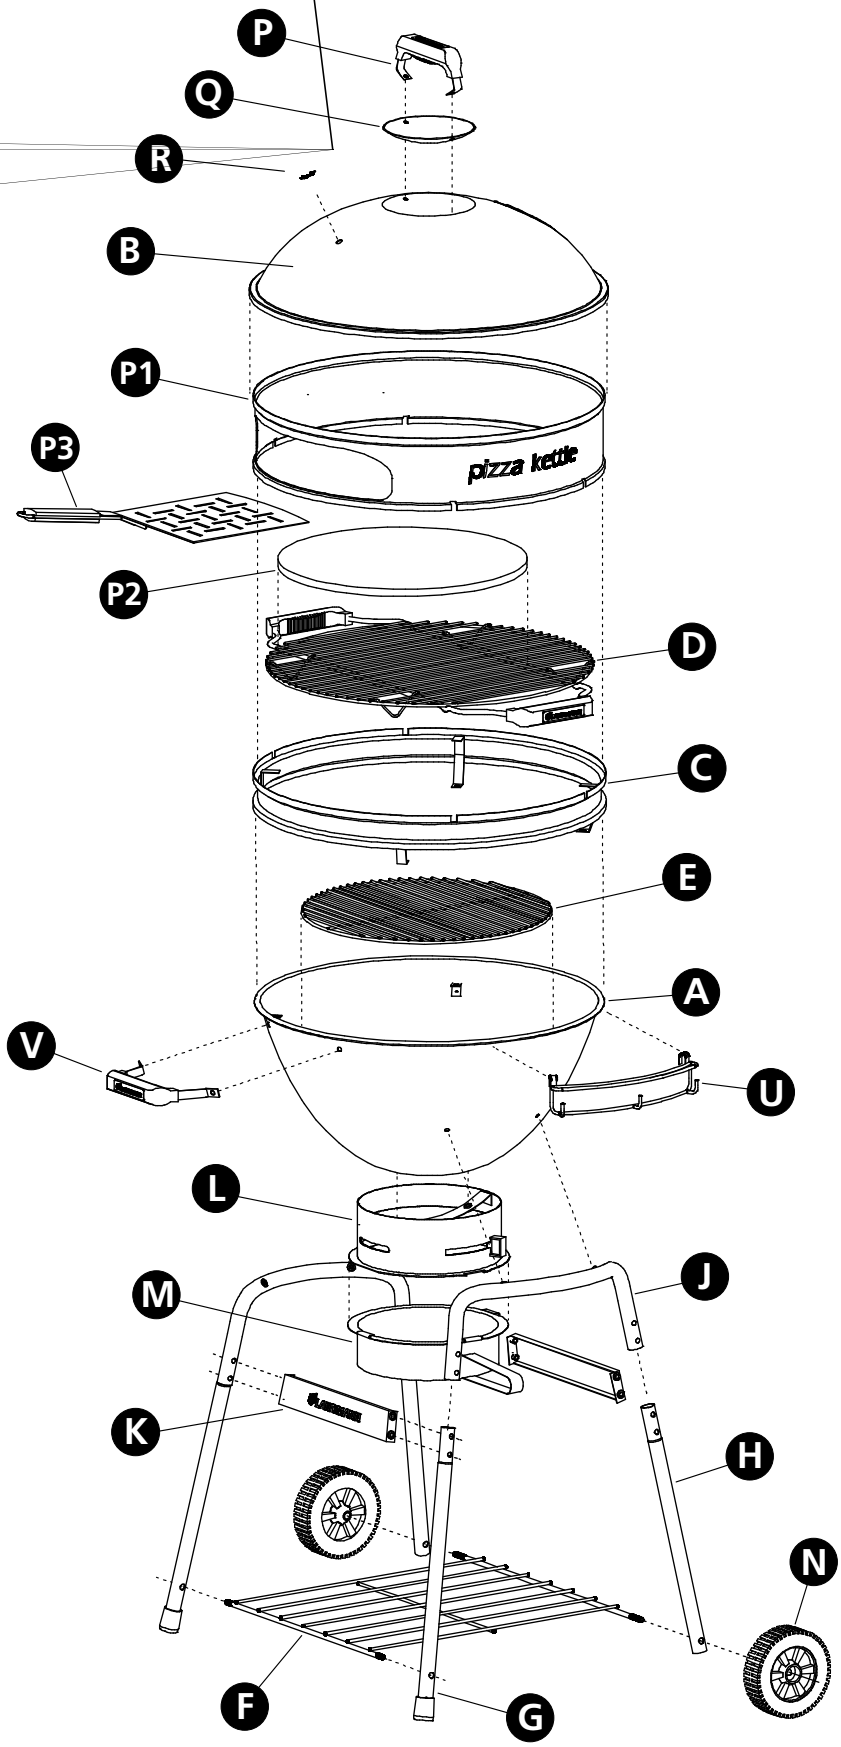

LANDMANN
pizza kettle

# LIMITED WARRANTY

Landmann USA ("Landmann") warrants that this product shall be free of defects in material and workmanship to the original purchaser for 90 days. This limited warranty is made exclusively to the original customer presenting proof of purchase. This warranty is limited to non-commercial residential use only. Any returned goods must be shipped prepaid. The ash catcher is specifically excluded from this warranty, as cleaning and maintaining is vital to its life, lining with aluminum foil will help prolong the use of the ash catcher over time.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligence, abuse, misuse, alteration, improper installation, improper maintenance or failure to perform normal maintenance, or any use contrary to operating instructions. Furthermore, Landmann does not warrant in any way the finish of the product or cover damage or deterioration due to any normal or severe weather conditions or to any chemical exposure. These warranties do not cover surface scratches or heat damage, which is considered to be normal wear. These warranties exclude liability for any indirect, incidental consequential damages or loss of property of any nature.

Do not return product or any parts to the store or ship to the manufacturer without written authorization.

Contact Customer Service at: 1-877-3GRILLS (1-877-347-4557) or grills@landmann-usa.com. Any returned products or parts must be returned postage prepaid.

These warranties are limited to non-commercial residential use only.

Product repair or replacement as provided under this warranty is your exclusive remedy. Landmann shall not be liable for any incidental or consequential damages or breach of any express or implied warranty on this product or any part thereof, except to the extent prohibited by applicable law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, therefore, the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.