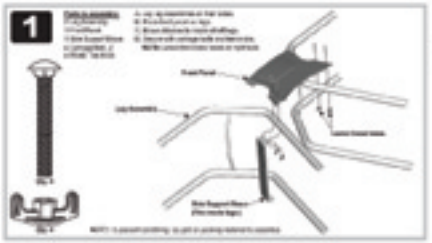

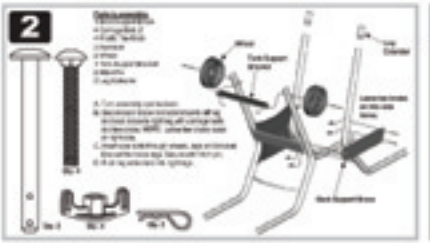

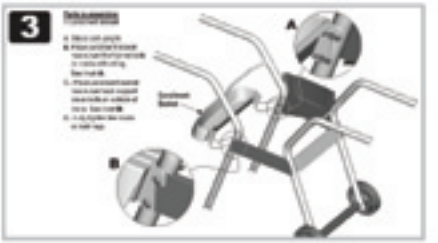

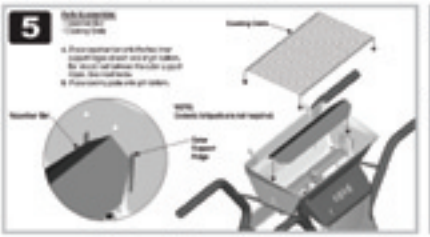

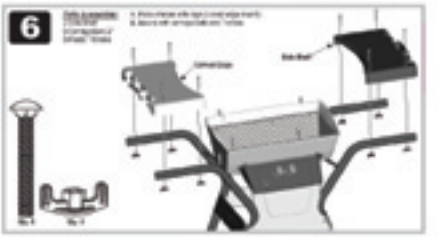

Parts List - Model #63640006

No.	Qty.	Description	Part#
A	1	Hibachi	419871
B	1	Hopper/Ash Can	419328
C	1	Cooking Grate	419218
D	1	Firebox/Body	419263
E	1	Control Panel Bracket	419877
F	2	Side Shelf	419878
G	2	Wheel	419879
H	1	Leg Plate	419749
I	1	Back Support Brace	419320
J	2	Leg Assembly	419319
K	1	Side Support Brace	419321
L	1	Tank Support Bracket	419732
M	1	Front Panel	419215
N	8	#14 x 5/8" Hex Bolt Hdg. Screw	419540
O	2	Valve Clip	419340
P	1	Control/Controls Assembly	419599
Q	1	Control Panel Assembly	419226
R	2	Control Knob	419871
S	1	Grill Gallows	419510
T	1	Grill Lid	419518
U	1	Tank Retainer Arm	419319
V	1	Screw Clip	419512
W	2	Axel Bolts	419719
X	2	Leg Extension	419597
	1	Hardware bag, Cart	419619
	2	Hardware bag, Wheels	419474

Optional Assembly Hardware:
We assist sales customers perform purchase. Optional free mail if we have ground floor any to use

NO TOOLS REQUIRED

Register your grill online at WWW.GRILLREGISTRATION.COM

STOP

If you have any problems with this product,
call 1-800-241-7548
Open 8:00 A. M. To 6:00 P. M. EST
Monday - Friday
Before returning this product to the store, We can help with damaged or missing parts, assembly and operation questions.

QUICKSET®

#63640006
ASSEMBLY MANUAL

THIS GRILL IS FOR OUTDOOR USE ONLY

⚠ WARNING

⚠ CAUTION
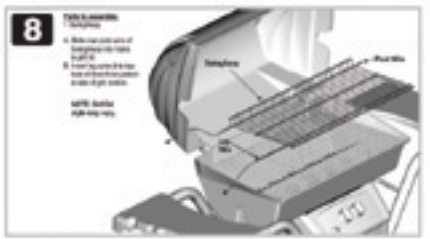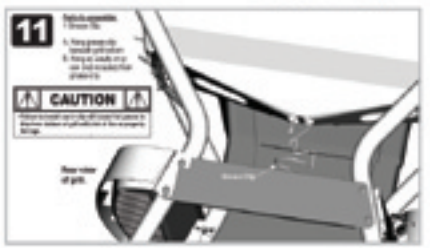
Char-Broil