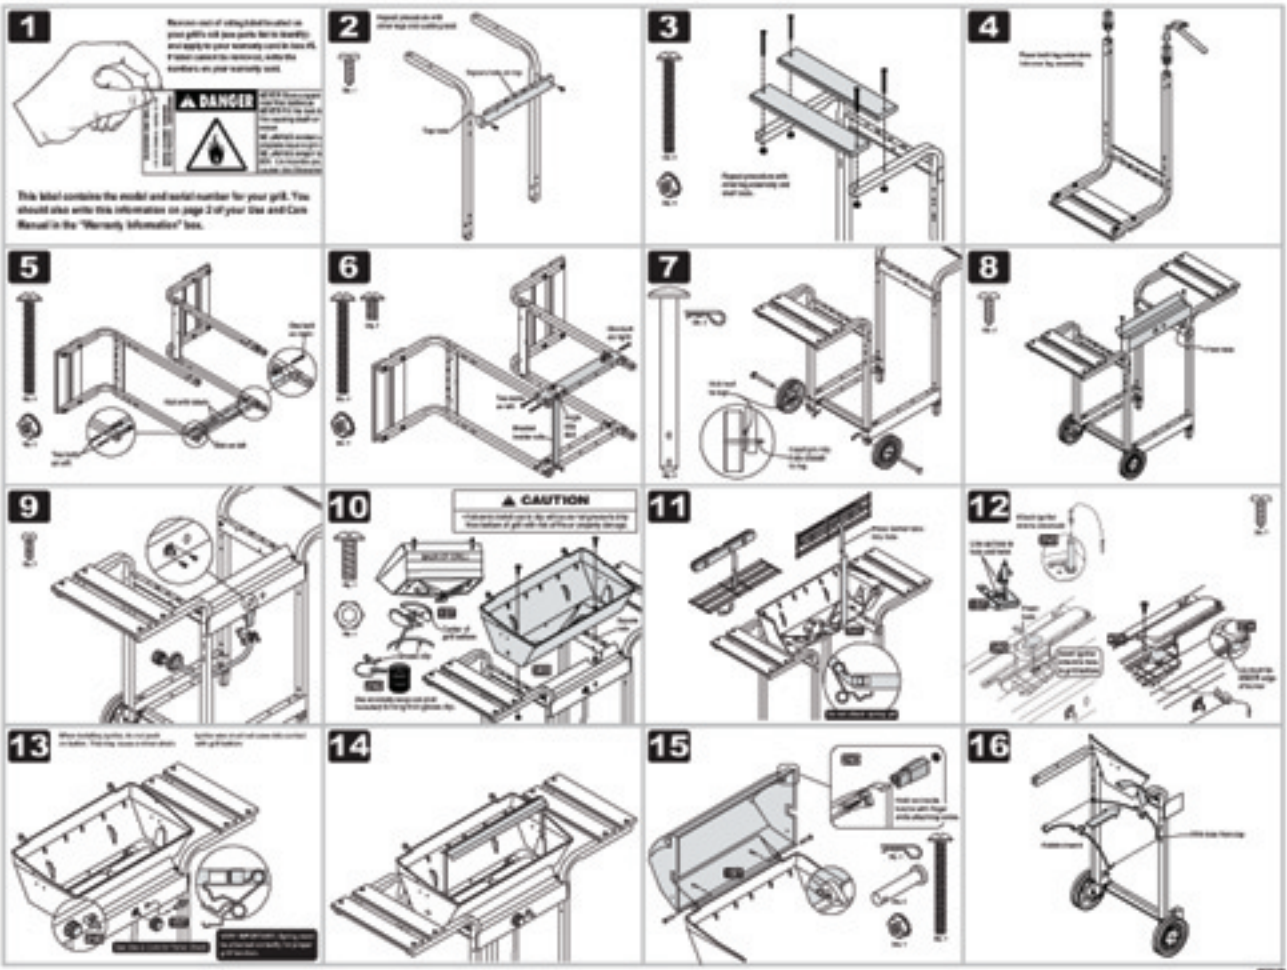

Parts List – Model 4639120

Ref.	Qty.	Description	Part #
A	1	Shelf Set	426237
B	1	Cooking Grate	416246
C	—	Briquette (Total)	416128
D	1	Drip Tray/ASSY Set	416316
E	1	Briquet Grate	426195
F	1	Burner Assembly	426304
G	1	Valve/Hose/Regulator	426306
H	1	Tank Wire	426199
I	2	Wheel	416636
J	1	LP Gas Tank	416615
K	2	Rail	426238
L	1	Tank Support Bracket	426237
M	2	Cooking Grid	426240
N	4	Leg	426236
O	1	Control Panel	426302
P	1	Grill Lid	426116
Q	1	Grill Bottom	426180
R	1	Handle	426228
S	1	Control Knob	426624
T	1	Grease Clip	416647
U	1	Ignition Peg	426156
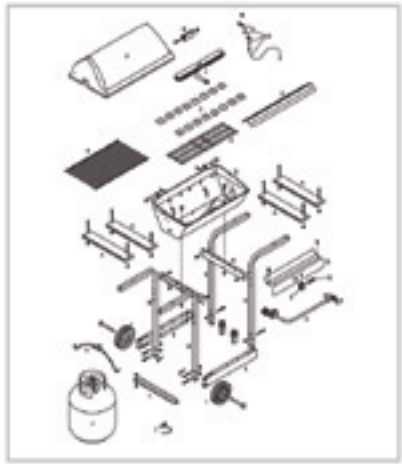
Ref.	Qty.	Description	Part #
1		Hardware Bag - Leg Extension	426313
1		Hardware Bag - Cart	426246
1		Hardware Bag - Shelves	426248
1		Hardware Bag - Left Handle	426249