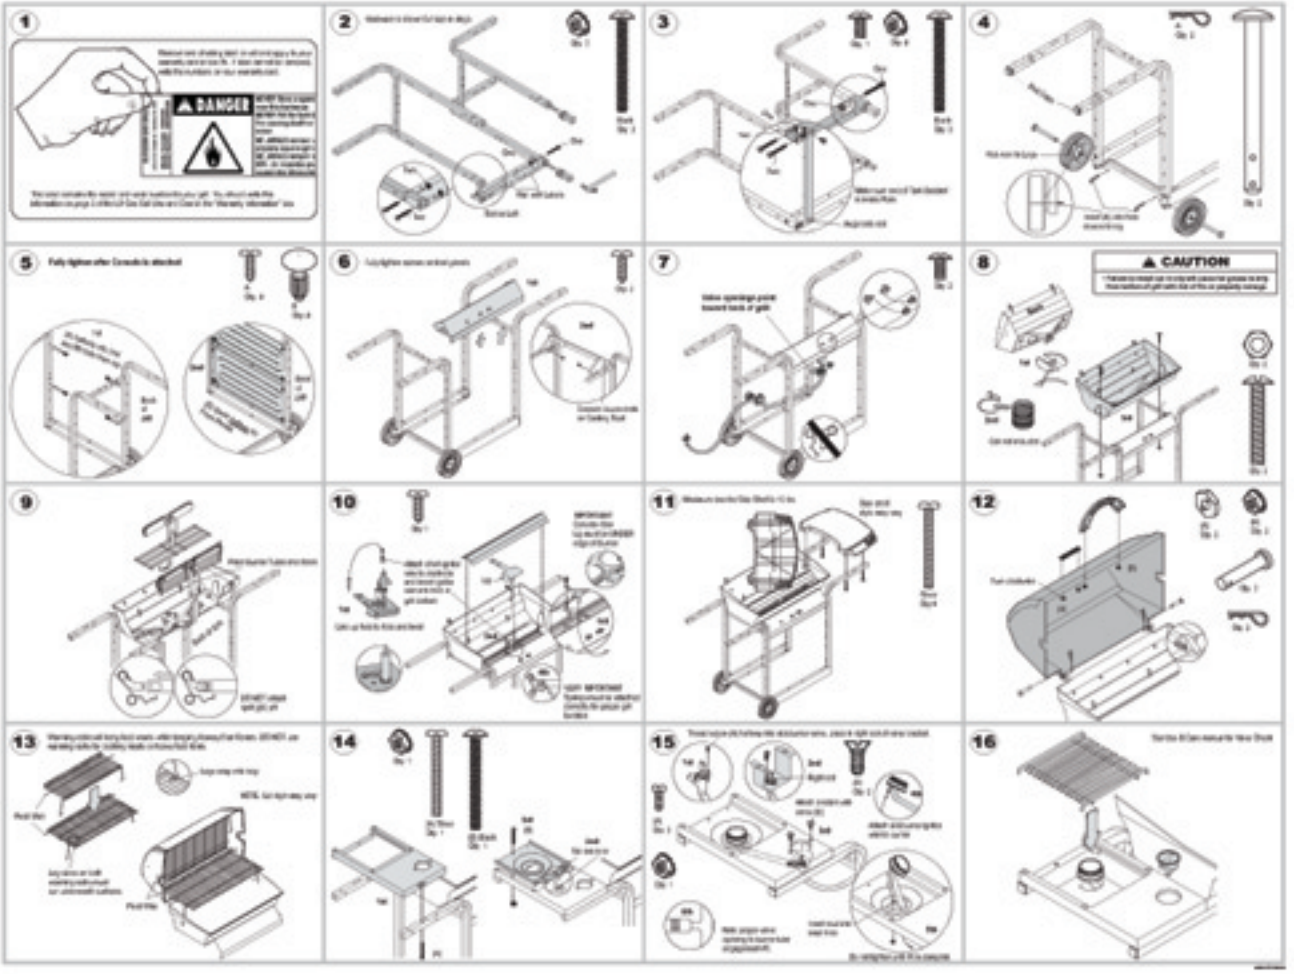

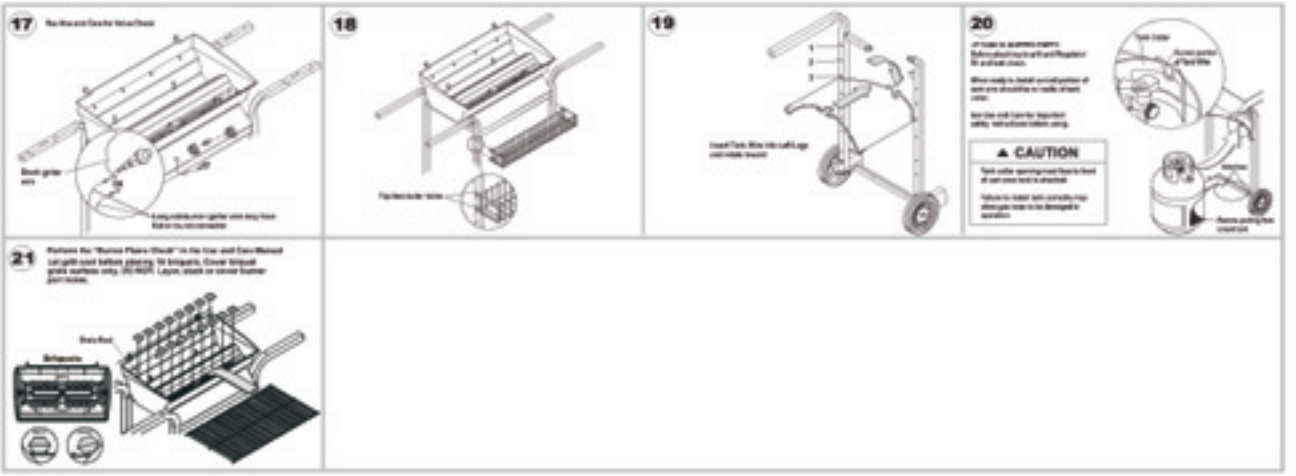

Parts List - Model 4637202

Key	No.	Description	Kit#
A	1	Lower Warming Rack	4102134
B	1	Cooking Grate	4102135
C	1	Main Burner	4104016
D	1	Handle	4104600
E	1	Condiment Basket	4106011
F	1	Upper Warming Grate	4104900
G	2	Foot/Wheel	4601040
H	1	Tank Strap	4106100
I	2	Wheel	4106000
J	1	LP Gas Tank	4105010
K	1	Tank Support Bracket	4602100
L	2	Rail	4602211
M	2	Leg Assembly	4602204
N	1	Side burner Knob	4106010
O	1	Grey Ingot Rib Side Shelf	4106011
P	1	Main Burner	4101101
Q	---	Manifold Assy	4105120
R	1	Side burner Valve Bracket	4601100
S	1	Side burner Frame	4601102
T	1	Burner Assembly	4601000
U	1	Ignition and Regulator	4106100
V	1	Side burner	5000011

Key	No.	Description	Kit#
W	1	Console	4600006
X	1	Side burner Knob	4600008
Y	1	Tank nut	4601000
Z	1	Cart Bottom	4601100
AA	1	Logo Plate	4101101
AB	1	Ignition assy	4601111
CC	1	Grease Cup	4106001
DD	2	Caster Wheel	4106200
EE	1	Side burner Knob	4106200
	1	Hardware Bag - Plastic Parts	4601100
	1	Hardware Bag - Cart	4600011
	1	Hardware Bag - Lid/Handle	4600060
	1	Hardware Bag - Screws	4600070

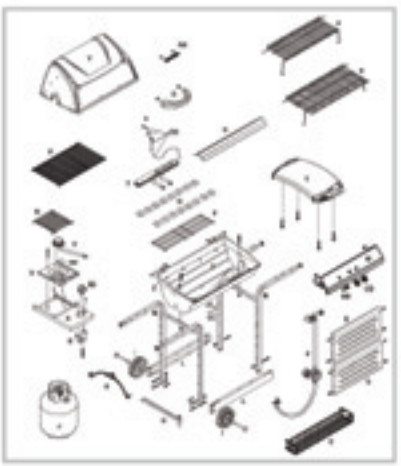

RANGE MASTER

TRADITIONAL

THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions and use and care directions before assembling or assembling and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

WARNING

Failure to follow all manufacturer's instructions could result in serious personal injury, and/or property damage.

CAUTION

Some parts may contain sharp edges – especially as noted in this manual. Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call 1-800-621-7548.

4637202

ASSEMBLY MANUAL