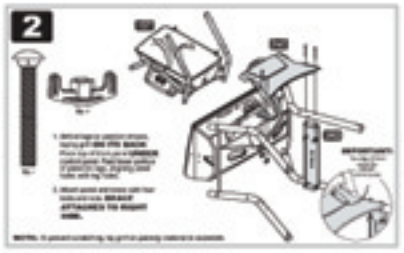

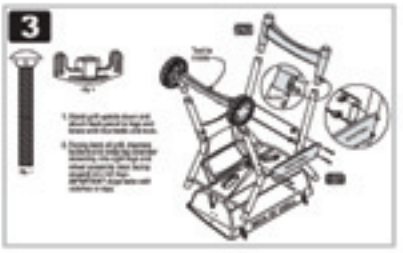

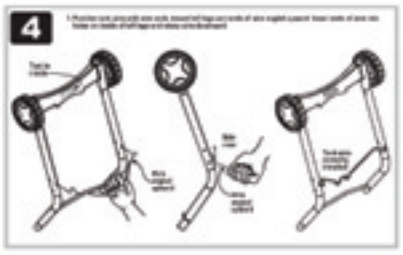

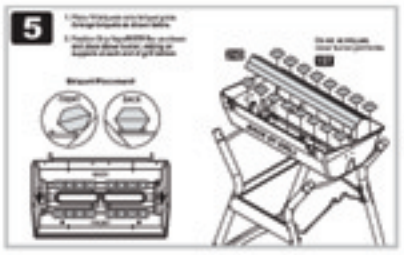

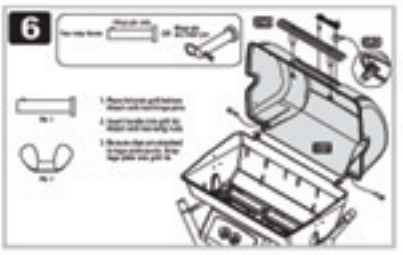

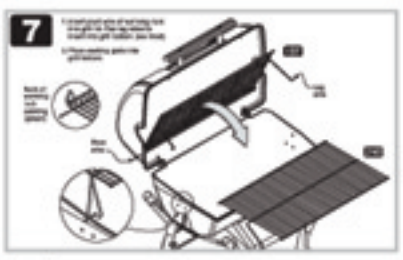

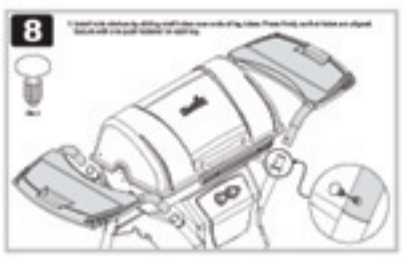

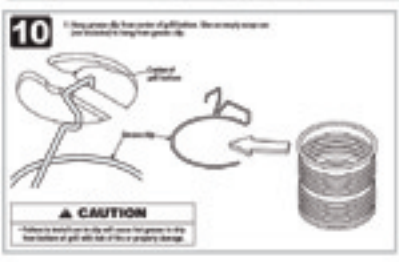

Parts List - Model 4637240

No.	Qty.	Description	Part #
A	1	Handle Assembly	4653063
B	1	Warming Rack	11121-W
C	1	Cooking Grate	11427-W
D	1	Leg Extension Assembly	11144-W
E	1	Side Table	11147-W
F	1	Drip Tray/LG Grill Box	11184-T
G	1	Offset Assembly	11189-W
H	—	Grill Lid (1 Only)	11197-W
I	1	Brace	4653-17
J	1	Panel Panel	4653-18
K	6	#10x1/2", T-20, Self-Tap Screw	4653-W
L	2	Valve Clip	11191-W
M	1	Grill Lid Stock	11177-W
N	2	Cooking Grid Bracket	11193-W
O	2	Leg Assembly	4653-19
P	1	Burner Cover Kit Assembly	4653-W
Q	1	Control Panel Assembly	4653-W
R	2	Control Knob	11144-W
S	1	Grill Bottom	4653-W
T	1	Back Panel	4653-W
U	4	#10x1-1/4" Self-Tap Screw	4653-W
V	2	Side Shelf	11145-W
W	4	Shelf Pole	4653-W
X	1	Shelf Lid	4653-W
Y	1	Legs/Table Assembly	11147-W
Z	1	Grease Clip	11189-W
	1	Hardware Bag	4653-W
Replacement Ignition Module Bag			4653-W