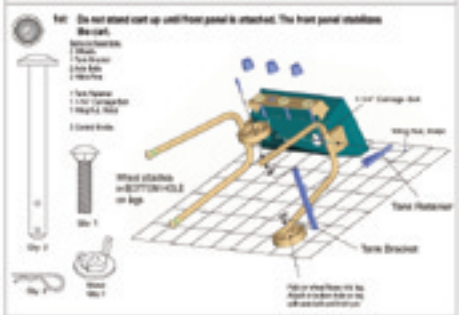

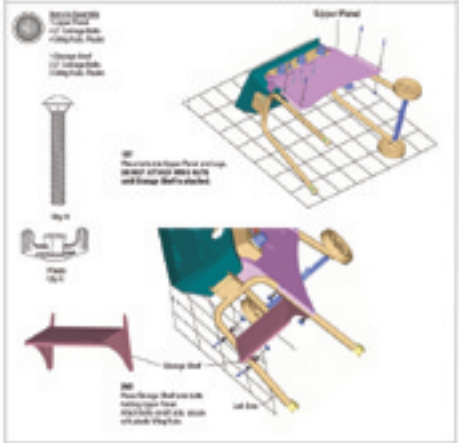

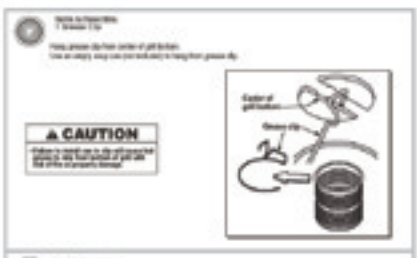

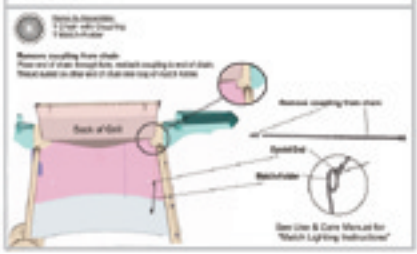

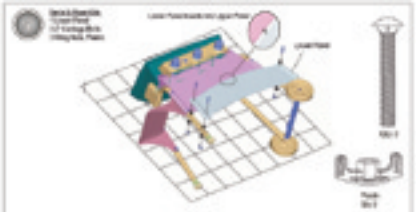

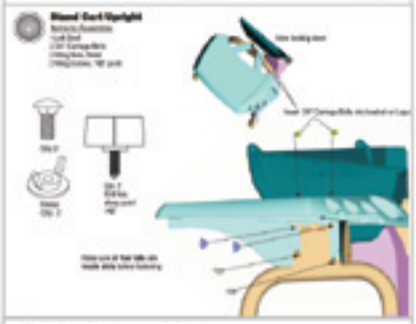

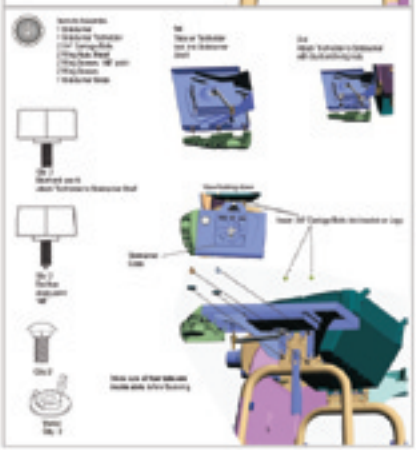

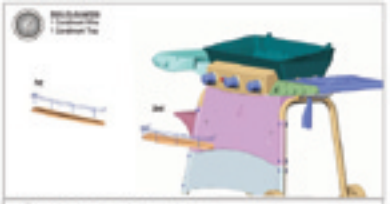

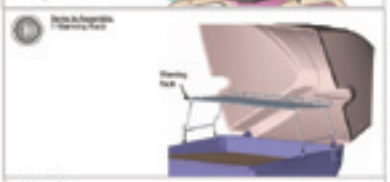

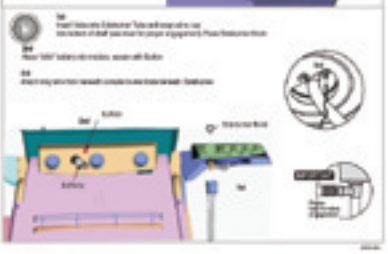

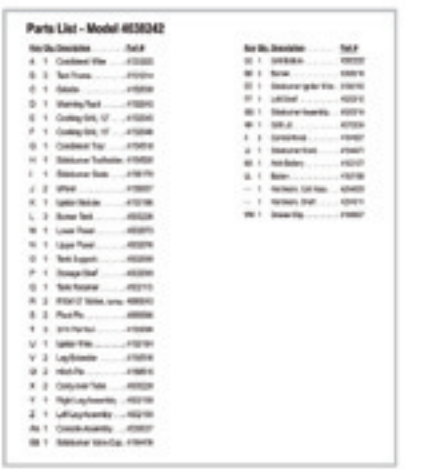

Parts List - Model 4638242

Key No.	Qty.	Description	Part #
A	1	Cookbook/ Wire	4153000
B	2	Tank Straps	4151014
C	1	Rotisserie	4150000
D	1	Warming Rack	4150010
E	1	Cooking Grid, 12"	4150040
F	1	Cooking Grid, 15"	4150046
G	1	Cookbook Tray	4154010
H	1	Rotisserie Toolholder	4154020
I	1	Rotisserie Base	4156170
J	2	Wheel	4156007
K	1	Igniter Module	4152196
L	3	Burner Tube	4153226
M	1	Lower Panel	4153070
N	1	Upper Panel	4153076
O	1	Tank Support	4153000
P	1	Storage Shelf	4153090
Q	1	Tank Retainer	4153110
R	2	RIGHT 12" Kitchen, screw	4060010
S	2	Panel Pin	4060006
T	1	3/16 Flat Nut	4154006
U	1	Igniter Wire	4152190
V	2	Leg Extender	4153016
W	2	Hitch Pin	4156016
X	2	Carry-over Table	4153220
Y	1	Right Leg Assembly	4152150
Z	1	Left Leg Assembly	4152160
AA	1	Console Assembly	4153037
BB	1	Rotisserie Motor Cap	4154078

Key No.	Qty.	Description	Part #
CC	1	Grill Motor	4150220
DD	1	Burner	4060016
EE	1	Rotisserie Igniter Wire	4154190
FF	1	Left Shelf	4153210
GG	1	Rotisserie Assembly	4153210
HH	1	Grill - 4	4153224
II	3	Control Knob	4154007
JJ	1	Rotisserie Hook	4154001
KK	1	Hook Battery	4153217
LL	1	Motor	4153156
—	1	Hardware, Cart Assy.	4154005
—	1	Hardware, Shelf	4154011
WW	1	Smoker Grid	4150007

NO TOOLS REQUIRED

The Big Easy
THE GRILL THAT COOKS
BREAKFAST LUNCH AND DINNER

The Big Easy
4638242
ASSEMBLY MANUAL

THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and use.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

⚠ WARNING
Failure to follow all Important Safety Instructions could result in serious personal injury and/or property damage.

⚠ CAUTION
Some parts may contain sharp edges – especially as noted in the manual! Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call 1-888-881-7346.

Visit us on the web at www.bigeasy.com

Char-Broil