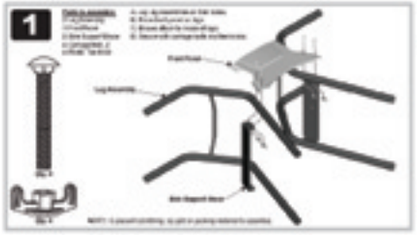

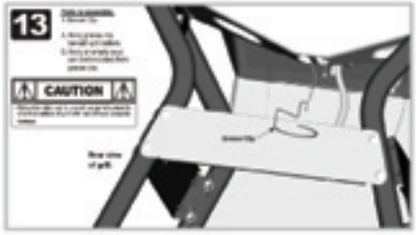

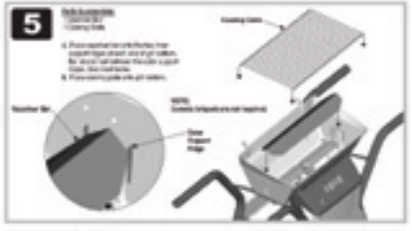

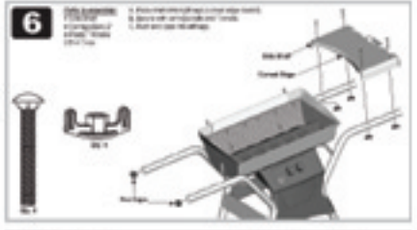

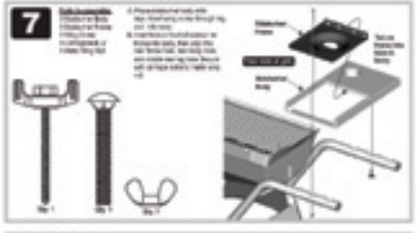

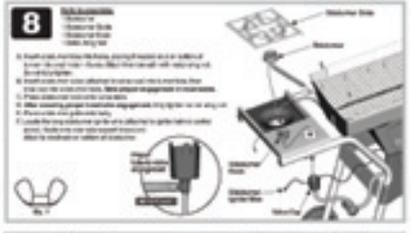

Parts List - Model #G263020S

Ite	No.	Description	Part#	Ite	No.	Description	Part#
A	1	Warmer	419899	W	1	Rotisserie Motor	419895
B	1	Ignition Box	419.638	X	1	Leg Plate	419748
C	1	Cooking Grate	419738	Y	1	Rotisserie	604524
D	1	Warming Rack	419855	Z	1	Control Clip	419307
E	1	Side Shelf	419815		1	Hardware Bag, Cart	419419
F	1	Rotisserie Grate	419.615		1	Hardware Bag, Shelf	420829
G	2	Wheel	419859		1	Hardware Bag, Rotisserie	424.636
H	1	Back Support Brace	402821				
I	1	Rotisserie Frame	402833				
J	1	Tank Support Bracket	402839				
K	1	Front Panel	402719				
L	2	Side Support Brace	402873				
M	2	Leg Assembly	402871				
N	1	Rotisserie Motor	421808				
O	4	#10-32 1-1/2 Bolt Flat Washer	428540				
P	2	Valve Clip	419.640				
Q	1	Control Extension Assembly	402838				
R	1	Control Panel Assembly	402835				
S	2	Control Knob	419861				
T	1	Grill Shelf Lip	419832				
U	1	Grill Lid	419.619				
V	1	Tank Retainer Wire	419.618				

Optional Assembly Hardware
Not always made available in parts kit, purchased separately, as needed. Optional Hardware subject to stock availability at time of order.

THERMOS.
GRILLS FOR GREAT LIVING

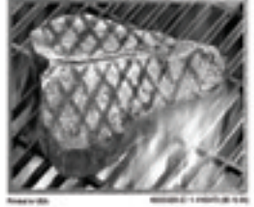

QUICKSET®

#G263020S
ASSEMBLY MANUAL

THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and use.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

⚠ WARNING
Failure to follow all instructions could result in a fire or explosion causing property damage, serious personal injury, and/or property damage.

⚠ CAUTION
Some parts may contain sharp edges, especially as a result of assembly. Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call 1-888-267-7344

THERMOS.